

MODBUS I/O Modules



Modbus Manual DMB Series

Before Startup



When operating the signal converter, certain parts of the module can carry dangerous voltage! Ignoring the warnings can lead to serious injury and/or cause damage!

The signal converter should only be installed and put into operation by qualified staff. The staff must have studied the warnings in these operating instructions thoroughly.

The signal converter may not be put into operation if the housing is open.

In applications with high operating voltages sufficient distance and isolation as well as shock protection must be ensured.

Safe and trouble-free operation of this device can only be guaranteed if transport, storage and installation are carried out correctly and operation and maintenance are carried out with care.



Appropriate safety measures against electrostatic discharge (ESD) should be taken during range selection and assembly on the transmitter!

Ultra-compact Modbus RTU I/O Modules



- Freely scalable up to 247 units in one Modbus segment
- Extremely slim, only 6.2 mm installation width
- Easy configurable via DIP switches or USB interface
- Highest accuracy and temperature stability
- Protective galvanic separation between all circuits, test voltage 3 kV AC
- In-Rail-Bus Connector for Power and Modbus
- Protection against overvoltage, polarity error and short circuit at all terminals
- Long service life, extremely low failure rate due to reduced selfheating
- Made in Germany, 5 Years Warranty

The DRAGO Modbus RTU I/O Modules combine complex field and control requirements such as protective galvanic isolation, maximum signal integrity and highest reliability with fast measurement data conversion and field bus provision.

Up to 4 fully isolated I/Os are available in the 6.2 mm slim modules. The configuration can be made via DIP switch or USB interface. In addition to standard signals, mA, V, mV, R, Pot, Hz, PWM and all current industrial sensors can be processed.

Power supply and bus connections are pre-wired on standard DIN rail by the In-Rail-Bus. All terminals are protected against short circuit, overvoltage and polarity reversal. The protective galvanic isolation with 3 kV test voltage permits working voltages up to 300 V. A low bus load allows up to 247 modules (988 I/Os) in one Modbus segment.

The low-power design ensures minimum self-heating for a wide temperature range. The high separation quality and short response time guarantee an economic integration in new plants and retrofit projects.

General Data

| | | |
|---------------------|--|---|
| Protocol | Modbus RTU | |
| Configuration | Parity: Even, Odd, None | Response Delay: 1 ... 1000 ms |
| Baud Rate | 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 | |
| Connectivity | Up to 247 DRAGO Modbus Devices (1/8 Load) | |
| Test voltage | 3 kV AC, 50 Hz, 1 min., I/Os against Modbus/Power | |
| Ambient temperature | Operation: -25 °C to +70 °C | Transport and storage: -40 °C to +85 °C |
| Power supply | 24 V DC, voltage range 16.8 V ... 31.2 V DC | |
| Construction | 99 x 107 x 6.2 mm (H x T x B), protection class IP 20 mounting on 35 mm DIN rail acc. to EN 60715 | |

DRAGO Modbus I/O Modules

DMB 96500 Universal AI Module



- High performance measuring input for all industrial sensors
- Uni-/Bipolar and TRMS capture of current and voltage
- Easy configurable by DIP switch or USB interface
- 15 User Settings, directly selectable via DIP switches
- Highest accuracy, measuring resolution up to 24 bit
- Fast measured value processing, high data rate

Input

Pt, Ni, TC, KTY, R, Pot, mV,
V, mA AC/DC, Frequency,
PWM

Additional functions

16 V Transmitter Supply,
TRMS, NAMUR

DMB 96100 Standard Signal AI Module



- Precise capture of industrial standard signals
- Excellent EMC performance and noise suppression
- Supply of 2/3-wire transmitters
- Easy configuration, fast commissioning
- Maximum reliability and durability

Input

0/4 ... 20 mA
0/2 ... 10 V
0/1 ... 5 V

Additional functions

16 V Transmitter Supply

DMB 96200 4 Channel AI Module



- Measuring and processing of 4 industrial standard signals
- Each channel programmable as current or voltage input
- All inputs individually safely galvanically isolated
- Fast signal acquisition, short processing times
- Extremely low costs per input channel

Input

0/4 ... 20 mA
0/2 ... 10 V

Additional functions

4 DI
4 DO

DMB 96400 4 Channel 2 AI / 2 AO Module



- Measuring and processing of 4 industrial standard signals
- Each channel programmable as current or voltage input
- All inputs individually safely galvanically isolated
- Fast signal acquisition, short processing times
- Extremely low costs per input channel

Input / Output

0/4 ... 20 mA
0/2 ... 10 V

Additional functions

2 DI
4 DO

DMB 96700 4 Channel DI/DO Module



- 4 independent controllable digital I/O channels
- Each channel programmable as input or output
- Extensive programmable operating functions
- Universal Open-Collector output
- Status indication for each I/O channel

Input / Output

DI: 5 V / 12 V / 24 V

DO: Open-Collector

Additional functions

Frequency, Counter, Pulse,
PWM, Limit monitoring

DMB 96800 4 Channel Relay Module



- 4 independent power relays, make or break contact
- Programmable switch-ON and switch-OFF behavior
- Extensive programmable operating functions
- Monitoring functions for operating conditions
- Status indication for each relay

Contact

AC: 250 V / 2 A

DC: 30 V / 2A

Additional functions

ON / OFF delay, Wiper
contact. Power monitoring

DMB 96000 Modbus RTU Connection Module



- switchable Modbus termination network
- activity monitor LED

→ more at Accessories

1 Introduction

With the DMB series Drago Automation offers different analog and digital input options. The Modbus interface with RTU protocol on the RS485 physical layer enables robust communication in rough industrial environment. Because of their 1/8 unit load transceivers it is possible to connect 247 Drago DMB series devices as Modbus slaves with one master without the need for repeater.

This manual is mainly intended to deliver devices specific information about the DMB series. Although it covers some basics about the Modbus protocol and the RS485 standard we recommend reading the referring Modbus Protocol Specifications [1] and the Modbus Serial Line Protocol and Implementation Guide [2] which can be found here:

<http://www.modbus.org/specs.php>.

2 Modbus RTU over RS485

2.1 Modbus RTU Protocol

The DMB devices implement the Modbus RTU Protocol. The Modbus protocol is a single master protocol. Therefore a slave only sends answer messages to former requests of the Modbus master device. The Modbus RTU standard [1] defines a binary communication inside the Modbus Frame. A Modbus RTU message frame consists of the following parts:

| | | | |
|-------------------------|-------------------------|------------------------|---------------|
| Address Field 1 Byte | Function Code 1 Byte | Data 0 ... 252 Byte | CRC 2 Byte |
|-------------------------|-------------------------|------------------------|---------------|


The 4 fields have the following meaning:

1. Address Field: States the address of the slave that is addressed in the actual communication. The master itself has no address. The address "0" is reserved for broadcast communication. The addresses 248 to 255 are actually restricted by the Modbus standard.
2. Function Code: A 1 Byte field that contains the command the slave has to process. The function codes are standardized for all Modbus devices. The DMB devices implement only a limited subset of function codes, depending on the devices.
3. Data: This field contents the information referring to the function code (e.g. the address of a requested register). The data needed for each function code can be found in [1].
4. CRC: The last field contains the two bytes of the CRC used to verify the data frame.

A start or an end of a Modbus RTU frame is indicated by a 3.5 Byte long pause which means that no devices on the network sends data.

2.2 RS485 Network for Modbus

The very common form of a Modbus network based on 2-wire RS485 is described detailed in [2]. The RS485 is defined in the EIA-485 (meanwhile TIA-485) standard [3]. Below the only basic structure is described:

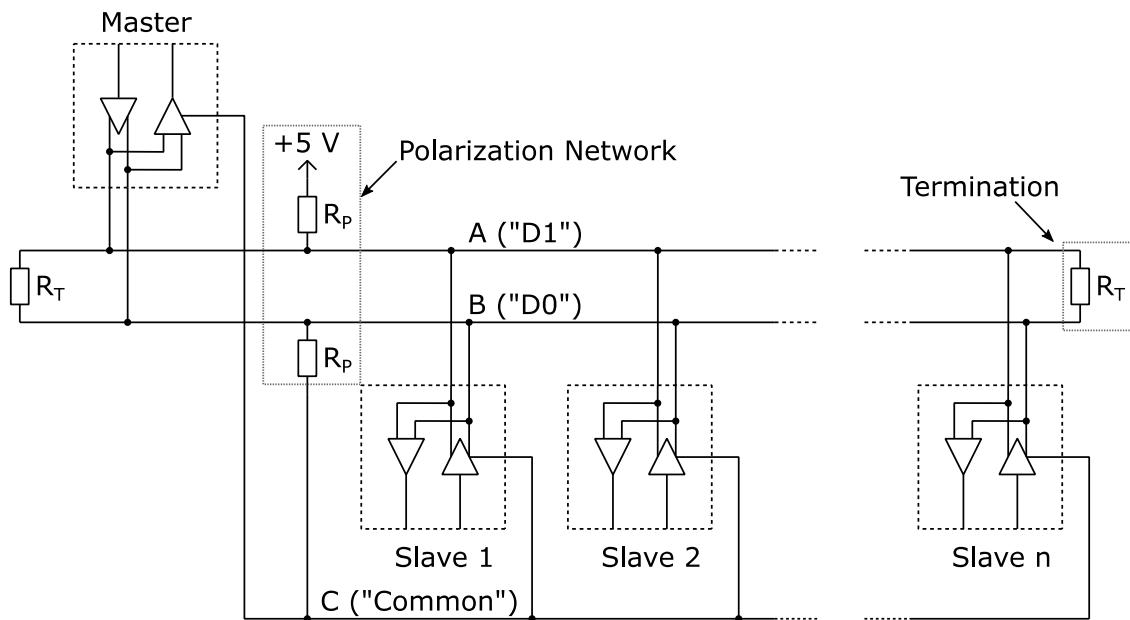

According to the Modbus Organization the devices are connected via 2 data lines and a third functional line:

- D0 (which is referred to as "B" in the EIA/TIA-485)
- D1 (which is referred to as "A" in EIA/TIA-485)
- Common (which is referred to as "C" in EIA/TIA-485)

Note: Because of the greater awareness this document will use the RS485 notation (A, B, C) in the following.

The original RS485 standard allows 32 devices each with 1 so-called unit load. Modern devices offer a unit load which is only a fraction of 1 to enable more devices on the bus. The DMB devices have a unit load of 1/8 unit load ($R_{in} \geq 96 \text{ k}\Omega$) to enable up to 256 devices in a RS485 network without the need for a repeater. This number is actually limited by the Modbus address space to 247.

Note: The given number of 247 devices is only guaranteed limited if you only use DMB devices. If you also use third-party devices on the bus you have to ensure that these devices also feature a 1/8 unit load and accept the full Modbus address space.

The Resistors R_T are used to minimize the reflections compared to an open ended line. The optimum value of the resistor depends on the wave impedance of the cable used. However a value of 120Ω is a common choice.


The Polarization Network is needed to ensure proper potentials when none of the devices are sending and thus the lines A and B are floating. The value of R_P depends on several things like bus load or termination resistors. The Modbus Organization suggests values from 450Ω to 650Ω for R_P . The use of a polarization Network is strongly suggested to obtain a robust stable network. The polarization resistors are usually integrated in the master device.

Note: Devices of the DMB series don't have internal resistors for termination or polarization.

For further details about the wiring of a Modbus RS485 network refer to [2] and [3].

2.3 Connections

The primary way to connect the DMB devices is the rear In-Rail-Bus connector (A-E). Third-party devices without the In-Rail-Connector can be connected by an In-Rail-Bus Power-Terminals (order-no.: DZU 1401; DZU 1402). Some DMB devices also internally connect the Modbus signals to the terminals 5, 6 and 8. An overview of all connections on the enclosure is shown below:

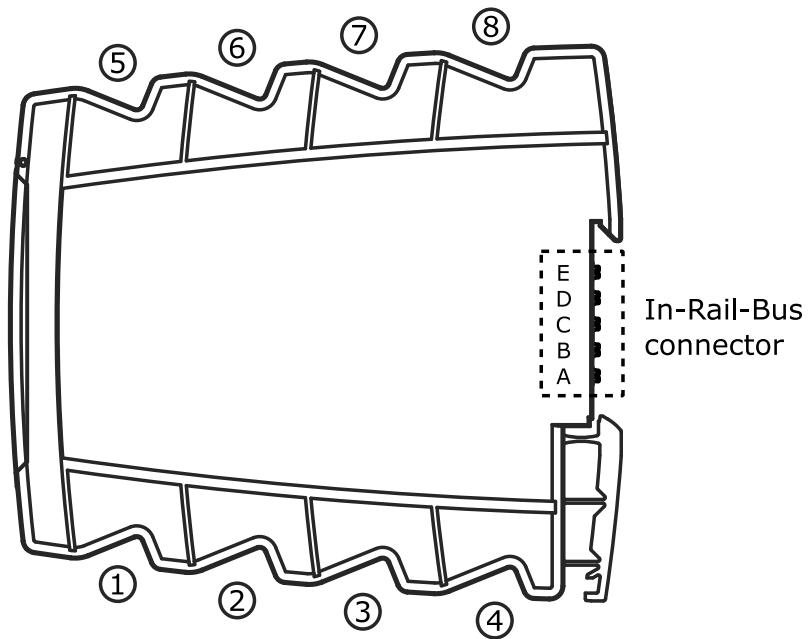

| RS485 (Modbus) signal name | In-Rail-Bus connector | Optional Screw terminals | Function |
|-------------------------------|-----------------------|-----------------------------|---------------------|
| A (D1) | A | 5 | Modbus A |
| B (DO) | B | 6 | Modbus B |
| C (Common) | C | 8 | Supply GND |
| - | D | 7 | Supply +24V |
| - | E | - | Fault Signal (opt.) |

Note: Not all of the DMB devices have the Modbus signals and the power supply connected to the terminals. See user instruction of the specific device for details.


2.4 Structure of the data formats in the Modbus frame

Modbus communicates the data generally as 16-bit registers or as groups of 16-bit registers. Data register, as LONG and FLOAT values, occupy multiple contiguous registers and are transmitted in one bus telegram.

The Modbus specification not defines the register order for LONG and FLOAT in the transmission, so the order is configurable at register 45002 (factory setting is 0x0001). The green values below are valid setting is 0x0000, the configurated setting ist stored permanently.

| Format | In the Modbus frame | Register order | Example |
|-----------------|--|--|--|
| INT16 UINT16 | ...High-Low... | | 1234d = 0x04D2 = ... 04 D2 ... |
| INT32 UINT32 | ...High-MedH-MedL-Low... ...MedL-Low-High-MedH... | Reg. 45002 = 0x0001 Reg. 45002 = 0x0000 | 1234512345d = 0x499529D9 = ... 49 95 29 D9 ... 1234512345d = 0x29D94995 = ... 29 D9 49 95 ... |
| FLOAT | ...High-MedH-MedL-Low... ...MedL-Low-High-MedH... | Reg. 45002 = 0x0001 Reg. 45002 = 0x0000 | 1,23 = 0x3F9D70A4 = ... 3F 9D 70 A4 ... 1,23 = 0x70A43F9D = ... 70 A4 3F 9D ... |
| 16 Char | ...c1-c2-c3...c14-c15-c16... | | 'ABCDEFGHIJKLMNP' = ... 41 42 ... 4F 50 ... |

2.5 Example: PC with USB to RS485 converter

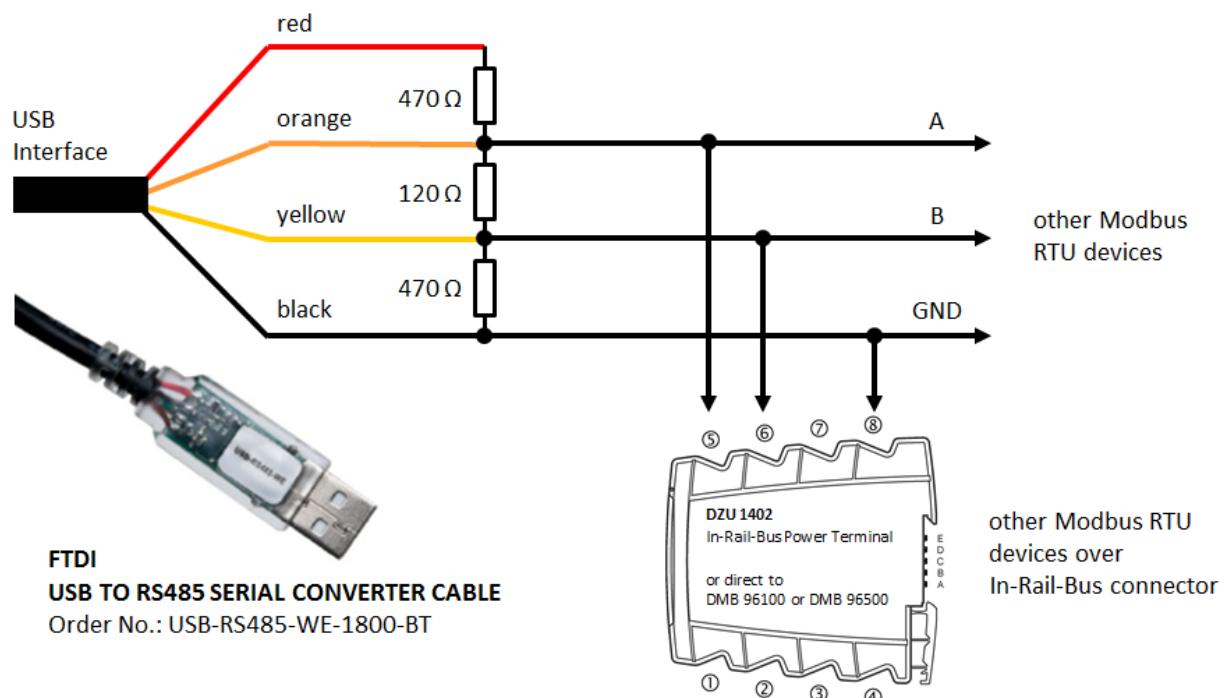

Distributors:

Farnell, Digikey, Mouser, RS-Online, ...

DMB 96500 Universal AI Module



- High performance measuring input for all industrial sensors
- Uni-/Bipolar and TRMS capture of current and voltage
- Easy configurable by DIP switch or USB interface
- 15 User Settings, directly selectable via DIP switches
- Highest accuracy, measuring resolution up to 24 bit
- Fast measured value processing, high data rate

Input

Pt, Ni, TC, KTY, R, Pot, mV,
V, mA AC/DC, Frequency,
PWM

Additional functions

16 V Transmitter Supply,
TRMS, NAMUR

Supported communication features:

Baud rates: 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200

Formats:
Parity even, 1 stop bit
Parity odd, 1 stop bit
Parity none, 2 stop bits
Parity none, 1 stop bit (not conform with specification!)

Factory setting: 19200 baud, 8 data bits, parity even, 1 stop bit, Modbus address 1

Supported function codes:


| | | |
|------------------|-------------|--|
| Command 3: | 0x03 | Read Holding Registers |
| Command 4: | 0x04 | Read Input Registers (Firmware 01.7.0 and later) |
| Command 6: | 0x06 | Write Single Register |
| Command 16: | 0x10 | Write Multiple Registers |
| Command 43 / 14: | 0x2B / 0x0E | Read Device Identification |

Note: Command 43, subcode 14 (Read Device Identification) supported in the 'Basic' category to allow the device identification.

DMB 96500 DIP settings

Operating modes with DIP switch settings

Modbus settings

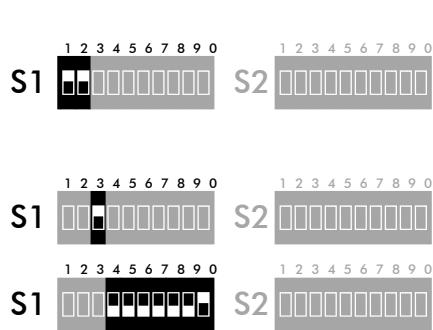

| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|--------------------------|---|---|---|---|---|---|---|---|---|---|
| 9600 Baud | ■ | | | | | | | | | |
| 19200 Baud | | | | | | | | | | |
| 38400 Baud | | ■ | | | | | | | | |
| 115200 Baud | ■ | ■ | | | | | | | | |
| Parity even, 1 stop bit | | | ■ | | | | | | | |
| Parity none, 2 stop bits | | | | ■ | | | | | | |
| Modbus address | 1 | | | | | | | | | ■ |
| 2 | | | | | | | | | ■ | |
| 3 | | | | | | | | ■ | ■ | |
| 4 | | | | | | | ■ | | | |
| 5 | | | | | | ■ | | | ■ | |
| ... | | | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ |
| 127 | | | | | | | | | | |

User range settings



USER SETTINGS

In the 15 user settings, 15 ready parameter sets can be saved via the USB interface or Modbus, which can then easily be called up via DIP switches

| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|-----------------|---|---|---|---|---|---|---|---|---|---|
| User setting 1 | | | | | | | ■ | | | |
| User setting 2 | | | | | | ■ | | | | |
| User setting 3 | | | | | ■ | ■ | | | | |
| User setting 4 | | | | ■ | | | | | | |
| User setting 5 | | | | | ■ | | ■ | | | |
| User setting 6 | | | | | ■ | ■ | | | | |
| User setting 7 | | | | | ■ | ■ | ■ | | | |
| User setting 8 | | | ■ | | | | | | | |
| User setting 9 | | | | ■ | | | ■ | | | |
| User setting 10 | | | | ■ | | ■ | | | | |
| User setting 11 | | | | | ■ | | ■ | ■ | | |
| User setting 12 | | | | | ■ | ■ | | | | |
| User setting 13 | | | | | ■ | ■ | | ■ | | |
| User setting 14 | | | | | ■ | ■ | ■ | | | |
| User setting 15 | | | | | ■ | ■ | ■ | ■ | | |

Input (sensor) settings

Voltage input

S1 S2

settings for voltage and shunt ranges

| Range | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|------------------------------|---|---|---|---|---|---|---|---|---|---|
| $\pm 50 \text{ mV}$ (shunt) | | | ■ | ■ | ■ | | | | | |
| $\pm 100 \text{ mV}$ (shunt) | | | ■ | ■ | ■ | | | ■ | | |
| $\pm 500 \text{ mV}$ (shunt) | | | ■ | ■ | ■ | ■ | | | | |
| $\pm 1 \text{ V}$ | | | ■ | | | | | | | |
| $\pm 10 \text{ V}$ | | | ■ | | | | ■ | | | |
| with transmitter supply | | | | | | | | | | |
| $\pm 100 \text{ V}$ | | | ■ | | | ■ | | | | |
| $\pm 300 \text{ V}$ | | | ■ | | | ■ | ■ | | | |

S2

| | | | | | | | | | | |
|------------------|--|--|--|--|--|--|--|---|---|---|
| DC | | | | | | | | | | |
| Average (fast) | | | | | | | | | | ■ |
| Average (normal) | | | | | | | | | ■ | |
| Average (slow) | | | | | | | | | ■ | ■ |
| RMS (fast) | | | | | | | | ■ | | |
| RMS (normal) | | | | | | | | ■ | | ■ |
| RMS (slow) | | | | | | | | ■ | ■ | |

Current input

S1 S2

settings for current ranges

| Range | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|-------------------------|---|---|---|---|---|---|---|---|---|---|
| $\pm 1 \text{ mA}$ | | | ■ | ■ | | | | | | |
| $\pm 20 \text{ mA}$ | | | ■ | ■ | | | ■ | | | |
| with transmitter supply | | | | | | | | | | |
| $\pm 100 \text{ mA}$ | | | ■ | ■ | | ■ | | | | |

S2

| | | | | | | | | | | |
|------------------|--|--|--|--|--|--|--|---|---|---|
| DC | | | | | | | | | | |
| Average (fast) | | | | | | | | | | ■ |
| Average (normal) | | | | | | | | | ■ | |
| Average (slow) | | | | | | | | | ■ | ■ |
| RMS (fast) | | | | | | | | ■ | | |
| RMS (normal) | | | | | | | | ■ | | ■ |
| RMS (slow) | | | | | | | | ■ | ■ | |
| DC | | | | | | | | | | |

Pt input

S1 S2

settings for Pt sensors

| Type | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|---------|---|---|---|---|---|---|---|---|---|---|
| Pt100 | | ■ | | | | | | | | |
| Pt200 | ■ | | | | | | | ■ | | |
| Pt500 | ■ | | | | | ■ | | | | |
| Pt1000 | ■ | | | | | ■ | ■ | | | |
| Pt2000 | ■ | | | | ■ | | | | | |
| Pt10000 | ■ | | | ■ | | | ■ | | | |
| JPt50 | ■ | | | ■ | ■ | | | | | |
| JPt100 | ■ | | | ■ | ■ | ■ | ■ | | | |

S2

| | | | | | | | | | | |
|--------|--|--|--|--|--|--|--|--|---|---|
| 4-wire | | | | | | | | | | |
| 3-wire | | | | | | | | | | ■ |
| 2-wire | | | | | | | | | ■ | |

Ni input

S1 S2

settings for Ni sensors

| Type | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|-----------------|---|---|---|---|---|---|---|---|---|---|
| Ni100 | ■ | | | ■ | | | | | | |
| Ni120 (Tk6370) | ■ | | | ■ | | | | ■ | | |
| Ni200 | ■ | | | ■ | | | ■ | | | |
| Ni500 | ■ | | | ■ | | | ■ | ■ | | |
| Ni1000 | ■ | | | ■ | ■ | | | | | |
| Ni1000 (Tk6370) | ■ | | | ■ | ■ | | | ■ | | |
| Ni1000 (Tk5000) | ■ | | | ■ | ■ | | | | | |
| 4-wire | | | | | | | | | | |
| 3-wire | | | | | | | | | | ■ |
| 2-wire | | | | | | | | | ■ | |

Thermocouples

S1 S2

settings for TC sensors

| Type | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|------------------------|---|---|---|---|---|---|---|---|---|---|
| TC sensor type A | ■ | ■ | | | | | | | | |
| TC sensor type B | ■ | ■ | | | | | | | | ■ |
| TC sensor type C | ■ | ■ | | | | ■ | | | | |
| TC sensor type D | ■ | ■ | | | | ■ | ■ | | | |
| TC sensor type E | ■ | ■ | | | ■ | | | | | |
| TC sensor type J | ■ | ■ | | | ■ | | | | | |
| TC sensor type K | ■ | ■ | | | ■ | ■ | | | | |
| TC sensor type L | ■ | ■ | | | ■ | ■ | ■ | | | |
| TC sensor type N | ■ | ■ | ■ | | | | | | | |
| TC sensor type R | ■ | ■ | ■ | | | | ■ | | | |
| TC sensor type S | ■ | ■ | ■ | | | ■ | | | | |
| TC sensor type T | ■ | ■ | ■ | | | ■ | ■ | | | |
| TC sensor type U | ■ | ■ | ■ | ■ | ■ | | | | | |
| CJC internal | | | | | | | | | | |
| external Pt100 2-wire | | | | | | | | | | ■ |
| external Pt100 3-wire | | | | | | | | | ■ | |
| external Pt1000 2-wire | | | | | | | | | ■ | |
| external Pt1000 3-wire | | | | | | | | ■ | | ■ |
| CJC off | | | | | | | | ■ | | ■ |

Resistors

S1 S2

settings for resistance measurement

| Range | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|------------|---|---|---|---|---|---|---|---|---|---|
| R ≤ 500 Ω | ■ | | | | | | | | | |
| R ≤ 5 kΩ | ■ | | | | | | ■ | | | |
| R ≤ 20 kΩ | ■ | | | | | ■ | | | | |
| R ≤ 100 kΩ | ■ | | | | | ■ | ■ | | | |
| 4-wire | | | | | | | | | | |
| 3-wire | | | | | | | | | | ■ |
| 2-wire | | | | | | | | | ■ | |

Potentiometers

S1 S2

settings for potentiometer measurement

| Pot. resistance | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|-----------------|---|---|---|---|---|---|---|---|---|---|
| R ≤ 500 Ω | ■ | | | | ■ | | | | | |
| R ≤ 5 kΩ | ■ | | | | ■ | | | ■ | | |
| R ≤ 20 kΩ | ■ | | | | ■ | ■ | | | | |
| R ≤ 100 kΩ | ■ | | | | ■ | ■ | ■ | | | |
| 4-wire | | | | | | | | | | |
| 3-wire | | | | | | | | | | ■ |

KTY sensors

| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|---|---------------------|--------|---|---|---|---|---|---|---|---|
| KTY210, KTY230, KTY21-6, KTY23-6 | ■ | | ■ | | | | | | | |
| KTY21-5, KTY23-5 | ■ | | ■ | | | | ■ | | | |
| KTY21-7, KTY23-7 | ■ | | ■ | | | ■ | | | | |
| KTY81-110, KTY81-120, KTY81-150, KTY82-110, KTY82-120, KTY82-150 | ■ | | ■ | | | ■ | ■ | | | |
| KTY81-121, KTY82-121 | ■ | | ■ | | ■ | | | | | |
| KTY81-122, KTY82-122 | ■ | | ■ | | ■ | | ■ | | | |
| KTY83-110, KTY83-120, KTY83-150 | ■ | | ■ | | ■ | ■ | | | | |
| KTY83-121 | ■ | | ■ | | ■ | ■ | ■ | | | |
| KTY83-122 | ■ | | ■ | | | | | | | |
| KTY83-151 | ■ | | ■ | | | | ■ | | | |
| KTY83-152 | ■ | | ■ | | | ■ | | | | |
| KTY84-130, KTY84-150 KTY84-151 KTY84-152 | ■ | | ■ | | ■ | ■ | ■ | | | |
| KT100, KT110, KT130, KTY10-6, KTY10-62, KTY11-6, KTY13-6, KTY16-6, KTY19-6M, KTY19-6Z, ST-13, ST-15, ST-16, ST-20M, ST-20Z | ■ | | ■ | ■ | ■ | ■ | | | | |
| KTY10-5, KTY11-5, KTY13-5 | ■ | | ■ | ■ | ■ | ■ | ■ | | | |
| KTY10-7, KTY11-7, KTY13-7 | ■ | ■ | | | | | | | | |
| KTY81-210, KTY81-220, KTY81-250, KTY82-210, KTY82-220, KTY82-250 | ■ | ■ | | | | | ■ | | | |
| KTY81-221, KTY82-221 | ■ | ■ | | | | ■ | | | | |
| KTY81-222, KTY82-222 | ■ | ■ | | | ■ | | ■ | | | |
| KTY81-251, KTY82-251 | ■ | ■ | | | ■ | | | | | |
| KTY81-252, KTY82-252 KTY82-151 | ■ | ■ | | | ■ | ■ | | | | |
| KTY82-152 | ■ | ■ | | | ■ | ■ | ■ | | | |
| S2 | 1 2 3 4 5 6 7 8 9 0 | 4-wire | | | | | | | | |
| | | 3-wire | | | | | | | | ■ |
| | | 2-wire | | | | | | | ■ | |

S1 1 2 3 4 5 6 7 8 9 0 S2 1 2 3 4 5 6 7 8 9 0

Frequency

| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|------------------------|---------------|---|---|---|---|---|---|---|---|---|
| 1 Hz | ■ | ■ | | ■ | | | | | | |
| 10 Hz | ■ | ■ | | ■ | | | ■ | | | |
| 100 Hz | ■ | ■ | | ■ | | ■ | | | | |
| 1 kHz | ■ | ■ | | ■ | | ■ | ■ | | | |
| 10 kHz | ■ | ■ | | ■ | ■ | | | | | |
| 200 kHz | ■ | ■ | | ■ | ■ | | ■ | | | |
| S2 1 2 3 4 5 6 7 8 9 0 | NAMUR Contact | | | | | | | | | |
| | SN / Contact | | | | | | | | | ■ |
| | SO | | | | | | | | ■ | |
| | PNP | | | | | | | | ■ | ■ |
| | NPN | | | | | | | ■ | | |
| | Logic 5 V | | | | | | ■ | | ■ | ■ |

S1 1 2 3 4 5 6 7 8 9 0 S2 1 2 3 4 5 6 7 8 9 0

PWM

settings for pulse width measurement

| | | Range of basic frequency | | | | | | | | | |
|----|---------------------|--------------------------|---|---|---|---|---|---|---|---|---|
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
| S1 | 1 2 3 4 5 6 7 8 9 0 | ■ | ■ | ■ | | | | | | | |
| S2 | 1 2 3 4 5 6 7 8 9 0 | ■ | ■ | ■ | | | | ■ | | | |
| | | 1 Hz | | | | | | | | | |
| | | 10 Hz | ■ | ■ | ■ | | | | | | |
| | | 100 Hz | ■ | ■ | ■ | | | ■ | | | |
| | | 1 kHz | ■ | ■ | ■ | | ■ | ■ | | | |
| | | 10 kHz | ■ | ■ | ■ | | | | | | |
| S2 | 1 2 3 4 5 6 7 8 9 0 | | | | | | | | | | |
| | | NAMUR Contact | | | | | | | | | |
| | | SN / Contact | | | | | | | | ■ | |
| | | S0 | | | | | | | ■ | | |
| | | PNP | | | | | | | ■ | | ■ |
| | | NPN | | | | | | | ■ | | |
| | | Logic 5 V | | | | | | | ■ | | ■ |

Setting via USB interface or Modbus commands



PC Mode

All switches in OFF position

Configuration the Modbus interface or with DRAGOmodbus software

Factory Setting

All switches in OFF position (PC Mode),
the default configuration in PC-Mode:


- Pt100 sensor, 4-wire
- Modbus address 1
- 19200 baud
- Parity even
- 1 stop bit

DMB 96500 Operating modes and examples

Operating modes with DIP switch settings

With the DIP switches S1-1 and S1-2 the baud rate is selected, with S1-3 the parity bit. The DIP switches S1-4 to S1-10 defines the Modbus address of the device in range of 1 to 127. The Modbus address must be unique in the Modbus segment. For higher addresses you must use the PC mode (see below).

The universal input is configured with DIP switch S2. Select the sensor type with S2-1 to S2-7 and the sensor connection with S2-8 to S2-10.

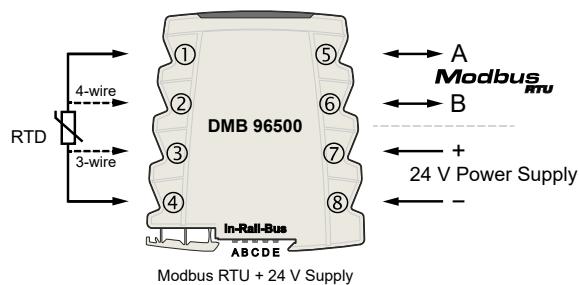

User range settings

In PC mode the device has 16 separate parameter sets. You can switch between these parameter sets programmed via PC or Modbus by means of DIP switches. In this way, you can preset a company-specific universal device with its parameters and then simply call it up using PC mode or USER SETTING 1 to USER SETTING 15.

Wiring and range-specific parameters in PC mode

a. Pt sensors

Holding register 42001 = 0x00xx

The exact sensor type is defined in the xx (see appendix), connection 2-/3-/4-wire is defined in register 42002.

Measurement results (mirrored on register 300xx):

Reg. 40001 temperature as INT16 in [0.1 °C]


Reg. 40002 temperature as INT16 in [0.1 °F]

Reg. 40051 temperature as FLOAT in [°C]

Reg. 40053 temperature as FLOAT in [°F]

Related parameters:


Reg. 42009 2-wire offset for cable resistance as FLOAT in [Ω]

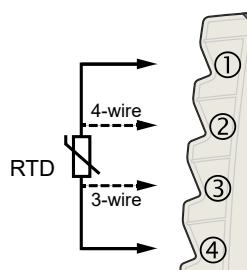

b. Ni sensors

Holding register 42001 = 0x01xx

The exact sensor type is defined in the xx (see appendix), connection 2-/3-/4-wire is defined in register 42002.

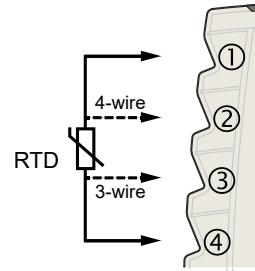

Measurement results (mirrored on register **300xx**):

Reg. 40001 temperature as INT16 in [0.1 °C]

Reg. 40002 temperature as INT16 in [0.1 °F]

Reg. 40051 temperature as FLOAT in [°C]

Reg. 40053 temperature as FLOAT in [°F]


Related parameters:

Reg. 42009 2-wire offset for cable resistance as FLOAT in [Ω]

c. KTY sensors

Holding register 42001 = 0x02xx

The exact sensor type is defined in the xx (see appendix), connection 2-/3-/4-wire is defined in register 42002.

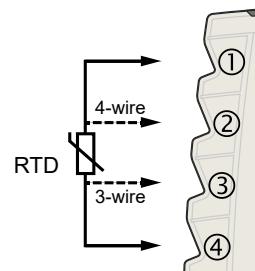

Measurement results (mirrored on register **300xx**):

Reg. 40001 temperature as INT16 in [0.1 °C]

Reg. 40002 temperature as INT16 in [0.1 °F]

Reg. 40051 temperature as FLOAT in [°C]

Reg. 40053 temperature as FLOAT in [°F]


Related parameters:

Reg. 42009 2-wire offset for cable resistance as FLOAT in [Ω]

d. Thermocouples

Holding register 42001 = 0x03xx

The exact sensor type is defined in the xx (see appendix), the temperature compensation is defined in register 42002.

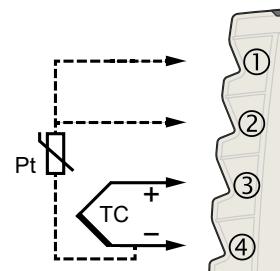

Measurement results (mirrored on register **300xx**):

Reg. 40001 temperature as INT16 in [0.1 °C]

Reg. 40002 temperature as INT16 in [0.1 °F]

Reg. 40051 temperature as FLOAT in [°C]

Reg. 40053 temperature as FLOAT in [°F]


Related parameters:

Reg. 42007 manual value for manual temperature compensation as FLOAT in [°C]

e. Resistance

Holding register 42001 = 0x04xx

The sensor range is defined in the xx (see appendix), connection 2-/3-/4-wire is defined in register 42002.

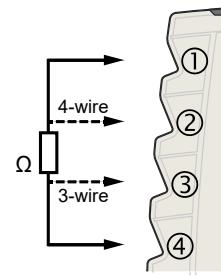

Measurement results (mirrored on register **300xx**):

Reg. 40001 resistance as INT16 (scaling see appendix)

Reg. 40051 resistance as FLOAT in [Ω]


Related parameters:

Reg. 42009 2-wire offset for cable resistance as FLOAT in [Ω]

f. Potentiometer

Holding register 42001 = 0x05xx

The sensor range is defined in the xx (see appendix), connection 3-/4-wire is defined in register 42002.

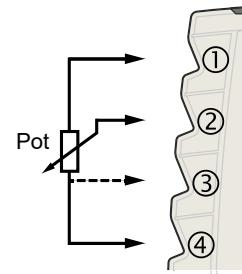

Measurement results (mirrored on register **300xx**):


Reg. 40001 position as INT16 in [0.01 %]

Reg. 40051 position as FLOAT in [%]

g. mV Shunt input

Holding register 42001 = 0x06xx

The voltage range is defined in the xx (see appendix), measuring method DC, AVG or RMS is defined in register 42002.

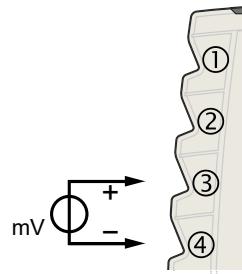


Measurement results (mirrored on register **300xx**):

Reg. 40001 voltage as INT16 (scaling see appendix)

Reg. 40051 voltage as FLOAT in [V]

h. Current input

Holding register 42001 = 0x07xx
The current range is defined in the xx (see appendix), measuring method DC, Average or RMS is defined in register 42002.

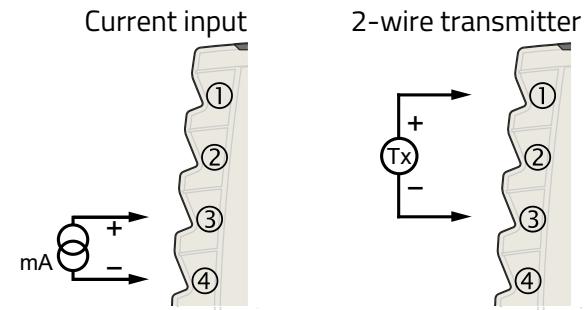


In the range 0 ... 20 mA, also a 2-wire transmitter can be connected to the current input. The transmitter is supplied via terminal 1.

Measurement results (mirrored on register **300xx**):

Reg. 40001 current as INT16 (scaling see appendix)
Reg. 40051 current as FLOAT in [mA]

i. Voltage input

Holding register 42001 = 0x08xx
The voltage range is defined in the xx (see appendix), measuring method DC, Average or RMS is defined in register 42002.

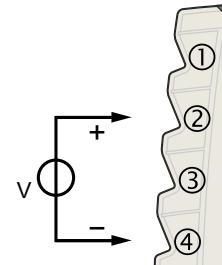


Measurement results (mirrored on register **300xx**):

Reg. 40001 voltage as INT16 (scaling see appendix)
Reg. 40051 voltage as FLOAT in [V]


j. Frequency input


Holding register 42001 = 0x09xx
The frequency range and gate is defined in the xx (see appendix), the input sensor type is defined in register 42002.

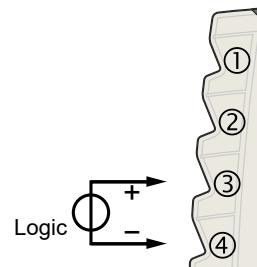

Measurement results (mirrored on register **300xx**):

Reg. 40001 frequency as INT16 (scaling see appendix)
Reg. 40051 frequency as FLOAT in [Hz]

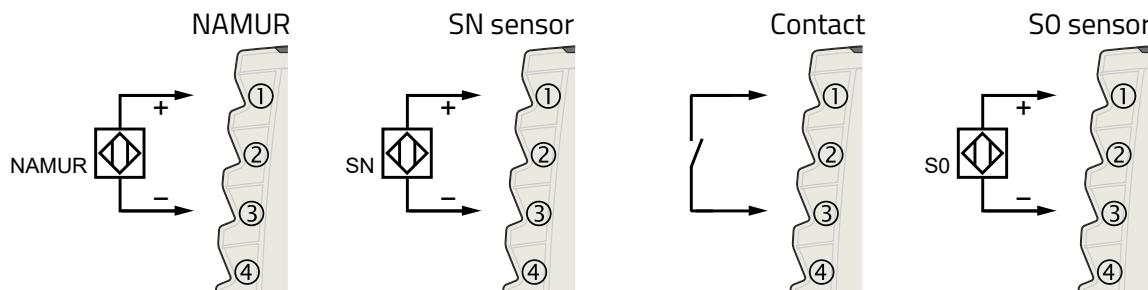

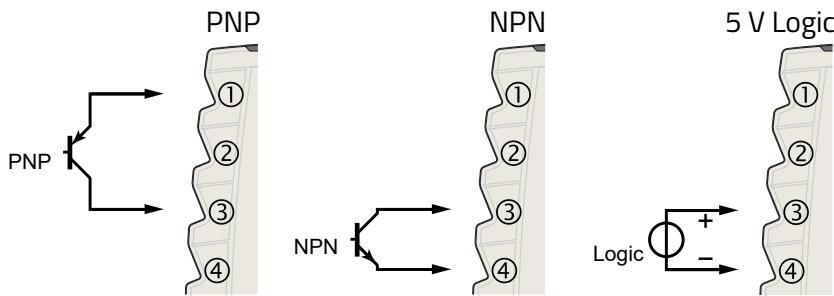

k. PWM input

Holding register 42001 = 0x0Axx

The frequency range and gate is defined in the xx (see appendix),
the input sensor type is defined in register 42002 (see frequency).


Measurement results (mirrored on register **300xx**):

Reg. 40001 duty cycle as INT16 in [0.01 %]

Reg. 40002 frequency as INT16 in [Hz] (scaling see appendix)

Reg. 40051 duty cycle as FLOAT in [%]

Reg. 40053 frequency as FLOAT in [Hz]

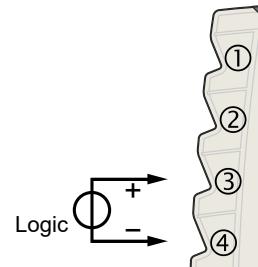

Limit Monitoring of the measured value

The device offers the possibility to monitor the primary measuring value (holding register 40051) for compliance to the programmed limits.

As usual in NAMUR applications, the device provides warning and failure limits. The warning limits are usually used as a pre-warning (preventive maintenance), the failure limits require action by the system operator.

Monitored value:

Register 40051 / 30051 – Primary value


Limit parameters (FLOAT):

Register 42015 – Failure limit low

Register 42017 – Warning limit low

Register 42019 – Warning limit high

Register 42021 – Failure limit high

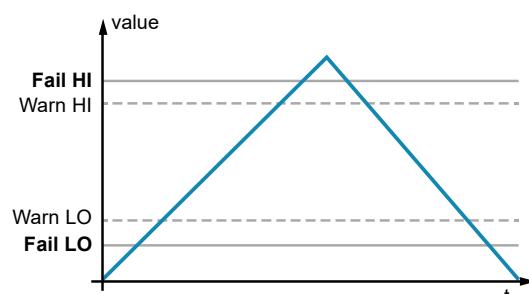

Limit results:

Register 40005 or 40059 – Device status bits 0 to 3

mirrored on 30005 or 30059

Scaling of primary value

for Firmware 01.6.0 and higher:

In register **40051** (mirrored on register **30051**), a scaled measured value is available as FLOAT number. Please define the SCALE parameters for input range and the output range in registers 42003, 42005 and 42011, 42013. The scaling is available for any sensor in every range, also in the User Settings.

Example:

At the input we have 4 to 20 mA from a transmitter, the output should indicate the value as 0 to 80 litres. This output value in register 40051 (30051) is a float number with decimal places.

Set the SCALE parameters as follows:

| | Register |
|--|----------|
| ▪ SCALE measured value (start) = 4000 (4000 µA = 4 mA) | 42003 |
| ▪ SCALE measured value (end) = 20000 (20000 µA = 20 mA) | 42005 |
| ▪ SCALE output range (start) = 0 | 42011 |
| ▪ SCALE output range (end) = 80 | 42013 |

Structure of User Settings

In PC mode the device has 16 separate parameter sets, the pc mode settings and 15 user settings. You can switch between these parameter sets programmed via PC or Modbus by means of DIP switches. In this way, you can preset a company-specific universal device with its parameters and then simply call it up using PC mode or USER SETTING 1 to USER SETTING 15.

Each parameter set consists of 32 Modbus registers, in the first parameter set (PC mode) parameters can be read and written individually, but also as a complete block of 32 registers. The structure of a parameter set can be seen in the holding register map.

The user settings 1 to 15 can only be read and written as a block. Each parameter set also contains a description (in ASCII) to give the parameter set a name.

DMB 96500 input register map

Firmware 01.7.0 and later:

All dynamic measured value registers can be read out with Modbus command 3 as holding register **400xx**,
but also with Modbus command 4 as input register **300xx**.

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---|------|------|------------------|----------|--------|--------|---|
| | Dec | Hex | | | | | |
| Measured Values as one input register (scaled integer value) | | | | | | | |
| 30001 | 0 | 0000 | Primary Value | 1 | INT16 | R | Primary Value (look at input configuration for the scaling) |
| 30002 | 1 | 0001 | Secondary Value | 1 | INT16 | R | Secondary Value (look at input configuration for the scaling) |
| 30003 | 2 | 0002 | Tertiary Value | 1 | INT16 | R | Tertiary Value |
| 30004 | 3 | 0003 | Quaternary Value | 1 | INT16 | R | Quaternary Value |
| 30005 | 4 | 0004 | Status | 1 | BINARY | R | Device status Bit 0 FAIL limit LO active Bit 1 WARN limit LO active Bit 2 WARN limit HI active Bit 3 FAIL limit HI active Bit 4 Error in Primary Value Bit 5 Error in Secondary Value Bit 6 Error in Tertiary Value Bit 7 Error in Quaternary Value Bit 8..13 undefined Bit 14 Configuration error Bit 15 System error |
| Measured Values as float value (2 registers) | | | | | | | |
| 30051 | 50 | 0032 | Primary Value | 2 | FLOAT | R | Primary Value (for Firmware 01.6.0 and later: may be scaled by SCALE parameters at Reg. 42003, 42005 and 42011, 42013) at Voltage measurement units are [V] at Current measurement units are [A] at Resistance meas. units are [Ω] at Temperature meas. units are [$^{\circ}\text{C}$] at Potentiometer meas. units are [%] at Frequency meas. units are [Hz] at PWM measurement units are [%] |
| 30053 | 52 | 0034 | Secondary Value | 2 | FLOAT | R | Secondary Value |
| 30055 | 54 | 0036 | Tertiary Value | 2 | FLOAT | R | Tertiary Value |
| 30057 | 56 | 0038 | Quaternary Value | 2 | FLOAT | R | Quaternary Value |
| 30059 | 58 | 003A | Status | 1 | BINARY | R | Device status (look at 30005 for description) |

DMB 96500 holding register map

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---|------|------|------------------|----------|--------|--------|--|
| | Dec | Hex | | | | | |
| Measured Values as one holding register (scaled integer value) | | | | | | | |
| 40001 | 0 | 0000 | Primary Value | 1 | INT16 | R | Primary Value (look at input configuration for the scaling) |
| 40002 | 1 | 0001 | Secondary Value | 1 | INT16 | R | Secondary Value (look at input configuration for the scaling) |
| 40003 | 2 | 0002 | Tertiary Value | 1 | INT16 | R | Tertiary Value |
| 40004 | 3 | 0003 | Quaternary Value | 1 | INT16 | R | Quaternary Value |
| 40005 | 4 | 0004 | Status | 1 | BINARY | R | Device status Bit 0 FAIL limit LO active Bit 1 WARN limit LO active Bit 2 WARN limit HI active Bit 3 FAIL limit HI active Bit 4 Error in Primary Value Bit 5 Error in Secondary Value Bit 6 Error in Tertiary Value Bit 7 Error in Quaternary Value Bit 8..13 undefined Bit 14 Configuration error Bit 15 System error |
| Measured Values as float value (2 registers) | | | | | | | |
| 40051 | 50 | 0032 | Primary Value | 2 | FLOAT | R | Primary Value (for Firmware 01.6.0 and higher: may be scaled by SCALE parameters at Reg. 42003, 42005 and 42011, 42013) at Voltage measurement units are [V] at Current measurement units are [A] at Resistance meas. units are [Ω] at Temperature meas. units are [$^{\circ}\text{C}$] at Potentiometer meas. units are [%] at Frequency meas. units are [Hz] at PWM measurement units are [%] |
| 40053 | 52 | 0034 | Secondary Value | 2 | FLOAT | R | Secondary Value |
| 40055 | 54 | 0036 | Tertiary Value | 2 | FLOAT | R | Tertiary Value |
| 40057 | 56 | 0038 | Quaternary Value | 2 | FLOAT | R | Quaternary Value |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|--|------|------|---------------------------|----------|--------|--------|--|
| | Dec | Hex | | | | | |
| 40059 | 58 | 003A | Status | 1 | BINARY | R | Device status Bit 0 FAIL limit LO active Bit 1 WARN limit LO active Bit 2 WARN limit HI active Bit 3 FAIL limit HI active Bit 4 Error in Primary Value Bit 5 Error in Secondary Value Bit 6 Error in Tertiary Value Bit 7 Error in Quaternary Value Bit 8..13 <i>undefined</i> Bit 14 Configuration error Bit 15 System error |
| | | | | | | | |
| 40101 | 100 | 0064 | current DIP switches | 2 | UINT32 | R | Current DIP switches Bit 0 S1-1 Modbus settings : : Bit 9 S1-10 Bit 10 S2-1 Input settings : : Bit 19 S2-10 Bit 20..31 <i>undefined</i> |
| 40103 | 102 | 0066 | current configuration set | 1 | UINT16 | R | currently used configuration set depending on DIP switches 0x0000 PC setting 0x0001 User setting 1 : : 0x000F User setting 15 0x0010 DIP setting |
| | | | | | | | |
| Auxiliary and diagnosis functions | | | | | | | |
| 41201 | 1200 | 04B0 | "Here I am" | 1 | UINT16 | W | "Here I am" – Set timer with time in seconds Sets a flashing signal on the green LED for the written timeperiod to detect the position of the device in the cabinet |
| 41202 | 1201 | 04B1 | Reset counter | 1 | UINT16 | W | Reset of diagnostic counter Write: 0x0000 |
| | | | | | | | |
| 41211 | 1210 | 04BA | Telegram count | 1 | UINT16 | R | Count of all telegram frames on Modbus Counter overflow continues at 0 |
| 41212 | 1211 | 04BB | MyTelegram count | 1 | UNIT16 | R | Request count for telegram frames on Modbus with own device address Counter overflow continues at 0 |
| 41213 | 1212 | 04BC | Error count | 1 | UINT16 | R | Error count of frames with error Counter overflow continues at 0 |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|------------------------|------|------|--|----------|---------|--------|---|
| | Dec | Hex | | | | | |
| | | | | | | | |
| Device data | | | | | | | |
| 43001 | 3000 | 0BB8 | Device identifier | 1 | UINT16 | R | Device identifier: 0x0006 |
| 43002 | 3001 | 0BB9 | Hardware version | 1 | UINT16 | R | Hardware version: 0x0042 (B) |
| 43005 | 3004 | 0BBC | RFID identifier | 8 | 16 Char | R | Unique identifier |
| 43029 | 3028 | 0BD4 | Firmware version | 1 | UINT16 | R | 0x0100 – Example for version 01.0.0 |
| 45151 | 5150 | 141E | Point of measuring | 8 | 16 Char | RW | Point of measuring in ASCII (Tag) |
| | | | | | | | |
| Settings (CONF) | | | | | | | |
| 42001 | 2000 | 07D0 | Configuration Set: PC mode sensor type | 1 | UINT16 | RW | Input type setting (programmed by PC) for further informations see table 01 0x00xx – Pt sensors 0x01xx – Ni sensors 0x02xx – KTY sensors 0x03xx – Thermocouples 0x04xx – Resistance 0x05xx – Potentiometer 0x06xx – mV shunt input 0x07xx – Current input 0x08xx – Voltage input 0x09xx – Frequency 0x0Axx – PWM input other: <i>undefined</i> |
| 42002 | 2001 | 07D1 | Connection, compensation | 1 | UINT16 | RW | Settings for connection or compensation depending on sensor type, see table 02 |
| 42003 | 2002 | 07D2 | SCALE measured value star t | 2 | FLOAT | RW | Firmware 01.6.0 and higher: Input SCALE-Parameter: Input range e.g. 4000 ... 20000 µA |
| 42005 | 2004 | 07D4 | end | 2 | FLOAT | RW | |
| 42007 | 2006 | 07D6 | Manual temperature | 2 | FLOAT | RW | Manual temperature for TC compensation |
| 42009 | 2008 | 07D8 | 2-wire offset | 2 | FLOAT | RW | 2-wire offset for cable resistance (sum of resistance of both cables) |
| 42011 | 2010 | 07DA | SCALE output range star t | 2 | FLOAT | RW | Firmware 01.6.0 and higher: Output SCALE-Parameter: Output range e.g. 0 ... 80 litre |
| 42013 | 2012 | 07DC | end | 2 | FLOAT | RW | |
| 42015 | 2014 | 07DE | FAIL Limit_Low | 2 | FLOAT | RW | FAIL limit LO |
| 42017 | 2016 | 07EO | WARN Limit_Low | 2 | FLOAT | RW | WARN limit LO |
| 42019 | 2018 | 07E2 | WARN Limit_High | 2 | FLOAT | RW | WARN limit HI |
| 42021 | 2020 | 07E4 | FAIL Limit_High | 2 | FLOAT | RW | FAIL limit HI |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|-----------------------------------|----------|---------|--------|--|
| | Dec | Hex | | | | | |
| 42023 | 2022 | 07E6 | | 2 | | RW | Returns NULL bytes when reading, write has no effect. Thus, the registers of configuration set can be read and write in a block. |
| 42025 | 2024 | 07E8 | Description | 8 | 16 Char | RW | Name of configuration set |
| | | | | | | | |
| 42033 | 2032 | 07F0 | Conf. Set: User setting 1 | 32 | BLOB | RW | Complete User Configuration set 1 Structure according registers 42001 to 42032, read an write as complete set only! |
| 42065 | 2064 | 0810 | Conf. Set: User setting 2 | 32 | BLOB | RW | Complete User Configuration set 2 Structure according registers 42001 to 42032, read an write as complete set only! |
| 42097 | 2096 | 0830 | Conf. Set: User setting 3 | 32 | BLOB | RW | Complete User Configuration set 3 Structure according registers 42001 to 42032, read an write as complete set only! |
| 42129 | 2128 | 0850 | Conf. Set: User setting 4 | 32 | BLOB | RW | Complete User Configuration set 4 Structure according registers 42001 to 42032, read an write as complete set only! |
| 42161 | 2160 | 0870 | Conf. Set: User setting 5 | 32 | BLOB | RW | Complete User Configuration set 5 Structure according registers 42001 to 42032, read an write as complete set only! |
| 42193 | 2192 | 0890 | Conf. Set: User setting 6 | 32 | BLOB | RW | Complete User Configuration set 6 Structure according registers 42001 to 42032, read an write as complete set only! |
| 42225 | 2224 | 08B0 | Conf. Set: User setting 7 | 32 | BLOB | RW | Complete User Configuration set 7 Structure according registers 42001 to 42032, read an write as complete set only! |
| 42257 | 2256 | 08D0 | Conf. Set: User setting 8 | 32 | BLOB | RW | Complete User Configuration set 8 Structure according registers 42001 to 42032, read an write as complete set only! |
| 42289 | 2288 | 08F0 | Conf. Set: User setting 9 | 32 | BLOB | RW | Complete User Configuration set 9 Structure according registers 42001 to 42032, read an write as complete set only! |
| 42321 | 2320 | 0910 | Conf. Set: User setting 10 | 32 | BLOB | RW | Complete User Configuration set 10 Structure according registers 42001 to 42032, read an write as complete set only! |
| 42353 | 2352 | 0930 | Conf. Set: User setting 11 | 32 | BLOB | RW | Complete User Configuration set 11 Structure according registers 42001 to 42032, read an write as complete set only! |
| 42385 | 2384 | 0950 | Conf. Set: User setting 12 | 32 | BLOB | RW | Complete User Configuration set 12 Structure according registers 42001 to 42032, read an write as complete set only! |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|---|----------|---------|--------|--|
| | Dec | Hex | | | | | |
| 42417 | 2416 | 0970 | Conf. Set: User setting 13 | 32 | BLOB | RW | Complete User Configuration set 13 Structure according registers 42001 to 42032, read an write as complete set only! |
| 42449 | 2448 | 0990 | Conf. Set: User setting 14 | 32 | BLOB | RW | Complete User Configuration set 14 Structure according registers 42001 to 42032, read an write as complete set only! |
| 42481 | 2480 | 09B0 | Conf. Set: User setting 15 | 32 | BLOB | RW | Complete User Configuration set 15 Structure according registers 42001 to 42032, read an write as complete set only! |
| 42513 | 2512 | 09D0 | Conf. Set: DIP mode sensor type | 1 | UINT16 | R | <p>Input type setting (programmed by PC) for further informations see table 01</p> <p>0x00xx – Pt sensors 0x01xx – Ni sensors 0x02xx – KTY sensors 0x03xx – Thermocouples 0x04xx – Resistance 0x05xx – Potentiometer 0x06xx – mV shunt input 0x07xx – Current input 0x08xx – Voltage input 0x09xx – Frequency 0x0Axx – PWM input other: <i>undefined</i></p> |
| 42514 | 2513 | 09D1 | Connection, compensation | 1 | UINT16 | R | Settings for connection or compensation depending on sensor type, see table 02 |
| 42537 | 2536 | 09E8 | Description | 8 | 16 Char | R | Name of configuration set |
| | | | | | | | |
| 45001 | 5000 | 1388 | Configuration counter | 1 | UINT16 | R | <p>Counter is incremented internally each write of Conf parameters. The Modbus master can remember this value. As long as the counter has the same value, the configuration is unchanged.</p> |
| 45002 | 5001 | 1389 | Register order | 1 | UINT16 | RW | <p>Order of registers at LONG or FLOAT values <> 0 - HH-HL-LH-LL (default) == 0 - LH-LL-HH-HL</p> |
| 45003 | 5002 | 138A | Date of last modification | 2 | UINT32 | RW | Date (UNIX_TIMESTAMP) last change (Not managed by the device) |
| 45005 | 5004 | 138C | Overrange at error | 1 | UINT16 | RW | <p>Overrange at measuring error 0x0000 OFF (User must check statusbits) 0x0001 ON (default)</p> |
| | | | | | | | |
| 45010 | 5009 | 1391 | Modbus: Address (in PC Mode) | 1 | UINT16 | RW | Modbus address: 1 ... 247 (default = 1) |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|-----------------------------------|----------|--------|--------|---|
| | Dec | Hex | | | | | |
| 45011 | 5010 | 1392 | Baud rate (in PC Mode) | 1 | UINT16 | RW | Baud rate: 0x0000 - 300 0x0001 - 600 0x0002 - 1200 0x0003 - 2400 0x0004 - 4800 0x0005 - 9600 0x0006 - 19200 (default) 0x0007 - 38400 0x0008 - 57600 0x0009 - 115200 other: <i>undefined</i> |
| 45012 | 5011 | 1393 | Parity/Stop bits (in PC Mode) | 1 | UINT16 | RW | Parity: 0x0000 - Even, 1 Stop bit (default) 0x0001 - Odd, 1 Stop bit 0x0002 - None, 2 Stop bits 0x0003 - None, 1 Stop bit (no Spec!) (from Firmware 01.4.0) other: <i>undefined</i> |
| 45013 | 5012 | 1394 | Response delay (in PC Mode) | 1 | UINT16 | RW | Delay: 1 ... 1000 ms (default = 1) |
| | | | | | | | |
| 45020 | 5019 | 139B | Modbus: Address (in DIP Mode) | 1 | UINT16 | R | Modbus address: 1 ... 127 |
| 45021 | 5020 | 139C | Baud rate (in DIP Mode) | 1 | UINT16 | R | Baud rate: 0x0005 - 9600 0x0006 - 19200 0x0007 - 38400 0x0009 - 115200 |
| 45022 | 5021 | 139D | Parity/Stop bits (in DIP Mode) | 1 | UINT16 | R | Parity: 0x0000 - Even, 1 Stop bit 0x0002 - None, 2 Stop bits |
| 45023 | 5022 | 139E | Response delay (in DIP Mode) | 1 | UINT16 | R | Delay: 1 ms at 115200 Baud 3 ms at 38400 Baud 5 ms at 19200 Baud 10 ms at 9600 Baud |
| | | | | | | | |
| 48213 | 8212 | 2014 | Save settings | 1 | UINT16 | W | 0x0043 Speeds up the save procedure of settings. Without this command the device saves changes approx. 5 seconds after the last write of a configuration parameter. |
| | | | | | | | |

Appendix

Table 01 – Measuring ranges

| Sensor, Reg. 42001 | | Sensor Type | Range | Scaling for INT16 values |
|------------------------------|--------|---|------------------|-----------------------------|
| Decimal | Hex | | | |
| Pt sensors | | | | |
| 0 | Ox0000 | Pt 100 | -200 ... +850 °C | XXXX.X °C / XXXX °F |
| 1 | Ox0001 | Pt 200 | -200 ... +850 °C | XXXX.X °C / XXXX °F |
| 2 | Ox0002 | Pt 500 | -200 ... +850 °C | XXXX.X °C / XXXX °F |
| 3 | Ox0003 | Pt 1000 | -200 ... +850 °C | XXXX.X °C / XXXX °F |
| 4 | Ox0004 | Pt 2000 | -200 ... +850 °C | XXXX.X °C / XXXX °F |
| 5 | Ox0005 | Pt 10000 | -200 ... +850 °C | XXXX.X °C / XXXX °F |
| 6 | Ox0006 | JPt 50 | -200 ... +650 °C | XXXX.X °C / XXXX °F |
| 7 | Ox0007 | JPt 100 | -200 ... +510 °C | XXXX.X °C / XXXX °F |
| | | | | |
| Ni sensors | | | | |
| 256 | Ox0100 | Ni 100 | -60 ... +250 °C | XXXX.X °C / XXXX °F |
| 257 | Ox0101 | Ni 120 (TC. 6370) | -80 ... +260 °C | XXXX.X °C / XXXX °F |
| 258 | Ox0102 | Ni 200 | -60 ... +250 °C | XXXX.X °C / XXXX °F |
| 259 | Ox0103 | Ni 500 | -60 ... +250 °C | XXXX.X °C / XXXX °F |
| 260 | Ox0104 | Ni 1000 | -60 ... +250 °C | XXXX.X °C / XXXX °F |
| 261 | Ox0105 | Ni 1000 (TC. 6370) | -60 ... +200 °C | XXXX.X °C / XXXX °F |
| 262 | Ox0106 | Ni 1000 (TC. 5000) | -60 ... +150 °C | XXXX.X °C / XXXX °F |
| | | | | |
| KTY sensors | | | | |
| 512 | Ox0200 | KT210, KT230, KTY21-6, KTY23-6 | -50 ... +150 °C | XXXX.X °C / XXXX °F |
| 513 | Ox0201 | KTY21-5, KTY23-5 | -50 ... +150 °C | XXXX.X °C / XXXX °F |
| 514 | Ox0202 | KTY21-7, KTY23-7 | -50 ... +150 °C | XXXX.X °C / XXXX °F |
| 515 | Ox0203 | KTY81-110, KTY81-120, KTY81-150, KTY82-110, KTY82-120, KTY82-150 | -55 ... +150 °C | XXXX.X °C / XXXX °F |
| 516 | Ox0204 | KTY81-121, KTY82-121 | -55 ... +150 °C | XXXX.X °C / XXXX °F |
| 517 | Ox0205 | KTY81-122, KTY82-122 | -55 ... +150 °C | XXXX.X °C / XXXX °F |
| 518 | Ox0206 | KTY83-110, KTY83-120, KTY83-150 | -55 ... +175 °C | XXXX.X °C / XXXX °F |
| 519 | Ox0207 | KTY83-121 | -55 ... +175 °C | XXXX.X °C / XXXX °F |
| 520 | Ox0208 | KTY83-122 | -55 ... +175 °C | XXXX.X °C / XXXX °F |
| 521 | Ox0209 | KTY83-151 | -55 ... +175 °C | XXXX.X °C / XXXX °F |
| 522 | Ox020A | KTY83-152 | -55 ... +175 °C | XXXX.X °C / XXXX °F |
| 523 | Ox020B | KTY84-130, KTY84-150 | -40 ... +300 °C | XXXX.X °C / XXXX °F |
| 524 | Ox020C | KTY84-151 | -40 ... +300 °C | XXXX.X °C / XXXX °F |
| 525 | Ox020D | KTY84-152 | -40 ... +300 °C | XXXX.X °C / XXXX °F |
| 526 | Ox020E | KT100, KT110, KT130, KTY10-6, KTY10-62, KTY11-6, KTY13-6, KTY16-6, KTY19-6M, KTY19-6Z, ST-13, ST-15, ST-16, ST-20M, ST-20Z | -50 ... +150 °C | XXXX.X °C / XXXX °F |
| 527 | Ox020F | KTY10-5, KTY11-5, KTY13-5 | -50 ... +150 °C | XXXX.X °C / XXXX °F |

| Sensor, Reg. 42001 | | Sensor Type | Range | Scaling for INT16 values |
|------------------------------|--------|---|----------------------|-----------------------------|
| Decimal | Hex | | | |
| 528 | 0x0210 | KTY10-7, KTY11-7, KTY13-7 | -50 ... +150 °C | XXXX.X °C / XXXX °F |
| 529 | 0x0211 | KTY81-210, KTY81-220, KTY81-250, KTY82-210, KTY82-220, KTY82-250 | -55 ... +150 °C | XXXX.X °C / XXXX °F |
| 530 | 0x0212 | KTY81-221, KTY82-221 | -55 ... +150 °C | XXXX.X °C / XXXX °F |
| 531 | 0x0213 | KTY81-222, KTY82-222 | -55 ... +150 °C | XXXX.X °C / XXXX °F |
| 532 | 0x0214 | KTY81-251, KTY82-251 | -55 ... +150 °C | XXXX.X °C / XXXX °F |
| 533 | 0x0215 | KTY81-252, KTY82-252 | -55 ... +150 °C | XXXX.X °C / XXXX °F |
| 534 | 0x0216 | KTY82-151 | -55 ... +150 °C | XXXX.X °C / XXXX °F |
| 535 | 0x0217 | KTY82-152 | -55 ... +150 °C | XXXX.X °C / XXXX °F |
| | | | | |
| Thermocouples | | | | |
| 768 | 0x0300 | Thermocouple type A | 0 ... +2500 °C | XXXX.X °C / XXXX °F |
| 769 | 0x0301 | Thermocouple type B | 250 ... +1820 °C | XXXX.X °C / XXXX °F |
| 770 | 0x0302 | Thermocouple type C | 0 ... +2315 °C | XXXX.X °C / XXXX °F |
| 771 | 0x0303 | Thermocouple type D | 0 ... +2315 °C | XXXX.X °C / XXXX °F |
| 772 | 0x0304 | Thermocouple type E | -270 ... +1000 °C | XXXX.X °C / XXXX °F |
| 773 | 0x0305 | Thermocouple type J | -210 ... +1200 °C | XXXX.X °C / XXXX °F |
| 774 | 0x0306 | Thermocouple type K | -270 ... +1372 °C | XXXX.X °C / XXXX °F |
| 775 | 0x0307 | Thermocouple type L | -200 ... +900 °C | XXXX.X °C / XXXX °F |
| 776 | 0x0308 | Thermocouple type N | -270 ... +1300 °C | XXXX.X °C / XXXX °F |
| 777 | 0x0309 | Thermocouple type R | -50 ... +1768 °C | XXXX.X °C / XXXX °F |
| 778 | 0x030A | Thermocouple type S | -50 ... +1768 °C | XXXX.X °C / XXXX °F |
| 779 | 0x030B | Thermocouple type T | -270 ... +400 °C | XXXX.X °C / XXXX °F |
| 780 | 0x030C | Thermocouple type U | -200 ... +600 °C | XXXX.X °C / XXXX °F |
| | | | | |
| Resistance | | | | |
| 1024 | 0x0400 | Resistance ≤ 500 Ω | 500.0 | |
| 1025 | 0x0401 | Resistance ≤ 5 kΩ | 5.000 | |
| 1026 | 0x0402 | Resistance ≤ 20 kΩ | 20.000 | |
| 1027 | 0x0403 | Resistance ≤ 100 kΩ | 100.00 | |
| | | | | |
| Potentiometer | | | | |
| 1280 | 0x0500 | Potentiometer Resistance ≤ 500 Ω, | Position 0 ... 100 % | 0.00 ... 100.00 |
| 1281 | 0x0501 | Potentiometer Resistance ≤ 5 kΩ, | Position 0 ... 100 % | 0.00 ... 100.00 |
| 1282 | 0x0502 | Potentiometer Resistance ≤ 20 kΩ, | Position 0 ... 100 % | 0.00 ... 100.00 |
| 1283 | 0x0503 | Potentiometer Resistance ≤ 100 kΩ, | Position 0 ... 100 % | 0.00 ... 100.00 |
| | | | | |
| mV Shunt Input | | | | |
| 1536 | 0x0600 | Input Voltage ± 50 mV | 50.00 | |
| 1537 | 0x0601 | Input Voltage ± 100 mV | 100.00 | |
| 1538 | 0x0602 | Input Voltage ± 500 mV | 500.0 | |
| | | | | |

| Sensor, Reg. 42001 | | Sensor Type | Scaling |
|------------------------------|--------|--|------------------|
| Decimal | Hex | Range | for INT16 values |
| Current Input | | | |
| 1792 | 0x0700 | Input Current ± 1 mA | 1.0000 |
| 1793 | 0x0701 | Input Current ± 20 mA with transmitter supply | 20.000 |
| 1794 | 0x0702 | Input Current ± 100 mA | 100.00 |
| | | | |
| Voltage Input | | | |
| 2048 | 0x0800 | Input Voltage ± 1 V | 1.0000 |
| 2049 | 0x0801 | Input Voltage ± 10 V with transmitter supply | 10.000 |
| 2050 | 0x0802 | Input Voltage ± 100 V | 100.00 |
| 2051 | 0x0803 | Input Voltage ± 300 V | 300.00 |
| | | | |
| Frequency Input | | | |
| 2304 | 0x0900 | Frequency ≤ 200 kHz, Gate time 10 ms, Resolution 100 Hz | 200.0 |
| 2305 | 0x0901 | Frequency ≤ 10 kHz, Gate time 100 ms, Resolution 10 Hz | 10.00 |
| 2306 | 0x0902 | Frequency ≤ 1 kHz, Gate time 1 s, Resolution 1 Hz | 1.000 |
| 2307 | 0x0903 | Frequency ≤ 100 Hz, Gate time 10 s, Resolution 0.1 Hz | 100.0 |
| 2308 | 0x0904 | Frequency ≤ 10 Hz, Gate time 100 s, Resolution 0.01 Hz | 10.00 |
| 2309 | 0x0905 | Frequency ≤ 1 Hz, Gate time 1000 s, Resolution 0.001 Hz | 1.000 |
| | | | |
| PWM Input | | | |
| 2560 | 0x0A00 | Frequency ≤ 10 kHz, Gate time 100 ms, Duty Cycle 1 ... 99 % | 1.00 ... 99.00 |
| 2561 | 0x0A01 | Frequency ≤ 1 kHz, Gate time 1 s, Duty Cycle 1 ... 99 % | 1.00 ... 99.00 |
| 2562 | 0x0A02 | Frequency ≤ 100 Hz, Gate time 10 s, Duty Cycle 1 ... 99 % | 1.00 ... 99.00 |
| 2563 | 0x0A03 | Frequency ≤ 10 Hz, Gate time 100 s, Duty Cycle 1 ... 99 % | 1.00 ... 99.00 |
| 2564 | 0x0A04 | Frequency ≤ 1 Hz, Gate time 1000 s, Duty Cycle 1 ... 99 % | 1.00 ... 99.00 |

Table 02 – Connection / Compensation

| Reg. 42002 | | RTD / Poti | TC CJC | U / I | F / PWM |
|-------------------|--------|------------|--------------------|-----------------|----------------|
| Decimal | Hex | | | | |
| 0 | 0x0000 | 4-wire | intern | DC | NAMUR Contact |
| 1 | 0x0001 | 3-wire | ext. Pt100 2-wire | AC AVG (fast) | SN / Contact |
| 2 | 0x0002 | 2-wire | ext. Pt100 3-wire | AC AVG (normal) | S0 |
| 3 | 0x0003 | | ext. Pt1000 2-wire | AC AVG (slow) | PNP |
| 4 | 0x0004 | | ext. Pt1000 3-wire | AC RMS (fast) | NPN |
| 5 | 0x0005 | | OFF | AC RMS (normal) | 5 V Logic + TX |
| 6 | 0x0006 | | manual | AC RMS (slow) | |
| 7 | 0x0007 | | | | |

DMB 96100 Standard Signal AI Module



| | |
|---|-----------------------------|
| ▪ Precise capture of industrial standard signals | Input |
| ▪ Excellent EMC performance and noise suppression | 0/4 ... 20 mA |
| ▪ Supply of 2/3-wire transmitters | 0/2 ... 10 V |
| ▪ Easy configuration, fast commissioning | 0/1 ... 5 V |
| ▪ Maximum reliability and durability | Additional functions |
| | 16 V Transmitter Supply |

Supported communication features:

Baud rates: 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200

Formats: Parity even, 1 stop bit

Parity odd, 1 stop bit

Parity none, 2 stop bits

Parity none, 1 stop bit (not conform with specification!)

Factory setting: 19200 baud, 8 data bits, parity even, 1 stop bit, Modbus address 1

Supported function codes:

Command 3: 0x03 Read Holding Registers

Command 4: 0x04 Read Input Registers (Firmware 01.7.0 and later)

Command 6: 0x06 Write Single Register

Command 16: 0x10 Write Multiple Registers

Command 43 / 14: 0x2B / 0x0E Read Device Identification

Note: Command 43, subcode 14 (Read Device Identification) supported in the 'Basic' category to allow the device identification.

DMB 96100 DIP settings

Operating modes with DIP switch settings


Input settings

| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|----|--|---|---|---|---|---|---|---|---|---|
| S1 | 1 2 3 4 5 6 7 8 9 0  | | | | | | | | | |
| | Input 0 to 20 mA | | | | | | | | | |
| | Input 0 to 10 V | ■ | | | | | | | | |

Modbus settings

| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|----|---|---|---|---|---|---|---|---|---|---|
| S1 | 1 2 3 4 5 6 7 8 9 0  | | ■ | | | | | | | |
| | 9600 Baud | | | | | | | | | |
| | 19200 Baud | | | | | | | | | |
| | 38400 Baud | | | ■ | | | | | | |
| | 115200 Baud | ■ | ■ | | | | | | | |
| S1 | 1 2 3 4 5 6 7 8 9 0  | | | | | | ■ | | | |
| | Parity even, 1 stop bit | | | | | | | | | |
| | Parity none, 2 stop bits | | | ■ | | | | | | |
| S1 | 1 2 3 4 5 6 7 8 9 0  | | | | | | | | | ■ |
| | Modbus address 1 | | | | | | | | | |
| | 2 | | | | | | | | ■ | |
| | 3 | | | | | | | | ■ | ■ |
| | 4 | | | | | | | ■ | | |
| | 5 | | | | | | | ■ | | ■ |
| | ... | | | | | | | | | |
| | 63 | | | | ■ | ■ | ■ | ■ | ■ | ■ |

Setting via USB interface or Modbus commands

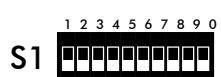

PC Mode

All switches in OFF position

Configuration the Modbus interface or with DRAGOmodbus software

Factory Setting

All switches in OFF position (PC Mode),
the default configuration in PC-Mode:

- Input 0 to 20 mA
- Modbus address 1
- 19200 baud
- Parity even
- 1 stop bit

DMB 96100 Operating modes and examples

Operating modes with DIP switch settings


DIP switch S1-1 switches between voltage input 0 to 10 V and current input 0 to 20 mA.

With the DIP switches S1-2 and S1-3 the baud rate ist selected, with S1-4 the parity bit. The DIP switches S1-5 to S1-10 defines the Modbus address of the device in range of 1 to 63. The Modbus address must be unique in the Modbus segment. For higher adresses you must use the PC mode (see below).

a. Current Input

DIP switch S1-1 is OFF.


The current measuring sets the measured values into holding registers. The **register 40001** (mirrored on **30001**) represents the input current in [μ A] and the **register 40002 (30002)** represents the value as percent [0.1 %] of the input range 0 to 20 mA.

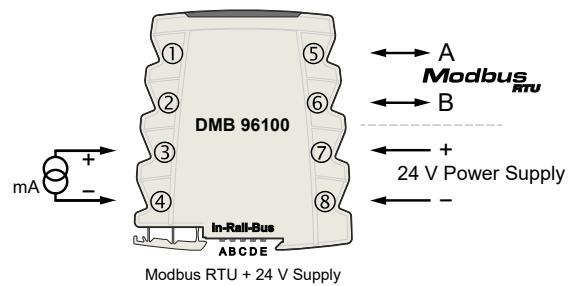

b. Voltage Input

DIP switch S1-1 is ON.

The voltage measuring sets the measured values into holding registers. The **register 40001** (mirrored on **30001**) represents the input voltage in [mV] and the **register 40002 (30002)** represents the value as percent [0.1 %] of the input range 0 to 10 V.

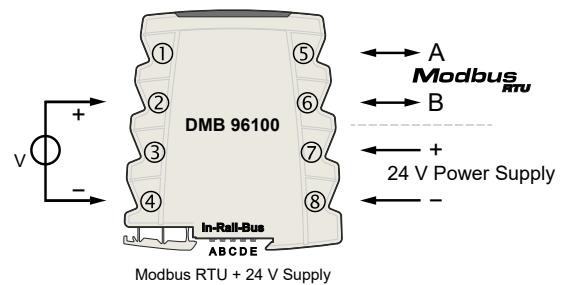


Operating modes with PC mode

All DIP switches must be OFF. Modbus address and all device parameters are set via the Modbus interface or the front USB connector in the holding registers (see holding register map).

a. Current input 0 ... 20 mA

Holding register 42001 = 0x0000

The current measuring sets the measured values into holding registers. The **register 40001** (mirrored on **30001**) represents the input current in [μ A] and the **register 40002 (30002)** represents the value as percent [0.1 %] of the input range 0 to 20 mA.

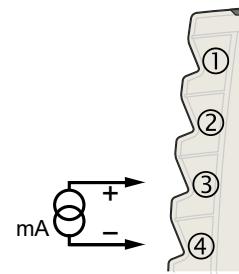



Firmware 01.6.0 and later:

In register **40051 (30051)**, a scaled measured value is available as FLOAT number. Please define the SCALE parameters for input range and the output range in registers 42007 to 42013.

b. Current input 4 ... 20 mA

Holding register 42001 = 0x0001

The current measuring sets the measured values into holding registers. The **register 40001** (mirrored on **30001**) represents the input current in [μ A] and the **register 40002 (30002)** represents the value as percent [0.1 %] of the input range 4 to 20 mA.

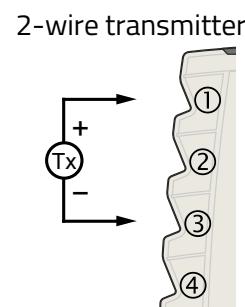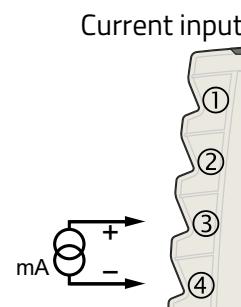

Firmware 01.6.0 and later:

In register **40051 (30051)**, a scaled measured value is available as FLOAT number. Please define the SCALE parameters for input range and the output range in registers 42007 to 42013.

| | | | |
|--------------------------------|--------------|---------|--------------|
| Example for Reg. 40002: | Input 4 mA: | 0.0 % | value = 0 |
| | Input 12 mA: | 50.0 % | value = 500 |
| | Input 20 mA: | 100.0 % | value = 1000 |

Example for scaling the primary value:

At the input we have 4 to 20 mA from a transmitter, the output should indicate the value as 0 to 80 litres. This output value in register 40051 is a float number with decimal places.

Set the SCALE parameters as follows:

- SCALE measured value (start) = 4000

Register
42007

(4000 μ A = 4 mA)

- SCALE measured value (end) = 20000 (20000 μ A = 20 mA) 42009
- SCALE output range (start) = 0 42011
- SCALE output range (end) = 80 42013

c. Voltage input 0 ... 5/10 V (Auto range)


Holding register 42001 = 0x0100

The voltage measuring sets the measured values into holding registers. The **register 40001** (mirrored on **30001**) represents the input voltage in [mV] and the **register 40002 (30002)** represents the value as percent

[0.1 %] of the input range 0 to 10 V. With the autoranging, a higher resolution is achieved below 5 V than in the 10 V fixed range.

Firmware 01.6.0 and later:

A scaled measured value ist available at register **40051 (30051)**, use the SCALE parameters in registers 42007 to 42013.

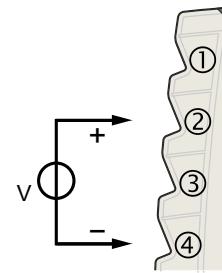


d. Voltage input 0 ... 10 V

Holding register 42001 = 0x0101

The **register 40001** (mirrored on **30001**) represents the input voltage in [mV] and the **register 40002 (30002)** represents the value as percent [0.1 %] of the input range 0 to 10 V.

Firmware 01.6.0 and later:

A scaled measured value ist available at register **40051 (30051)**, use the SCALE parameters in registers 42007 to 42013.

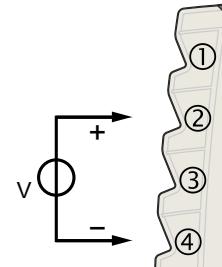

e. Voltage input 2 ... 10 V

Holding register 42001 = 0x0102

The **register 40001** (mirrored on **30001**) represents the input voltage in [mV] and the **register 40002 (30002)** represents the value as percent [0.1 %] of the input range 2 to 10 V.

Firmware 01.6.0 and later:


A scaled measured value ist available at register **40051 (30051)**, use the SCALE parameters in registers 42007 to 42013.

| | | | |
|--------------------|-------------|---------|--------------|
| Example for | Input 2 V: | 0.0 % | value = 0 |
| Reg. 40002: | Input 6 V: | 50.0 % | value = 500 |
| | Input 10 V: | 100.0 % | value = 1000 |

f. **Voltage input 0 ... 5 V**

Holding register 42001 = 0x0103

The **register 40001** (mirrored on **30001**) represents the input voltage in [mV] and the **register 40002 (30002)** represents the value as percent [0.1 %] of the input range 0 to 5 V.

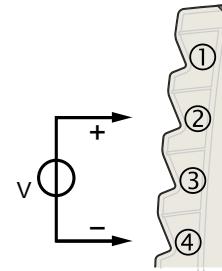

Firmware 01.6.0 and later:

A scaled measured value ist available at register **40051 (30051)**, use the SCALE parameters in registers 42007 to 42013.

g. **Voltage input 1 ... 5 V**

Holding register 42001 = 0x0104

The **register 40001** (mirrored on **30001**) represents the input voltage in [mV] and the **register 40002 (30002)** represents the value as percent [0.1 %] of the input range 1 to 5 V.

Firmware 01.6.0 and later:

A scaled measured value ist available at register **40051 (30051)**, use the SCALE parameters in registers 42007 to 42013.

DMB 96100 input register map

Firmware 01.7.0 and later:

All dynamic measured value registers can be read out with Modbus command 3 as holding register **400xx**, but also with Modbus command 4 as input register **300xx**.

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|------------------------|------|------|----------------------|----------|--------|--------|--|
| | Dec | Hex | | | | | |
| Measured Values | | | | | | | |
| 30001 | 0 | 0000 | Primary Value | 1 | INT16 | R | Primary Value at Voltage: measurement units are [mV] at Current: measurement units are [μ A] |
| 30002 | 1 | 0001 | Secondary Value | 1 | INT16 | R | Secondary Value ([0.1%] of range) Example: Range in Reg. 42001 is 4 ... 20 mA (0x0001) Input 4 mA: 0.0 % value = 0 Input 12 mA: 50.0% value = 500 Input 20 mA: 100.0% value = 1000 |
| 30005 | 4 | 0004 | Status | 1 | BINARY | R | Device status Bit 0 FAIL limit LO active Bit 1 WARN limit LO active Bit 2 WARN limit HI active Bit 3 FAIL limit HI active Bit 4 Error in Primary Value Bit 5 Error in Secondary Value Bit 6 Error in Tertiary Value Bit 7 Error in Quaternary Value Bit 8 Simulation active Bit 9..13 undefined Bit 14 Configuration error Bit 15 System error |
| 30051 | 50 | 0032 | Scaled Primary Value | 2 | FLOAT | R | Firmware 01.6.0 and later: Primary Value scaled with the SCALE parameters at Reg. 42007 to 42013 Float value range according to IEEE 754 |

DMB 96100 holding register map

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|------------------------|------|------|---------------------------|----------|--------|--------|--|
| | Dec | Hex | | | | | |
| Measured Values | | | | | | | |
| 40001 | 0 | 0000 | Primary Value | 1 | INT16 | R | Primary Value at Voltage: measurement units are [mV] at Current: measurement units are [μ A] |
| 40002 | 1 | 0001 | Secondary Value | 1 | INT16 | R | Secondary Value ([0.1%] of range) Example: Range in Reg. 42001 is 4 ... 20 mA (0x0001) Input 4 mA: 0.0 % value = 0 Input 12 mA: 50.0 % value = 500 Input 20 mA: 100.0 % value = 1000 |
| 40003 | 2 | 0002 | Tertiary Value | 1 | INT16 | R | Tertiary Value (at DMB96100 not used) |
| 40004 | 3 | 0003 | Quaternary Value | 1 | INT16 | R | Quaternary Value (at DMB96100 not used) |
| 40005 | 4 | 0004 | Status | 1 | BINARY | R | Device status Bit 0 FAIL limit LO active Bit 1 WARN limit LO active Bit 2 WARN limit HI active Bit 3 FAIL limit HI active Bit 4 Error in Primary Value Bit 5 Error in Secondary Value Bit 6 Error in Tertiary Value Bit 7 Error in Quaternary Value Bit 8 Simulation active Bit 9..13 undefined Bit 14 Configuration error Bit 15 System error |
| | | | | | | | |
| 40051 | 50 | 0032 | Scaled Primary Value | 2 | FLOAT | R | Firmware 01.6.0 and higher: Primary Value scaled with the SCALE parameters at Reg. 42007 to 42013 Float value range according to IEEE 754 |
| | | | | | | | |
| 40101 | 100 | 0064 | current DIP switches | 2 | UINT32 | R | Current DIP switches Bit 0..9 not used Bit 10 S1-1 : Bit 19 S1-10 Bit 20..31 undefined |
| 40103 | 102 | 0066 | current configuration set | 1 | UINT16 | R | currently used configuration set 0x0000 PC setting 0x0010 DIP setting |
| | | | | | | | |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|--|------|------|----------------------------|----------|---------|--------|--|
| | Dec | Hex | | | | | |
| Auxiliary and diagnosis functions | | | | | | | |
| 41201 | 1200 | 0480 | "Here I am" | 1 | UINT16 | W | "Here I am" – Set timer with time in seconds Sets a flashing signal on the green LED for the written timeperiod to find the device in the system |
| 41202 | 1201 | 04B1 | Reset counter | 1 | UINT16 | W | Reset of diagnostic counter |
| | | | | | | | |
| 41211 | 1210 | 04BA | Telegram count | 1 | UINT16 | R | Count of all telegram frames on Modbus |
| 41212 | 1211 | 04BB | MyTelegram count | 1 | UNIT16 | R | Request count for telegram frames on Modbus with own device address |
| 41213 | 1212 | 04BC | Error count | 1 | UINT16 | R | Error count of frames with error |
| | | | | | | | |
| Device data | | | | | | | |
| 43001 | 3000 | 0BB8 | Device identifier | 1 | UINT16 | R | Device identifier: 0x0106 |
| 43002 | 3001 | 0BB9 | Hardware version | 1 | UINT16 | R | Hardware version: 0x0041 (A) |
| 43005 | 3004 | 0BBC | RFID identifier | 8 | 16 Char | R | Unique identifier |
| 43029 | 3028 | 0BD4 | Firmware version | 1 | UINT16 | R | 0x0100 – Example for version 01.0.0 |
| 45151 | 5150 | 141E | Point of measuring | 8 | 16 Char | RW | Point of measuring in ASCII (Tag) |
| | | | | | | | |
| Settings (CONF) | | | | | | | |
| 42001 | 2000 | 07D0 | PC Mode | 1 | UINT16 | RW | Input type setting (programmed by PC) 0x0000 – 0 ... 20 mA 0x0001 – 4 ... 20 mA 0x0100 – 0 ... 5/10 V (Auto range) 0x0101 – 0 ... 10 V 0x0102 – 2 ... 10 V 0x0103 – 0 ... 5 V 0x0104 – 1 ... 5 V other: <i>undefined</i> |
| 42003 | 2002 | 07D2 | FAIL Limit_Low | 1 | INT16 | RW | FAIL limit LO |
| 42004 | 2003 | 07D3 | WARN Limit_Low | 1 | INT16 | RW | WARN limit LO |
| 42005 | 2004 | 07D4 | WARN Limit_High | 1 | INT16 | RW | WARN limit HI |
| 42006 | 2005 | 07D5 | FAIL Limit_High | 1 | INT16 | RW | FAIL limit HI |
| 42007 | 2006 | 07D6 | SCALE measured value start | 2 | FLOAT | RW | Firmware 01.6.0 and higher: Input SCALE-Parameter: Input range e.g. 4000 ... 20000 µA |
| 42009 | 2008 | 07D8 | end | 2 | FLOAT | RW | |
| 42011 | 2010 | 07DA | SCALE output range start | 2 | FLOAT | RW | Firmware 01.6.0 and higher: Output SCALE-Parameter: Output range e.g. 0 ... 80 litre |
| 42013 | 2012 | 07DC | end | 2 | FLOAT | RW | |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|-------------------------------|----------|--------|--------|---|
| | Dec | Hex | | | | | |
| | | | | | | | |
| 42513 | 2512 | 09D0 | DIP Mode | 1 | UINT16 | R | Input type setting (DIP switches) 0x0000 – 0 ... 20 mA 0x0100 – 0 ... 10 V other: <i>undefined</i> |
| | | | | | | | |
| 45001 | 5000 | 1388 | Configuration counter | 1 | UINT16 | R | Counter is incremented internally each write of Conf parameters. The Modbus master can remember this value. As long as the counter has the same value, the configuration is unchanged. |
| 45002 | 5001 | 1389 | Register order | 1 | UINT16 | RW | Order of registers at LONG or FLOAT values <> 0 - HH-HL-LH-LL (default) == 0 - LH-LL-HH-HL |
| 45003 | 5002 | 138A | Date of last modification | 2 | UINT32 | RW | Date (UNIX_TIMESTAMP) last change (Not managed by the device) |
| | | | | | | | |
| 45010 | 5009 | 1391 | Modbus: Address (in PC Mode) | 1 | UINT16 | RW | Modbus address: 1 ... 247 (default = 1) |
| 45011 | 5010 | 1392 | Baud rate (in PC Mode) | 1 | UINT16 | RW | Baud rate: 0x0000 - 300 0x0001 - 600 0x0002 - 1200 0x0003 - 2400 0x0004 - 4800 0x0005 - 9600 0x0006 - 19200 (default) 0x0007 - 38400 0x0008 - 57600 0x0009 - 115200 other: <i>undefined</i> |
| 45012 | 5011 | 1393 | Parity/Stop bits (in PC Mode) | 1 | UINT16 | RW | Parity: 0x0000 - Even, 1 Stop bit (default) 0x0001 - Odd, 1 Stop bit 0x0002 - None, 2 Stop bits 0x0003 - None, 1 Stop bit (no Spec !) (from Firmware 01.4.0) other: <i>undefined</i> |
| 45013 | 5012 | 1394 | Response delay (in PC Mode) | 1 | UINT16 | RW | Delay: 1 ... 1000 ms (default = 1) |
| | | | | | | | |
| 45020 | 5019 | 139B | Modbus: Address (in DIP Mode) | 1 | UINT16 | R | Modbus address: 1 ... 63 |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|-----------------------------------|----------|--------|--------|---|
| | Dec | Hex | | | | | |
| 45021 | 5020 | 139C | Baud rate (in DIP Mode) | 1 | UINT16 | R | Baud rate: 0x0005 - 9600 0x0006 - 19200 0x0007 - 38400 0x0009 - 115200 |
| 45022 | 5021 | 139D | Parity/Stop bits (in DIP Mode) | 1 | UINT16 | R | Parity: 0x0000 - Even, 1 Stop bit 0x0002 - None, 2 Stop bits |
| 45023 | 5022 | 139E | Response delay (in DIP Mode) | 1 | UINT16 | R | Delay: 1 ms at 115200 Baud 3 ms at 38400 Baud 5 ms at 19200 Baud 10 ms at 9600 Baud |
| | | | | | | | |
| 48213 | 8212 | 2014 | Save settings | 1 | UINT16 | W | 0x0043 Speeds up the save procedure of settings. Without this command the device saves changes approx. 5 seconds after the last write of a configuration parameter. |
| | | | | | | | |

DMB 96200 4 Channel AI Module



| | |
|---|-----------------------------|
| ▪ Measuring and processing of 4 industrial standard signals | Input |
| ▪ Each channel programmable as current or voltage input | 0/4 ... 20 mA |
| ▪ All inputs individually safely galvanically isolated | 0/2 ... 10 V |
| ▪ Fast signal acquisition, short processing times | Additional functions |
| ▪ Extremely low costs per input channel | 4 DI 4 DO |

Supported communication features:

Baud rates: 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200

Formats: Parity even, 1 stop bit

Parity odd, 1 stop bit

Parity none, 2 stop bits

Parity none, 1 stop bit (not conform with specification!)

Factory setting: 19200 baud, 8 data bits, parity even, 1 stop bit, Modbus address 1

Supported function codes:

| | | |
|------------------|-------------|--|
| Command 1: | 0x01 | Read Coils |
| Command 2: | 0x02 | Read Discrete Input |
| Command 3: | 0x03 | Read Holding Registers |
| Command 4: | 0x04 | Read Input Registers (Firmware 01.1.0 and later) |
| Command 5: | 0x05 | Write Single Coil |
| Command 6: | 0x06 | Write Single Register |
| Command 15: | 0x0F | Write Multiple Coils |
| Command 16: | 0x10 | Write Multiple Registers |
| Command 43 / 14: | 0x2B / 0x0E | Read Device Identification |

Note: Command 43, subcode 14 (Read Device Identification) supported in the 'Basic' category to allow the device identification.

DMB 96200 DIP settings

Operating modes with DIP switch settings


Input settings

| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|----|----------------------------|---|---|---|---|---|---|---|---|---|
| S1 | 1 2 3 4 5 6 7 8 9 0 | | | | | | | | | |
| | All channels voltage input | | | | | | | | | |
| | All channels current input | ■ | | | | | | | | |

Modbus settings

| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|----|--------------------------|---|---|---|---|---|---|---|---|---|
| S1 | 1 2 3 4 5 6 7 8 9 0 | | ■ | | | | | | | |
| | 9600 Baud | | | | | | | | | |
| | 19200 Baud | | | | | | | | | |
| | 38400 Baud | | | ■ | | | | | | |
| | 115200 Baud | ■ | ■ | | | | | | | |
| S1 | 1 2 3 4 5 6 7 8 9 0 | | | | | | ■ | | | |
| | Parity even, 1 stop bit | | | | | | | | | |
| | Parity none, 2 stop bits | | | | | | | | | |
| S1 | 1 2 3 4 5 6 7 8 9 0 | | | | | | | | | ■ |
| | Modbus address 1 | | | | | | | | | |
| | 2 | | | | | | | | ■ | |
| | 3 | | | | | | | | ■ | ■ |
| | 4 | | | | | | | ■ | | |
| | 5 | | | | | | | ■ | | ■ |
| | ... | | | | | | | ■ | ■ | ■ |
| | 63 | | | | ■ | ■ | ■ | ■ | ■ | ■ |

Setting via USB interface or Modbus commands

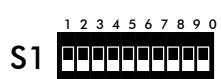

PC Mode

All switches in OFF position

Configuration the Modbus interface or with DRAGOmodbus software

Factory Setting

All switches in OFF position (PC Mode),
the default configuration in PC-Mode:

- All channels voltage input
- Modbus address 1
- 19200 baud
- Parity even
- 1 stop bit

DMB 96200 Operating modes and examples

Operating modes with DIP switch settings

DIP switch S1-1 switches between 4x voltage input 0 to 10 V and 4x current input 0 to 20 mA.

With the DIP switches S1-2 and S1-3 the baud rate ist selected, with S1-4 the parity bit. The DIP switches S1-5 to S1-10 defines the Modbus address of the device in range of 1 to 63.


The Modbus address must be unique in the Modbus segment. For higher adresses you must use the PC mode (see below).

a. Voltage Input

DIP switch S1-1 is OFF.

The voltage measuring sets the measured values into holding registers **40001** to **40004** (mirrored on **30001** to **30004**). The register represents the input voltage in [mV].

In registers **40051** to **40057** (**30051** to **30057**), the measured values are also available as FLOAT numbers in [V].

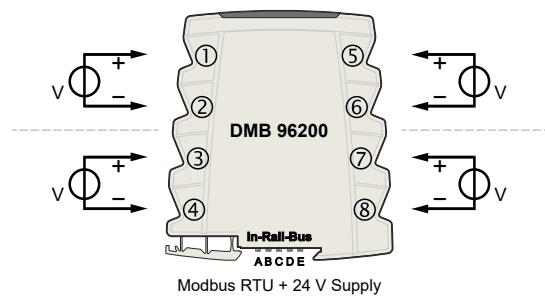


b. Current Input

DIP switch S1-1 is ON.

The current measuring sets the measured values into holding registers **40001** to **40004** (mirrored on **30001** to **30004**). The register represents the input current in [μ A].

In registers **40051** to **40057** (**30051** to **30057**), the measured values are also available as FLOAT numbers in [mA].

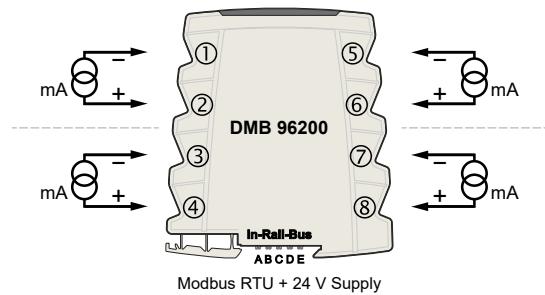


Operating modes with PC mode

All DIP switches must be OFF. Modbus address and all device parameters are set via the Modbus interface or the front USB connector in the holding registers (see holding register map). In PC mode, different functions can be defined for the individual channels. The wiring examples shows channel 1.

¹ The register addresses always refer to channel 1

a. Current input 0 ... 20 mA

Holding register 42001¹ = 0x0000
(other channels: 42101²/42201³/42301⁴)

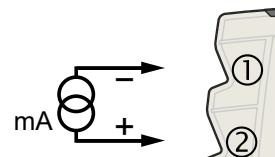

The current measuring sets the measured value into **holding register 40001¹** (mirrored on **30001**).

The register represents the input current in [μ A] as a INT16 number.

In **register 40051 (30051)**, the measured values are also available as FLOAT numbers in [mA]. This measured value can be converted via the SCALE parameters in registers 42003¹ to 42009¹.

For scaling the input range and the output range must be specified in the SCALE parameters.


Example: At the input we have 4 to 20 mA from a transmitter, the output should indicate the value as 0 to 80 litres. This output value in **register 40051¹ (30051)** is a float number with decimal places.

Set the SCALE parameters as follows:

- SCALE measured value (start) = 4000 (4000 μ A = 4 mA)
- SCALE measured value (end) = 20000 (20000 μ A = 20 mA)
- SCALE output range (start) = 0
- SCALE output range (end) = 80

b. Voltage input 0 ... 10 V

Holding register 42001¹ = 0x0100
(other channels: 42101²/42201³/42301⁴)

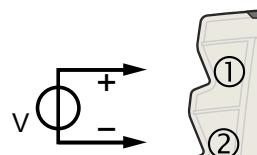


The voltage measuring sets the measured value into **holding register 40001¹** (mirrored on **30001**). The register represents the input voltage in [mV] as a INT16 number.

In **register 40051 (30051)**, the measured values are also available as FLOAT numbers in [V]. This measured value can be converted via the SCALE parameters in registers 42003¹ to 42009¹.

For scaling see the example at current input above.

c. Binary input (switch input)


Holding register 42001¹ = 0x0200
(other channels: 42101²/42201³/42301⁴)

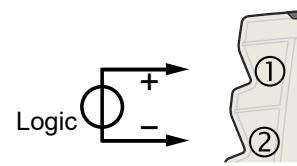

The input level is set in **register 42031**¹ for 5 V- or 12 V/24 V systems. The binary input signal sets the **coil 1**¹ and the corresponding bit in **holding register 40011** as 0 or 1 (mirrored on **30011**).

d. Binary output (switching output)

Holding register 42001¹ = 0x0300
(other channels: 42101²/42201³/42301⁴)

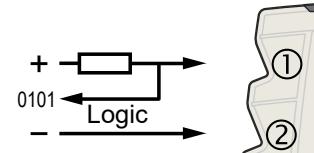


Write **coil 1**¹ or the corresponding bit in **holding register 40011** via Modbus.

The output will follow to 0 or 1.

e. Limit monitoring of channel 1

Holding register 42001¹ = 0x0400
(other channels: 42101²/42201³/42301⁴)


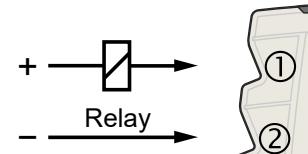


The channel is an output for limit monitoring. The measured value channel 1 (register 40001) is monitored for MIN or MAX alarm.

The monitored channel must be configured as analog input (voltage or current input), otherwise a configuration error will be reported.


Parameters for limit monitoring:

- Trip point in register 42021¹
- Hysteresis in register 42022¹
- Monitoring direction MIN or MAX in register 42023¹
- The alarm state can be inverted via register 42024¹
- In register 42025¹ you define whether an alarm should additionally activate the group message (pin E).

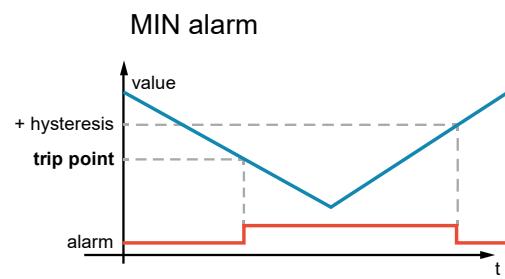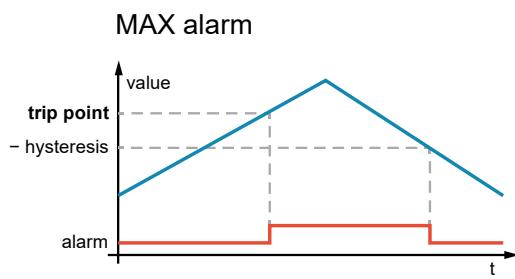

f. Limit monitoring of channel 2

Holding register 42001¹ = 0x0401
(other channels: 42101²/42201³/42301⁴)

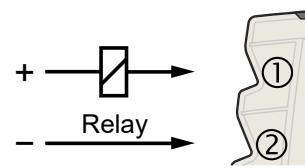


The channel is an output for limit monitoring. The measured value channel 2 (register 40002) is monitored for MIN or MAX alarm (see parameters above).

The monitored channel must be configured as analog input (voltage or current input), otherwise a configuration error will be reported.

g. Limit monitoring of channel 3

Holding register 42001¹ = 0x0402
(other channels: 42101²/42201³/42301⁴)

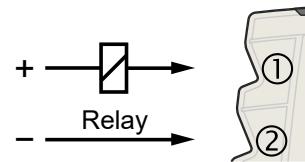


The channel is an output for limit monitoring. The measured value channel 3 (register 40003) is monitored for MIN or MAX alarm (see parameters above).

The monitored channel must be configured as analog input (voltage or current input), otherwise a configuration error will be reported.

h. Limit monitoring of channel 4

Holding register 42001¹ = 0x0403
(other channels: 42101²/42201³/42301⁴)

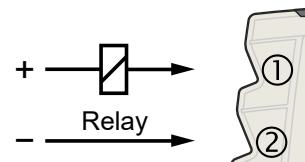


The channel is an output for limit monitoring. The measured value channel 4 (register 40004) is monitored for MIN or MAX alarm (see parameters above).

The monitored channel must be configured as analog input (voltage or current input), otherwise a configuration error will be reported.

i. Limit monitoring an external value

Holding register 42001¹ = 0x0404
(other channels: 42101²/42201³/42301⁴)

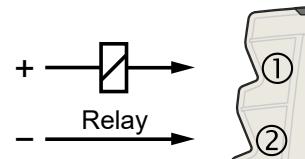

The channel is an output for limit monitoring. The monitored value will be written periodically via Modbus to **register 40001** (if set channel 1) to **register 40004** (if set channel 4). The external value is monitored for MIN or MAX alarm (see parameters above).

¹ The specified register addresses apply to channel 1. At channel 2: +100, channel 3: +200 and channel 4: +300

DMB 96200 coil map

| Coil | Addr | Description | Access | Remarks |
|--------------------------------|------|----------------|--------|----------------------------------|
| Discrete inputs/outputs | | | | |
| 1 | 0 | Input/Output 1 | RW | Binary signal at Input/ Output 1 |
| 2 | 1 | Input/Output 2 | RW | Binary signal at Input/ Output 2 |
| 3 | 2 | Input/Output 3 | RW | Binary signal at Input/ Output 3 |
| 4 | 3 | Input/Output 4 | RW | Binary signal at Input/ Output 4 |

DMB 96200 input register map

Firmware 01.1.0 and later:

All dynamic measured value registers can be read out with Modbus command 3 as holding register **400xx**, but also with Modbus command 4 as input register **300xx**.

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|------------------------|------|------|------------------|----------|--------|--------|--|
| | Dec | Hex | | | | | |
| Measured Values | | | | | | | |
| 30001 | 0 | 0000 | Primary Value | 1 | INT16 | R | Read: Measured value of channel 1 Voltage in [mV], Current in [μ A] |
| 30002 | 1 | 0001 | Secondary Value | 1 | INT16 | R | Channel 2 (for Description see Channel 1) |
| 30003 | 2 | 0002 | Tertiary Value | 1 | INT16 | R | Channel 3 (for Description see Channel 1) |
| 30004 | 3 | 0003 | Quaternary Value | 1 | INT16 | R | Channel 4 (for Description see Channel 1) |
| 30005 | 4 | 0004 | Status | 1 | BINARY | R | Status of values Bit 0 Channel 1 – Range error Bit 1 Channel 2 – Range error Bit 2 Channel 3 – Range error Bit 3 Channel 4 – Range error Bit 4...7 n.c. Bit 8 Ch 1 – Configuration error Bit 9 Ch 2 – Configuration error Bit 10 Ch 3 – Configuration error Bit 11 Ch 4 – Configuration error Bit 12 n.c. Bit 13 Collective message active Bit 14 n.c. Bit 15 Configuration error (total) |
| | | | | | | | |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|-----------------------|----------|--------|--------|--|
| | Dec | Hex | | | | | |
| 30011 | 10 | 000A | Discrete Input/Output | 1 | UINT16 | R | Operation modes: Binary input Bit 0 Input 1 Bit 1 Input 2 Bit 2 Input 3 Bit 3 Input 4 inactive = 0, active = 1 |
| | | | | | | | |
| 30051 | 50 | 0032 | Primary Value | 2 | FLOAT | R | Operation modes: Voltage or current input Measured value channel 1 as [V] or [mA], scaled with the SCALE-Parameter at Reg. 42003-42010 Float value range according to IEEE 754 |
| 30053 | 52 | 0034 | Secondary Value | 2 | FLOAT | R | Channel 2 (for Description see Channel 1) |
| 30055 | 54 | 0036 | Tertiary Value | 2 | FLOAT | R | Channel 3 (for Description see Channel 1) |
| 30057 | 56 | 0038 | Quaternary Value | 2 | FLOAT | R | Channel 4 (for Description see Channel 1) |
| 30059 | 58 | 003A | Status | 1 | UINT16 | R | Status of values (see 30005 for description) |

DMB 96200 holding register map

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|------------------------|------|------|------------------|----------|--------|--------|---|
| | Dec | Hex | | | | | |
| Measured Values | | | | | | | |
| 40001 | 0 | 0000 | Primary Value | 1 | INT16 | RW | Read: Measured value of channel 1 Voltage in [mV], Current in [μ A] Write: Value for limit monitoring channel 1 |
| 40002 | 1 | 0001 | Secondary Value | 1 | INT16 | RW | Channel 2 (for Description see Channel 1) |
| 40003 | 2 | 0002 | Tertiary Value | 1 | INT16 | RW | Channel 3 (for Description see Channel 1) |
| 40004 | 3 | 0003 | Quaternary Value | 1 | INT16 | RW | Channel 4 (for Description see Channel 1) |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|-----------------------|----------|--------|--------|--|
| | Dec | Hex | | | | | |
| 40005 | 4 | 0004 | Status | 1 | BINARY | R | Status of values Bit 0 Channel 1 – Range error Bit 1 Channel 2 – Range error Bit 2 Channel 3 – Range error Bit 3 Channel 4 – Range error Bit 4...7 n.c. Bit 8 Ch 1 – Configuration error Bit 9 Ch 2 – Configuration error Bit 10 Ch 3 – Configuration error Bit 11 Ch 4 – Configuration error Bit 12 n.c. Bit 13 Collective message active Bit 14 n.c. Bit 15 Configuration error (total) |
| | | | | | | | |
| 40011 | 10 | 000A | Discrete Input/Output | 1 | UINT16 | RW | Operation modes: Binary input/output Bit 0 Input/Output 1 Bit 1 Input/Output 2 Bit 2 Input/Output 3 Bit 3 Input/Output 4 inactive = 0, active = 1 |
| | | | | | | | |
| 40051 | 50 | 0032 | Primary Value | 2 | FLOAT | R | Operation modes: Voltage or current input Measured value channel 1 as [V] or [mA], scaled with the SCALE-Parameter at Reg. 42003-42010 Float value range according to IEEE 754 |
| 40053 | 52 | 0034 | Secondary Value | 2 | FLOAT | R | Channel 2 (for Description see Channel 1) |
| 40055 | 54 | 0036 | Tertiary Value | 2 | FLOAT | R | Channel 3 (for Description see Channel 1) |
| 40057 | 56 | 0038 | Quaternary Value | 2 | FLOAT | R | Channel 4 (for Description see Channel 1) |
| 40059 | 58 | 003A | Status | 1 | UINT16 | R | Status of values Bit 0 Channel 1 – Range error Bit 1 Channel 2 – Range error Bit 2 Channel 3 – Range error Bit 3 Channel 4 – Range error Bit 4...7 n.c. Bit 8 Ch 1 – Configuration error Bit 9 Ch 2 – Configuration error Bit 10 Ch 3 – Configuration error Bit 11 Ch 4 – Configuration error Bit 12 n.c. Bit 13 Collective message active Bit 14 n.c. Bit 15 Configuration error (total) |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|--|------|------|---------------------------|----------|---------|--------|---|
| | Dec | Hex | | | | | |
| | | | | | | | |
| 40101 | 100 | 0064 | current DIP switches | 2 | UINT32 | R | <p>Current DIP switch setting</p> <p>Input setting</p> <p>Bit 0 S1-1 off = 4x Voltage on = 4x Current</p> <p>Modbus setting</p> <p>Bit 1/2 S1-2/-3 on/off = 9600 off/on = 19200 off/on = 38400 on/on = 115200</p> <p>Bit 3 S1-4 off = Parity even on = Parity none</p> <p>Bit 4 S1-5 Modbus address</p> <p>: : 1 to 63</p> <p>Bit 9 S1-10</p> <p>all DIPs off: PC mode, settings via Modbus</p> |
| 40103 | 102 | 0066 | current configuration set | 1 | UINT16 | R | <p>currently used configuration set</p> <p>0x0000 PC setting</p> <p>0x0001 DIP setting</p> |
| | | | | | | | |
| Auxiliary and diagnosis functions | | | | | | | |
| 41201 | 1200 | 04B0 | "Here I am" | 1 | UINT16 | W | <p>"Here I am" – Set timer with time in seconds</p> <p>Sets a flashing signal on the green LED for the written timeperiod to find the device in the system</p> |
| 41202 | 1201 | 04B1 | Reset counter | 1 | UINT16 | W | Reset of diagnostic counter |
| | | | | | | | |
| 41211 | 1210 | 04BA | Telegram count | 1 | UINT16 | R | Count of all telegram frames on Modbus |
| 41212 | 1211 | 04BB | MyTelegram count | 1 | UNIT16 | R | Request count for telegram frames on Modbus with own device address |
| 41213 | 1212 | 04BC | Error count | 1 | UINT16 | R | Error count of frames with error |
| | | | | | | | |
| Device data | | | | | | | |
| 43001 | 3000 | 0BB8 | Device identifier | 1 | UINT16 | R | Device identifier: 0x0008 |
| 43002 | 3001 | 0BB9 | Hardware version | 1 | UINT16 | R | Hardware version: e.g. 0x0041 (A) |
| 43005 | 3004 | 0BBC | RFID identifier | 8 | 16 Char | R | Unique identifier |
| 43029 | 3028 | 0BD4 | Firmware version | 1 | UINT16 | R | 0x0100 – Ex. for version 01.0.0 |
| 45151 | 5150 | 141E | Point of measuring | 8 | 16 Char | RW | Point of measuring in ASCII (Tag) |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|------------------------|------|------|----------------------------|----------|--------|--------|---|
| | Dec | Hex | | | | | |
| Settings (CONF) | | | | | | | |
| 42001 | 2000 | 07D0 | mode | 1 | UINT16 | RW | Operation mode channel 1 0x0000 – Current input 0...20mA 0x0100 – Voltage input 0...10V 0x0200 – Input binary 0x0300 – Output binary 0x0400 – Limit monitoring of channel 1 0x0401 – Limit monitoring ch 2 0x0402 – Limit monitoring ch 3 0x0403 – Limit monitoring ch 4 0x0404 – Limit monitoring ext. value written at Reg. 40001 |
| 42002 | 2001 | 07D1 | Input filter | 1 | INT16 | RW | Input filter / Resolution AI 0x0000 – 50 Hz (restless, fast) 0x0001 – 10 Hz (normal) 0x0002 – 2 Hz (quiet, slow) |
| 42003 | 2002 | 07D2 | SCALE measured value start | 2 | FLOAT | RW | Input SCALE-Parameter: Input range e.g. 4000 ... 20000 µA |
| 42005 | 2004 | 07D4 | end | 2 | FLOAT | RW | |
| 42007 | 2006 | 07D6 | SCALE output range start | 2 | FLOAT | RW | Output SCALE-Parameter: Output range e.g. 0 ... 80 litre |
| 42009 | 2008 | 07D8 | end | 2 | FLOAT | RW | |
| 42021 | 2020 | 07E4 | Trip point | 1 | INT16 | RW | Trip point for limit monitoring channel 1 |
| 42022 | 2021 | 07E5 | Hysteresis | 1 | INT16 | RW | Hysteresis for limit monitoring channel 1 |
| 42023 | 2022 | 07E6 | Working direction | 1 | INT16 | RW | Limit monitoring ch 1 Min/Max 0x0000 – MIN 0x0001 – MAX |
| 42024 | 2023 | 07E7 | Inversion | 1 | INT16 | RW | Inverting the alarm state of channel 1 0x0000 – normal (not inverted) 0x0001 – inverted |
| 42025 | 2024 | 07E8 | Group message | 1 | INT16 | RW | Activate the group message (pin E) in case of alarm at channel 1 0x0000 – Off 0x0001 – On |
| 42031 | 2030 | 07EE | Input level | 1 | INT16 | RW | Input level for discrete input at channel 1 0x0000 5 V (<1.5 V >3.5 V) 0x0001 12 V/24 V (<2.0 V >8.4 V) |
| | | | | | | | |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|----------------------------|----------|--------|--------|---|
| | Dec | Hex | | | | | |
| 42101 | 2100 | 0834 | mode | 1 | UINT16 | RW | Operation mode channel 2 0x0000 – Current input 0...20mA 0x0100 – Voltage input 0...10V 0x0200 – Input binary 0x0300 – Output binary 0x0400 – Limit monitoring ch 1 0x0401 – Limit monitoring ch 2 0x0402 – Limit monitoring ch 3 0x0403 – Limit monitoring ch 4 0x0404 – Limit monitoring ext. value written at Reg. 40002 |
| 42102 | 2101 | 0835 | Input filter | 1 | INT16 | RW | Input filter / Resolution AI 0x0000 – 50 Hz (restless, fast) 0x0001 – 10 Hz (normal) 0x0002 – 2 Hz (quiet, slow) |
| 42103 | 2102 | 0836 | SCALE measured value start | 2 | FLOAT | RW | Input SCALE-Parameter: Input range e.g. 4000 ... 20000 µA |
| 42105 | 2104 | 0838 | end | 2 | FLOAT | RW | |
| 42107 | 2106 | 083A | SCALE output range start | 2 | FLOAT | RW | Output SCALE-Parameter: Output range e.g. 0 ... 80 litre |
| 42109 | 2108 | 083C | end | 2 | FLOAT | RW | |
| | | | | | | | |
| 42121 | 2120 | 0848 | Trip point | 1 | INT16 | RW | Trip point for limit monitoring ch 2 |
| 42122 | 2121 | 0849 | Hysteresis | 1 | INT!6 | RW | Hysteresis for limit monitoring ch 2 |
| 42123 | 2122 | 084A | Working direction | 1 | INT16 | RW | Limit monitoring ch 2 Min/Max 0x0000 – MIN 0x0001 – MAX |
| 42124 | 2123 | 084B | Inversion | 1 | INT16 | RW | Inverting the alarm state of ch 2 0x0000 – normal (not inverted) 0x0001 – inverted |
| 42125 | 2124 | 084C | Group message | 1 | INT16 | RW | Activate the group message (pin E) in case of alarm at channel 2 0x0000 – Off 0x0001 – On |
| 42131 | 2130 | 0852 | Input level | 1 | INT16 | RW | Input level for discrete input at ch 2 0x0000 5 V (<1.5 V >3.5 V) 0x0001 12 V/24 V (<2.0 V >8.4 V) |
| | | | | | | | |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|----------------------------|----------|--------|--------|--|
| | Dec | Hex | | | | | |
| 42201 | 2200 | 0898 | mode | 1 | UINT16 | RW | <p>Operation mode channel 3</p> <p>0x0000 – Current input 0...20mA 0x0100 – Voltage input 0... 10V 0x0200 – Input binary 0x0300 – Output binary 0x0400 – Limit monitoring ch 1 0x0401 – Limit monitoring ch 2 0x0402 – Limit monitoring ch 3 0x0403 – Limit monitoring ch 4 0x0404 – Limit monitoring ext. value written at Reg. 40003</p> |
| 42202 | 2201 | 0899 | Input filter | 1 | INT16 | RW | <p>Input filter / Resolution AI</p> <p>0x0000 – 50 Hz (restless, fast) 0x0001 – 10 Hz (normal) 0x0002 – 2 Hz (quiet, slow)</p> |
| 42203 | 2202 | 089A | SCALE measured value start | 2 | FLOAT | RW | Input SCALE-Parameter: |
| 42205 | 2204 | 089C | end | 2 | FLOAT | RW | Input range e.g. 4000 ... 20000 µA |
| 42207 | 2206 | 089E | SCALE output range start | 2 | FLOAT | RW | Output SCALE-Parameter: |
| 42209 | 2208 | 08A0 | end | 2 | FLOAT | RW | Output range e.g. 0 ... 80 litre |
| | | | | | | | |
| 42221 | 2220 | 08AC | Trip point | 1 | INT16 | RW | Trip point for limit monitoring channel 3 |
| 42222 | 2221 | 08AD | Hysteresis | 1 | INT16 | RW | Hysteresis for limit monitoring channel 3 |
| 42223 | 2222 | 08AE | Working direction | 1 | INT16 | RW | Limit monitoring ch 3 Min/Max 0x0000 – MIN 0x0001 – MAX |
| 42224 | 2223 | 08AF | Inversion | 1 | INT16 | RW | Inverting the alarm state of ch 3 0x0000 – normal (not inverted) 0x0001 – inverted |
| 42225 | 2224 | 08B0 | Group message | 1 | INT16 | RW | Activate the group message (pin E) in case of alarm at channel 3 0x0000 – Off 0x0001 – On |
| 42231 | 2230 | 08B6 | Input level | 1 | INT16 | RW | Input level for discrete input at ch 3 0x0000 5 V (<1.5 V >3.5 V) 0x0001 12 V/24 V (<2.0 V >8.4 V) |
| | | | | | | | |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|----------------------------|----------|--------|--------|--|
| | Dec | Hex | | | | | |
| 42301 | 2300 | 08FC | mode | 1 | UINT16 | RW | <p>Operation mode channel 4</p> <p>0x0000 – Current input 0...20mA 0x0100 – Voltage input 0...10V 0x0200 – Input binary 0x0300 – Output binary 0x0400 – Limit monitoring ch 1 0x0401 – Limit monitoring ch 2 0x0402 – Limit monitoring ch 3 0x0403 – Limit monitoring ch 4 0x0404 – Limit monitoring ext. value written at Reg. 40004</p> |
| 42302 | 2301 | 08FD | Input filter | 1 | INT16 | RW | <p>Input filter / Resolution AI</p> <p>0x0000 – 50 Hz (restless, fast) 0x0001 – 10 Hz (normal) 0x0002 – 2 Hz (quiet, slow)</p> |
| 42303 | 2302 | 08FE | SCALE measured value start | 2 | FLOAT | RW | Input SCALE-Parameter: |
| 42305 | 2304 | 0900 | end | 2 | FLOAT | RW | Input range e.g. 4000 ... 20000 µA |
| 42307 | 2306 | 0902 | SCALE output range start | 2 | FLOAT | RW | Output SCALE-Parameter: |
| 42309 | 2308 | 0904 | end | 2 | FLOAT | RW | Output range e.g. 0 ... 80 litre |
| | | | | | | | |
| 42321 | 2320 | 0910 | Trip point | 1 | INT16 | RW | Trip point for limit monitoring ch 4 |
| 42322 | 2321 | 0911 | Hysteresis | 1 | INT16 | RW | Hysteresis for limit monitoring ch 4 |
| 42323 | 2322 | 0912 | Working direction | 1 | INT16 | RW | <p>Limit monitoring channel 4</p> <p>Min/Max</p> <p>0x0000 – MIN 0x0001 – MAX</p> |
| 42324 | 2323 | 0913 | Inversion | 1 | INT16 | RW | Inverting the alarm state of ch 4 |
| | | | | | | | 0x0000 – normal (not inverted) 0x0001 – inverted |
| 42325 | 2324 | 0914 | Group message | 1 | INT16 | RW | Activate the group message (pin E) in case of alarm at channel 4 |
| | | | | | | | 0x0000 – Off 0x0001 – On |
| 42331 | 2330 | 091A | Input level | 1 | INT16 | RW | Input level for discrete input at ch 4 |
| | | | | | | | 0x0000 5 V (<1.5 V >3.5 V) 0x0001 12 V/24 V (<2.0 V >8.4 V) |
| | | | | | | | |
| 42902 | 2901 | 0B55 | Group message ON delay | 1 | INT16 | RW | Response delay of group message in units of [100 ms] default: 0x0005 0.5 s |
| 42903 | 2902 | 0B56 | Group message minTime | 1 | INT16 | RW | Minimum activation time of group message in units of [100 ms] default: 0x0005 0.5 s |
| | | | | | | | |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|-------------------------------|----------|--------|--------|---|
| | Dec | Hex | | | | | |
| 45001 | 5000 | 1388 | Configuration counter | 1 | UINT16 | R | Counter is incremented internally each write of Conf parameters. The Modbus master can remember this value as long as the counter same value, the configuration is unchanged. |
| 45002 | 5001 | 1389 | Register order | 1 | UINT16 | RW | Order of registers at LONG or FLOAT values <> 0 - HH-HL-LH-LL (default) == 0 - LH-LL-HH-HL |
| 45003 | 5002 | 138A | Date of last modification | 2 | UINT32 | RW | Date (UNIX_TIMESTAMP) last change (Not managed by the device) |
| | | | | | | | |
| 45010 | 5009 | 1391 | Modbus: Address (in PC Mode) | 1 | UINT16 | RW | Modbus address: 1 ... 247 (default = 1) |
| 45011 | 5010 | 1392 | Baud rate | 1 | UINT16 | RW | Baud rate: 0x0000 - 300 0x0001 - 600 0x0002 - 1200 0x0003 - 2400 0x0004 - 4800 0x0005 - 9600 0x0006 - 19200 (default) 0x0007 - 38400 0x0008 - 57600 0x0009 - 115200 other: <i>undefined</i> |
| 45012 | 5011 | 1393 | Parity/Stop bits | 1 | UINT16 | RW | Parity: 0x0000 - Even, 1 Stop bit (default) 0x0001 - Odd, 1 Stop bit 0x0002 - None, 2 Stop bits 0x0003 - None, 1 Stop bit (no Spec!) (from Firmware 01.4.0) other: <i>undefined</i> |
| 45013 | 5012 | 1394 | Response delay | 1 | UINT16 | RW | Delay: 1 ... 1000 ms (default = 1) |
| | | | | | | | |
| 45020 | 5019 | 139B | Modbus: Address (in DIP Mode) | 1 | UINT16 | R | Modbus address: 1 ... 63 |
| 45021 | 5020 | 139C | Baud rate | 1 | UINT16 | R | Baud rate: 0x0005 - 9600 0x0006 - 19200 0x0007 - 38400 0x0009 - 115200 |
| 45022 | 5021 | 139D | Parity/Stop bits | 1 | UINT16 | R | Parity: 0x0000 - Even, 1 Stop bit 0x0002 - None, 2 Stop bits |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|----------------|----------|--------|--------|---|
| | Dec | Hex | | | | | |
| 45023 | 5022 | 139E | Response delay | 1 | UINT16 | R | Delay: 1 ms at 115200 Baud 3 ms at 38400 Baud 5 ms at 19200 Baud 10 ms at 9600 Baud |
| 48213 | 8212 | 2014 | Save settings | 1 | UINT16 | W | 0x0043 Speeds up the save procedure of settings. Without this command the device saves changes approx. 5 seconds after the last write of a configuration parameter. |

DMB 96400 4 Channel 2 AI / 2 AO Module



- Measuring and processing of 4 industrial standard signals
- Each AI channel programmable as current or voltage input
- All inputs individually safely galvanically isolated
- Fast signal acquisition, short processing times
- Extremely low costs per input channel

Input / Output

0/4 ... 20 mA

0/2 ... 10 V

Additional functions

2 DI

2 DO

Supported communication features:

Baud rates: 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200

Formats: Parity even, 1 stop bit

Parity odd, 1 stop bit

Parity none, 2 stop bits

Parity none, 1 stop bit (not conform with specification!)

Factory setting: 19200 baud, 8 data bits, parity even, 1 stop bit, Modbus address 1

Supported function codes:

| | | |
|------------------|-------------|--|
| Command 1: | 0x01 | Read Coils |
| Command 2: | 0x02 | Read Discrete Input |
| Command 3: | 0x03 | Read Holding Registers |
| Command 4: | 0x04 | Read Input Registers (Firmware 01.1.0 and later) |
| Command 5: | 0x05 | Write Single Coil |
| Command 6: | 0x06 | Write Single Register |
| Command 15: | 0x0F | Write Multiple Coils |
| Command 16: | 0x10 | Write Multiple Registers |
| Command 43 / 14: | 0x2B / 0x0E | Read Device Identification |

Note: Command 43, subcode 14 (Read Device Identification) supported in the 'Basic' category to allow the device identification.

DMB 96400 DIP settings

Operating modes with DIP switch settings

Input settings for AI 1 and AI 2

| S1 | 1 2 3 4 5 6 7 8 9 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|----|------------------------------|---|---|---|---|---|---|---|---|---|---|
| | Both channels voltage inputs | | | | | | | | | | |
| | Both channels current inputs | ■ | | | | | | | | | |

Output settings for AO 1 and AO 2

| S1 | 1 2 3 4 5 6 7 8 9 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|----|-------------------------------|---|---|---|---|---|---|---|---|---|---|
| | Both channels voltage outputs | | | | | | | | | | |
| | Both channels current outputs | | ■ | | | | | | | | |

Modbus settings

| S1 | 1 2 3 4 5 6 7 8 9 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|----|---------------------|--------------------------|---|---|---|---|---|---|---|---|---|
| | 9600 Baud | | | ■ | | | | | | | |
| | 19200 Baud | | | | | | | | | | |
| | 38400 Baud | | | | ■ | | | | | | |
| | 115200 Baud | | | ■ | ■ | | | | | | |
| S1 | 1 2 3 4 5 6 7 8 9 0 | Parity even, 1 stop bit | | | | | | | | | |
| S1 | 1 2 3 4 5 6 7 8 9 0 | Parity none, 2 stop bits | | | | | ■ | | | | |
| S1 | 1 2 3 4 5 6 7 8 9 0 | Modbus address 1 | | | | | | | | ■ | |
| | 2 | | | | | | | | | ■ | |
| | 3 | | | | | | | | | ■ | ■ |
| | 4 | | | | | | | | ■ | | |
| | 5 | | | | | | | | ■ | | ■ |
| | ... | | | | | | | ■ | ■ | ■ | ■ |
| | 31 | | | | | | | | | | ■ |

Setting via USB interface or Modbus commands

| S1 | 1 2 3 4 5 6 7 8 9 0 | PC Mode |
|----|---------------------|---|
| | | All switches in OFF position |
| | | Configuration the Modbus interface or with DRAGOmodbus software |

Factory Setting

All switches in OFF position (PC Mode),
the default configuration in PC-Mode:

- Voltage inputs
- Voltage outputs
- Modbus address 1
- 19200 baud
- Parity even
- 1 stop bit

DMB 96400 Operating modes and examples

Operating modes with DIP switch settings

DIP switch S1-1 switches between 2x voltage input 0 to 10 V and 2x current input 0 to 20 mA.

DIP switch S1-2 switches between 2x voltage output 0 to 10 V and 2x current output 0 to 20 mA.

With the DIP switches S1-3 and S1-4 the baud rate is selected, with S1-5 the parity bit. The DIP switches S1-6 to S1-10 defines the Modbus address of the device in range of 1 to 31. The Modbus address must be unique in the Modbus segment. For higher addresses you must use the PC mode (see below).


a. Voltage or Current Inputs

DIP switch S1-1 is OFF for voltage inputs and ON for current inputs. The measuring sets the 2 measured values into **holding registers 40001** (mirrored on **30001**) and **40002 (30002)**.

The register represents the input voltage

In **registers 40051 and 40053 (30051 and 30053)**, the measured values are also available as FLOAT numbers in [V] or [mA].


Be aware of the reversed polarity of the voltage and current inputs!

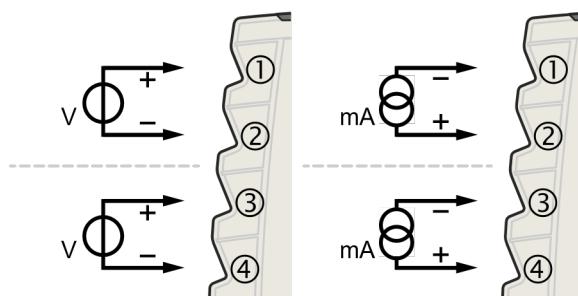

in [mV] or the input current in [μ A].

b. Voltage or Current Outputs

DIP switch S1-2 is OFF for voltage outputs and ON for current outputs. The output follows the value in the **holding registers 40003 and 40004**. The register represents the output in [mV], [μ A] or [0.01 %].

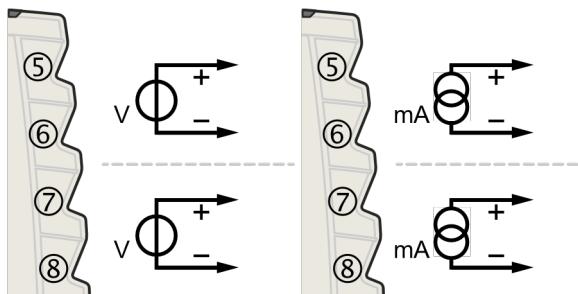

Operating modes with PC mode


All DIP switches must be OFF. Modbus address and all device parameters are set via the Modbus interface or the front USB connector in the holding registers (see holding register map). In PC mode, different functions can be defined for the individual channels. The wiring examples shows channel 1 of input or output.

¹ The register addresses always refer to channel 1

Input channels

a. Current input 0 ... 20 mA

Holding register 42001¹ = 0x0000
(other channel: 42101²)

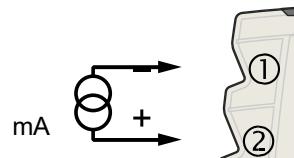

The current measuring sets the measured value into **holding register 40001¹** (mirrored on **30001**). The register represents the input current in [μ A] as a INT16 number.

In **register 40051 (30051)**, the measured values are also available as FLOAT numbers in [mA]. This measured value can be converted via the SCALE parameters in registers 42003¹ to 42009¹.

For scaling the input range and the output range must be specified in the SCALE parameters.


Example: At the input we have 4 to 20 mA from a transmitter, the output should indicate the value as 0 to 80 litres. This output value in **register 40051¹ (30051)** is a float number with decimal places.

Set the SCALE parameters as follows:

- SCALE measured value (start) = 4000 (4000μ A = 4 mA)
- SCALE measured value (end) = 20000 (20000μ A = 20 mA)
- SCALE output range (start) = 0
- SCALE output range (end) = 80

b. Voltage input 0 ... 10 V

Holding register 42001¹ = 0x0100
(other channel: 42101²)

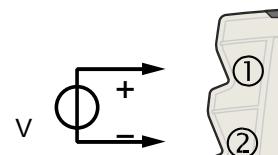


The voltage measuring sets the measured value into **holding register 40001¹** (mirrored on **30001**). The register represents the input voltage in [mV] as a INT16 number.

In **register 40051 (30051)**, the measured values are also available as FLOAT numbers in [V]. This measured value can be converted via the SCALE parameters in registers 42003¹ to 42009¹.

For scaling see the example at current input above.

c. Binary input (switch input)


Holding register 42001¹ = 0x0200
(other channel: 42101²)

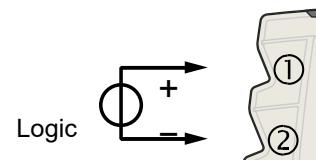

The input level is set in **register 42031¹** for 5 V- or 12 V/24 V systems. The binary input signal sets the **coil 1¹** and the corresponding bit in **holding register 40011** as 0 or 1 (mirrored on **30011**).

d. Binary output (switching output)


Holding register 42001¹ = 0x0300
(other channel: 42101)

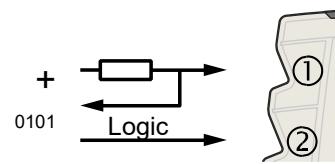

Write **coil 1¹** or the corresponding bit in **holding register 40011** via Modbus. The output will follow to 0 or 1.

e. Limit monitoring of AI channel

Holding register 42001¹ = 0x0400 for monitoring channel AI 1 +
0x0401 for monitoring channel AI 2

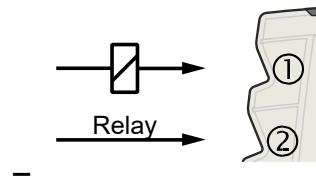

(other channel: 42101)

The channel is an output for limit monitoring. The measured value channel 1 (register 40001) is monitored for MIN or MAX alarm.


The monitored channel must be configured as analog input (voltage or current input), otherwise a configuration error will be reported.

Parameters for limit monitoring:

- Trip point in register 42021¹
- Hysteresis in register 42022¹
- Monitoring direction MIN or MAX in register 42023¹
- The alarm state can be inverted via register 42024¹
- In register 42025¹ you define whether an alarm should additionally activate the group message (pin E).

MAX alarm


MIN alarm

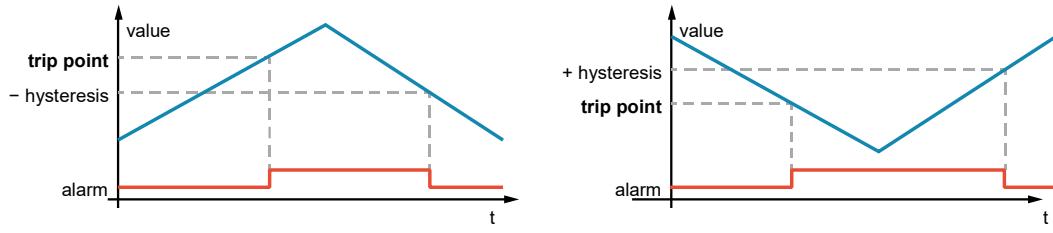

f. Limit monitoring an external value

Holding register 42001¹ = 0x0404

(other channel: 42101)

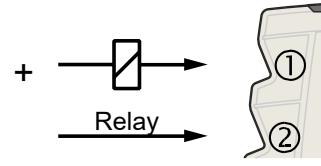

The channel is an output for limit monitoring. The monitored value will be written periodically via Modbus to **register 40001** (if set channel AI 1) to **register 40002** (if set channel AI 2). The external value is monitored for MIN or MAX alarm (see parameters above).

Output channels

a. Current output 0 ... 20 mA


Holding register 42401¹ = 0x0000 for INT16 values in [μ A]

0x0001 for INT16 values in [0.01 %]

0x0010 for FLOAT values in [mA]

0x0011 for FLOAT values in [%]

(other channel: 42501²)

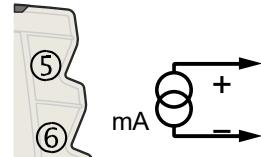

The current output follows the INT16 value into **holding register 40003**¹ or the FLOAT value into **register 40055**¹. The holding register is set via Modbus in [μ A] or [0.01 %] as a INT16 number or alternatively as FLOAT value in [mA] or [%].

A timeout monitoring can be activated for each output. After an adjustable time without receiving a new output value, the output is reset to a programmable init value:

Timeout defined in **holding register 42402**¹:

- 0 – Timeout OFF, the output value remains until it is overwritten
- 1 ... – Timeout in steps of [100 ms]


The **init value** in **holding register 42403**¹ is set at device startup and if the timeout elapsed. Set the init value as FLOAT in [mA] or [%].

b. Current output of AI input value

Holding register 42401¹ = 0x0020 values from channel AI 1

0x0021 values from channel AI 2

(other channel: 42501²)

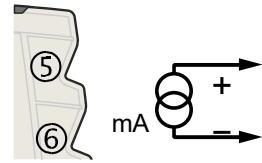

The current output directly follows the AI input channel of the device. No Modbus communications are required. The input measured value can be read via Modbus.

c. Voltage output 0 ... 10 V


Holding register 42401¹ = 0x0100 for INT16 values in [mV]

0x0101 for INT16 values in [0.01 %]

0x0110 for FLOAT values in [V]

0x0111 for FLOAT values in [%]

(other channel: 42501²)

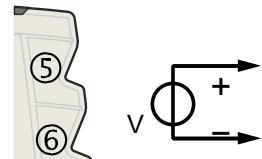

The voltage output follows the INT16 value into **holding register 40003**¹ or the FLOAT value into register **40055**¹. The holding register is set via Modbus in [mV] or [0.01 %] as a INT16 number or alternatively as FLOAT value in [V] or [%].

A timeout monitoring can be activated for each output. After an adjustable time without receiving a new output value, the output is reset to a programmable init value:

Timeout defined in **holding register 42402**¹:

0 – Timeout OFF, the output value remains until it is overwritten

1 ... – Timeout in steps of [100 ms]

The **init value** in **holding register 42403**¹ is set at device startup and if the timeout elapsed.


Set the init value as FLOAT in [V] or [%].

d. Voltage output of AI input value

Holding register 42401¹ = 0x0120 values from channel AI 1

0x0121 values from channel AI 2

(other channel: 42501²)

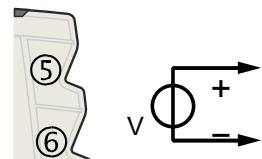

¹ The specified register addresses apply to channel AI 1. At channel AI 2: +100

The voltage output directly follows the AI input channel of the device. No Modbus communications are required. The input measured value can be read via Modbus.

DMB 96400 coil map

| Coil | Addr | Description | Access | Remarks |
|-------------------------|------|-------------|--------|---------------------------|
| Discrete outputs | | | | |
| 1 | 0 | Output 1 | RW | Binary signal at Output 1 |
| 2 | 1 | Output 2 | RW | Binary signal at Output 2 |

DMB 96400 input register map

Firmware 01.1.0 and later:

All dynamic measured value registers can be read out with Modbus command 3 as holding register **400xx**, but also with Modbus command 4 as input register **300xx**.

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|------------------------|------|------|-----------------------|----------|--------|--------|---|
| | Dec | Hex | | | | | |
| Measured Values | | | | | | | |
| 30001 | 0 | 0000 | Primary Value | 1 | INT16 | R | Read: Measured value of channel AI 1 Voltage in [mV], Current in [μ A] |
| 30002 | 1 | 0001 | Secondary Value | 1 | INT16 | R | Measured value of channel AI 2 (for Description see Channel 1) |
| 30005 | 4 | 0004 | Status | 1 | BINARY | R | Status of values Bit 0 Channel 1 – Range error Bit 1 Channel 2 – Range error Bit 2...3 n.c. Bit 4 Timeout AO 1 Bit 5 Timeout AO 2 Bit 6...7 n.c. Bit 8 Ch AI 1 – Configuration error Bit 9 Ch AI 2 – Configuration error Bit 10 Ch AO 1 – Configuration error Bit 11 Ch AO 2 – Configuration error Bit 12 n.c. Bit 13 Colletive message active Bit 14 n.c. Bit 15 Configuration error (total) |
| | | | | | | | |
| 30011 | 10 | 000A | Discrete Input/Output | 1 | UINT16 | R | Operation modes: Binary input Bit 0 Input 1 Bit 1 Input 2 inactive = 0, active = 1 The bits have only effect, if the channel is set as a binary output (0x0300) |
| | | | | | | | |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|-----------------|----------|--------|--------|--|
| | Dec | Hex | | | | | |
| 30051 | 50 | 0032 | Primary Value | 2 | FLOAT | R | Measured value channel AI 1 as [V] or [mA], scaled with the SCALE-Parameter at Reg. 42003-42010 Float value range according to IEEE 754 |
| 30053 | 52 | 0034 | Secondary Value | 2 | FLOAT | R | Measured value channel AI 2 (for Description see channel AI 1) |
| 30059 | 58 | 003A | Status | 1 | UINT16 | R | Status of values (see 30005 for description) |

DMB 96400 holding register map

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|------------------------|------|------|------------------|----------|--------|--------|---|
| | Dec | Hex | | | | | |
| Measured Values | | | | | | | |
| 40001 | 0 | 0000 | Primary Value | 1 | INT16 | RW | Read: Measured value of channel AI 1 Voltage in [mV], Current in [μ A] Write: Value for limit monitoring channel 1 for external signals |
| 40002 | 1 | 0001 | Secondary Value | 1 | INT16 | RW | Measured value of channel AI 2 (for Description see Channel 1) |
| 40003 | 2 | 0002 | Tertiary Value | 1 | INT16 | RW | Output channel AO 1 Write: Output value Voltage in [mV], Current in [μ A], percent [0.01 %] |
| 40004 | 3 | 0003 | Quaternary Value | 1 | INT16 | RW | Output channel AO 2 (for Description see channel AO 1) |
| 40005 | 4 | 0004 | Status | 1 | BINARY | R | Status of values Bit 0 Channel 1 – Range error Bit 1 Channel 2 – Range error Bit 2...3 n.c. Bit 4 Timeout AO 1 Bit 5 Timeout AO 2 Bit 6...7 n.c. Bit 8 Ch AI 1 – Configuration error Bit 9 Ch AI 2 – Configuration error Bit 10 Ch AO 1 – Configuration error Bit 11 Ch AO 2 – Configuration error Bit 12 n.c. Bit 13 Colletive message active Bit 14 n.c. Bit 15 Configuration error (total) |
| | | | | | | | |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|--|------|------|---------------------------|----------|--------|--------|--|
| | Dec | Hex | | | | | |
| 40011 | 10 | 000A | Discrete Input/Output | 1 | UINT16 | RW | Operation modes: Binary input/output Bit 0 Input/Output 1 Bit 1 Input/Output 2 inactive = 0, active = 1 The bits have only effect, if the channel is set as a binary output (0x0300) |
| | | | | | | | |
| 40051 | 50 | 0032 | Primary Value | 2 | FLOAT | R | Measured value channel AI 1 as [V] or [mA], scaled with the SCALE-Parameter at Reg. 42003-42010 Float value range according to IEEE 754 |
| 40053 | 52 | 0034 | Secondary Value | 2 | FLOAT | R | Measured value channel AI 2 (for Description see channel AI 1) |
| 40055 | 54 | 0036 | Tertiary Value | 2 | FLOAT | RW | Output channel AO 1 Write output value Voltage in [V], Current in [mA], percent [%] |
| 40057 | 56 | 0038 | Quaternary Value | 2 | FLOAT | RW | Output channel AO 2 (for Description see channel AO 1) |
| 40059 | 58 | 003A | Status | 1 | UINT16 | R | Status of values (see 40005 for description) |
| | | | | | | | |
| 40101 | 100 | 0064 | current DIP switches | 2 | UINT32 | R | Current DIP switch setting Bit 0 S1-1 off = 2x Voltage input on = 2x Current input Bit 1 S1-2 off = 2x Voltage output on = 2x Current output Bit 2/3 S1-3/-4 on/off = 9600 baud off/off = 19200 baud off/on = 38400 baud on/on = 115200 baud Bit 4 S1-5 off = Parity even on = Parity none Bit 5 S1-6 Modbus address : : 1 to 31 Bit 9 S1-10 all DIPs off: PC mode, settings via Modbus |
| 40103 | 102 | 0066 | current configuration set | 1 | UINT16 | R | currently used configuration set 0x0000 PC setting 0x0001 DIP setting |
| | | | | | | | |
| Auxiliary and diagnosis functions | | | | | | | |
| 41201 | 1200 | 04B0 | "Here I am" | 1 | UINT16 | W | "Here I am" – Set timer with time in seconds Sets a flashing signal on the green LED for the written timeperiod to find the device in the system |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|------------------------|------|------|----------------------------|----------|---------|--------|---|
| | Dec | Hex | | | | | |
| 41202 | 1201 | 04B1 | Reset counter | 1 | UINT16 | W | Reset of diagnostic counter |
| | | | | | | | |
| 41211 | 1210 | 04BA | Telegram count | 1 | UINT16 | R | Count of all telegram frames on Modbus |
| 41212 | 1211 | 04BB | MyTelegram count | 1 | UNIT16 | R | Request count for telegram frames on Modbus with own device address |
| 41213 | 1212 | 04BC | Error count | 1 | UINT16 | R | Error count of frames with error |
| | | | | | | | |
| Device data | | | | | | | |
| 43001 | 3000 | 0BB8 | Device identifier | 1 | UINT16 | R | Device identifier: 0x000D |
| 43002 | 3001 | 0BB9 | Hardware version | 1 | UINT16 | R | Hardware version: e.g. 0x0041 (A) |
| 43005 | 3004 | 0BBC | RFID identifier | 8 | 16 Char | R | Unique identifier |
| 43029 | 3028 | 0BD4 | Firmware version | 1 | UINT16 | R | 0x0100 – Example for version 01.0.0 |
| 45151 | 5150 | 141E | Point of measuring | 8 | 16 Char | RW | Point of measuring in ASCII (Tag) |
| | | | | | | | |
| Settings (CONF) | | | | | | | |
| 42001 | 2000 | 07D0 | mode | 1 | UINT16 | RW | Operation mode channel AI 1 0x0000 – Current input 0 ... 20 mA 0x0100 – Voltage input 0 ... 10 V 0x0200 – Input binary 0x0300 – Output binary 0x0400 – Limit monitoring channel AI 1 0x0401 – Limit monitoring channel AI 2 0x0404 – Limit monitoring of external value written at Reg. 40001 |
| 42002 | 2001 | 07D1 | Input filter | 1 | INT16 | RW | Input filter / Resolution AI 1 0x0000 – 50 Hz (restless, fast) 0x0001 – 10 Hz (normal) 0x0002 – 2 Hz (quiet, slow) |
| 42003 | 2002 | 07D2 | SCALE measured value start | 2 | FLOAT | RW | Input AI 1 SCALE-Parameter: Input range e.g. 4000 ... 20000 µA |
| 42005 | 2004 | 07D4 | end | 2 | FLOAT | RW | |
| 42007 | 2006 | 07D6 | SCALE output range start | 2 | FLOAT | RW | Output AI 1 SCALE-Parameter: Output range e.g. 0 ... 80 litre |
| 42009 | 2008 | 07D8 | end | 2 | FLOAT | RW | |
| | | | | | | | |
| 42021 | 2020 | 07E4 | Trip point | 1 | INT16 | RW | Trip point for limit monitoring channel AI 1 |
| 42022 | 2021 | 07E5 | Hysteresis | 1 | INT16 | RW | Hysteresis for limit monitoring ch AI 1 |
| 42023 | 2022 | 07E6 | Working direction | 1 | INT16 | RW | Limit monitoring channel AI 1 Min/Max 0x0000 – MIN 0x0001 – MAX |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|----------------------------|----------|--------|--------|---|
| | Dec | Hex | | | | | |
| 42024 | 2023 | 07E7 | Inversion | 1 | INT16 | RW | Inverting the alarm state of channel AI 1 0x0000 – normal (not inverted) 0x0001 – inverted |
| 42025 | 2024 | 07E8 | Group message | 1 | INT16 | RW | Activate the group message (pin E) in case of alarm at channel AI 1 0x0000 – Off 0x0001 – On |
| 42031 | 2030 | 07EE | Input level | 1 | INT16 | RW | Input level for discrete input at ch AI 1 0x0000 5 V (<1.5 V >3.5 V) 0x0001 12 V/24 V(<2.0 V >8.4 V) |
| | | | | | | | |
| 42101 | 2100 | 0834 | mode | 1 | UINT16 | RW | Operation mode channel AI 2 0x0000 – Current input 0 ... 20 mA 0x0100 – Voltage input 0 ... 10 V 0x0200 – Input binary 0x0300 – Output binary 0x0400 – Limit monitoring channel AI 1 0x0401 – Limit monitoring channel AI 2 0x0404 – Limit monitoring of external value written at Reg. 40002 |
| 42102 | 2101 | 0835 | Input filter | 1 | INT16 | RW | Input filter / Resolution AI 2 0x0000 – 50 Hz (restless, fast) 0x0001 – 10 Hz (normal) 0x0002 – 2 Hz (quiet, slow) |
| 42103 | 2102 | 0836 | SCALE measured value start | 2 | FLOAT | RW | Input AI 2 SCALE-Parameter: Input range e.g. 4000 ... 20000 µA |
| 42105 | 2104 | 0838 | end | 2 | FLOAT | RW | |
| 42107 | 2106 | 083A | SCALE output range start | 2 | FLOAT | RW | Output AI 2 SCALE-Parameter: Output range e.g. 0 ... 80 litre |
| 42109 | 2108 | 083C | end | 2 | FLOAT | RW | |
| | | | | | | | |
| 42121 | 2120 | 0848 | Trip point | 1 | INT16 | RW | Trip point for limit monitoring channel AI 2 |
| 42122 | 2121 | 0849 | Hysteresis | 1 | INT16 | RW | Hysteresis for limit monitoring ch AI 2 |
| 42123 | 2122 | 084A | Working direction | 1 | INT16 | RW | Limit monitoring channel AI 2 Min/Max 0x0000 – MIN 0x0001 – MAX |
| 42124 | 2123 | 084B | Inversion | 1 | INT16 | RW | Inverting the alarm state of channel AI 2 0x0000 – normal (not inverted) 0x0001 – inverted |
| 42125 | 2124 | 084C | Group message | 1 | INT16 | RW | Activate the group message (pin E) in case of alarm at channel AI 2 0x0000 – Off 0x0001 – On |
| 42131 | 2130 | 0852 | Input level | 1 | INT16 | RW | Input level for discrete input at ch AI 2 0x0000 5 V (<1.5 V >3.5 V) 0x0001 12 V/24 V(<2.0 V >8.4 V) |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks | | | | | | | | | | | | | | | | | | | | | | | | | | |
|------------------|-----------------------|------|-------------|----------|--------|--------|---|------|---------------|------------------|-----------------------|----------|-------------------|----------|-------------------|----------|-------------------|----------|------------------|----------|------------------|------------------|--------------------|----------|-------------------|----------|------------------|----------|-------------------|----------|------------------|----------|------------------|
| | Dec | Hex | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 42401 | 2400 | 0960 | mode | 1 | UINT16 | RW | <p>Operation mode channel AO 1</p> <table> <thead> <tr> <th>Reg.</th> <th>Range</th> </tr> </thead> <tbody> <tr> <td>0x0000 – Current</td> <td>40003 0...20000 µA</td> </tr> <tr> <td>0x0001 –</td> <td>40003 0...10000 %</td> </tr> <tr> <td>0x0010 –</td> <td>40055 0...20.0 mA</td> </tr> <tr> <td>0x0011 –</td> <td>40055 0...100.0 %</td> </tr> <tr> <td>0x0020 –</td> <td>Output from AI 1</td> </tr> <tr> <td>0x0021 –</td> <td>Output from AI 2</td> </tr> <tr> <td>0x0100 – Voltage</td> <td>40003 0...10000 mV</td> </tr> <tr> <td>0x0101 –</td> <td>40003 0...10000 %</td> </tr> <tr> <td>0x0110 –</td> <td>40055 0...10.0 V</td> </tr> <tr> <td>0x0111 –</td> <td>40055 0...100.0 %</td> </tr> <tr> <td>0x0120 –</td> <td>Output from AI 1</td> </tr> <tr> <td>0x0121 –</td> <td>Output from AI 2</td> </tr> </tbody> </table> | Reg. | Range | 0x0000 – Current | 40003 0...20000 µA | 0x0001 – | 40003 0...10000 % | 0x0010 – | 40055 0...20.0 mA | 0x0011 – | 40055 0...100.0 % | 0x0020 – | Output from AI 1 | 0x0021 – | Output from AI 2 | 0x0100 – Voltage | 40003 0...10000 mV | 0x0101 – | 40003 0...10000 % | 0x0110 – | 40055 0...10.0 V | 0x0111 – | 40055 0...100.0 % | 0x0120 – | Output from AI 1 | 0x0121 – | Output from AI 2 |
| Reg. | Range | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0000 – Current | 40003 0...20000 µA | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0001 – | 40003 0...10000 % | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0010 – | 40055 0...20.0 mA | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0011 – | 40055 0...100.0 % | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0020 – | Output from AI 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0021 – | Output from AI 2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0100 – Voltage | 40003 0...10000 mV | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0101 – | 40003 0...10000 % | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0110 – | 40055 0...10.0 V | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0111 – | 40055 0...100.0 % | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0120 – | Output from AI 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0121 – | Output from AI 2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 42402 | 2401 | 0961 | timeout1 | 1 | INT16 | RW | <p>Timeout for AI 1, sets the output to the init value after the time has elapsed without new value.</p> <table> <thead> <tr> <th>0</th> <th>– Timeout OFF</th> </tr> <tr> <th>1 ...</th> <th>– Timeout xxx [0.1 s]</th> </tr> </thead> </table> | 0 | – Timeout OFF | 1 ... | – Timeout xxx [0.1 s] | | | | | | | | | | | | | | | | | | | | | | |
| 0 | – Timeout OFF | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 ... | – Timeout xxx [0.1 s] | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 42403 | 2402 | 0962 | out_init1 | 2 | FLOAT | RW | <p>Init value for the output AO 1, is set after device start and after the timeout has elapsed.</p> <p>[%] or [V]/[mA] depending on mode</p> | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 42501 | 2500 | 09C4 | mode | 1 | UINT16 | RW | <p>Operation mode channel AO 2</p> <table> <thead> <tr> <th>Reg.</th> <th>Range</th> </tr> </thead> <tbody> <tr> <td>0x0000 – Current</td> <td>40003 0...20000 µA</td> </tr> <tr> <td>0x0001 –</td> <td>40003 0...10000 %</td> </tr> <tr> <td>0x0010 –</td> <td>40055 0...20.0 mA</td> </tr> <tr> <td>0x0011 –</td> <td>40055 0...100.0 %</td> </tr> <tr> <td>0x0020 –</td> <td>Output from AI 1</td> </tr> <tr> <td>0x0021 –</td> <td>Output from AI 2</td> </tr> <tr> <td>0x0100 – Voltage</td> <td>40003 0...10000 mV</td> </tr> <tr> <td>0x0101 –</td> <td>40003 0...10000 %</td> </tr> <tr> <td>0x0110 –</td> <td>40055 0...10.0 V</td> </tr> <tr> <td>0x0111 –</td> <td>40055 0...100.0 %</td> </tr> <tr> <td>0x0120 –</td> <td>Output from AI 1</td> </tr> <tr> <td>0x0121 –</td> <td>Output from AI 2</td> </tr> </tbody> </table> | Reg. | Range | 0x0000 – Current | 40003 0...20000 µA | 0x0001 – | 40003 0...10000 % | 0x0010 – | 40055 0...20.0 mA | 0x0011 – | 40055 0...100.0 % | 0x0020 – | Output from AI 1 | 0x0021 – | Output from AI 2 | 0x0100 – Voltage | 40003 0...10000 mV | 0x0101 – | 40003 0...10000 % | 0x0110 – | 40055 0...10.0 V | 0x0111 – | 40055 0...100.0 % | 0x0120 – | Output from AI 1 | 0x0121 – | Output from AI 2 |
| Reg. | Range | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0000 – Current | 40003 0...20000 µA | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0001 – | 40003 0...10000 % | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0010 – | 40055 0...20.0 mA | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0011 – | 40055 0...100.0 % | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0020 – | Output from AI 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0021 – | Output from AI 2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0100 – Voltage | 40003 0...10000 mV | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0101 – | 40003 0...10000 % | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0110 – | 40055 0...10.0 V | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0111 – | 40055 0...100.0 % | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0120 – | Output from AI 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0x0121 – | Output from AI 2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 42502 | 2501 | 09C5 | timeout2 | 1 | INT16 | RW | <p>Timeout for AI 2, sets the output to the init value after the time has elapsed without new value.</p> <table> <thead> <tr> <th>0</th> <th>– Timeout OFF</th> </tr> <tr> <th>1 ...</th> <th>– Timeout xxx [0.1 s]</th> </tr> </thead> </table> | 0 | – Timeout OFF | 1 ... | – Timeout xxx [0.1 s] | | | | | | | | | | | | | | | | | | | | | | |
| 0 | – Timeout OFF | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 ... | – Timeout xxx [0.1 s] | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 42503 | 2502 | 09C6 | out_init2 | 2 | FLOAT | RW | <p>Init value for the output AO 2, is set after device start and after the timeout has elapsed.</p> <p>[%] or [V]/[mA] depending on mode</p> | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|------------------------------|----------|--------|--------|--|
| | Dec | Hex | | | | | |
| | | | | | | | |
| 42901 | 2900 | 0B54 | Fault mask | 1 | UINT16 | RW | <p>Group message bit mask</p> <p>Bit 0 – limit AI 1 (set 42025)</p> <p>Bit 1 – limit AI 2 (set 42125)</p> <p>Bit 2 – timeout AO 1 (set 42402)</p> <p>Bit 3 – timeout AO 2 (set 42502)</p> <p>Bit 4 – no supply (always active)</p> <p>Bit 5 – n.c.</p> <p>Bit 6 – device error</p> <p>Bit 7 – invalid DIP setting</p> <p>Bit 8 – configuration error</p> <p>Bit 9...15 – n.c.</p> <p>default: 0x01D0</p> |
| 42902 | 2901 | 0B55 | Group message ON delay | 1 | INT16 | RW | <p>Response delay of group message in units of [100 ms]</p> <p>default: 0x0005 0.5 s</p> |
| 42903 | 2902 | 0B56 | Group message minTime | 1 | INT16 | RW | <p>Minimum activation time of group message in units of [100 ms]</p> <p>default: 0x0005 0.5 s</p> |
| | | | | | | | |
| 45001 | 5000 | 1388 | Configuration counter | 1 | UINT16 | R | <p>Counter is incremented internally each write of Conf parameters.</p> <p>The Modbus master can remember this value as long as the counter same value, the configuration is unchanged.</p> |
| 45002 | 5001 | 1389 | Register order | 1 | UINT16 | RW | <p>Order of registers at LONG or FLOAT values</p> <p><> 0 - HH-HL-LH-LL (default)</p> <p>== 0 - LH-LL-HH-HL</p> |
| 45003 | 5002 | 138A | Date of last modification | 2 | UINT32 | RW | <p>Date (UNIX_TIMESTAMP) last change (Not managed by the device)</p> |
| | | | | | | | |
| 45010 | 5009 | 1391 | Modbus: Address (in PC Mode) | 1 | UINT16 | RW | Modbus address: 1 ... 247 (default = 1) |
| 45011 | 5010 | 1392 | Baud rate | 1 | UINT16 | RW | <p>Baud rate:</p> <p>0x0000 - 300</p> <p>0x0001 - 600</p> <p>0x0002 - 1200</p> <p>0x0003 - 2400</p> <p>0x0004 - 4800</p> <p>0x0005 - 9600</p> <p>0x0006 - 19200 (default)</p> <p>0x0007 - 38400</p> <p>0x0008 - 57600</p> <p>0x0009 - 115200</p> <p>other: <i>undefined</i></p> |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|-------------------------------|----------|--------|--------|---|
| | Dec | Hex | | | | | |
| 45012 | 5011 | 1393 | Parity/Stop bits | 1 | UINT16 | RW | Parity: 0x0000 - Even, 1 Stop bit (default) 0x0001 - Odd, 1 Stop bit 0x0002 - None, 2 Stop bits 0x0003 - None, 1 Stop bit (no Spec !) (from Firmware 01.4.0) other: <i>undefined</i> |
| 45013 | 5012 | 1394 | Response delay | 1 | UINT16 | RW | Delay: 1 ... 1000 ms (default = 1) |
| | | | | | | | |
| 45020 | 5019 | 139B | Modbus: Address (in DIP Mode) | 1 | UINT16 | R | Modbus address: 1 ... 63 |
| 45021 | 5020 | 139C | Baud rate | 1 | UINT16 | R | Baud rate: 0x0005 - 9600 0x0006 - 19200 0x0007 - 38400 0x0009 - 115200 |
| 45022 | 5021 | 139D | Parity/Stop bits | 1 | UINT16 | R | Parity: 0x0000 - Even, 1 Stop bit 0x0002 - None, 2 Stop bits |
| 45023 | 5022 | 139E | Response delay | 1 | UINT16 | R | Delay: 1 ms at 115200 Baud 3 ms at 38400 Baud 5 ms at 19200 Baud 10 ms at 9600 Baud |
| | | | | | | | |
| 48213 | 8212 | 2014 | Save settings | 1 | UINT16 | W | 0x0043 Speeds up the save procedure of settings. Without this command the device saves changes approx. 5 seconds after the last write of a configuration parameter. |

DMB 96700 4 Channel DI/DO Module



- 4 independent controllable digital I/O channels
- Each channel programmable as input or output
- Extensive programmable operating functions
- Universal Open-Collector output
- Status indication for each I/O channel

Input / Output

DI: 5 V / 12 V / 24 V

DO: Open-Collector

Additional functions

Frequency, Counter, Pulse,
PWM, Limit monitoring

Supported communication features:

Baud rates: 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200

Formats: Parity even, 1 stop bit
Parity odd, 1 stop bit
Parity none, 2 stop bits
Parity none, 1 stop bit (not conform with specification!)

Factory setting: 19200 baud, 8 data bits, parity even, 1 stop bit, Modbus address 1

Supported function codes:

| | | |
|------------------|-------------|--|
| Command 1: | 0x01 | Read Coils |
| Command 2: | 0x02 | Read Discrete Input |
| Command 3: | 0x03 | Read Holding Registers |
| Command 4: | 0x04 | Read Input Registers (Firmware 01.1.0 and later) |
| Command 5: | 0x05 | Write Single Coil |
| Command 6: | 0x06 | Write Single Register |
| Command 15: | 0x0F | Write Multiple Coils |
| Command 16: | 0x10 | Write Multiple Registers |
| Command 43 / 14: | 0x2B / 0x0E | Read Device Identification |

Note: Command 43, subcode 14 (Read Device Identification) supported in the 'Basic' category to allow the device identification.

DMB 96700 DIP settings

Operating modes with DIP switch settings


Input settings

| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|----|--|---|---|---|---|---|---|---|---|---|
| S1 | 1 2 3 4 5 6 7 8 9 0  | All channels discrete input, 24 V | | | | | | | | |
| | | All channels discrete output, open-collector | ■ | | | | | | | |

Modbus settings

| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|----|--|--------------------------|----|---|---|---|---|---|---|---|
| S1 | 1 2 3 4 5 6 7 8 9 0  | 9600 Baud | ■ | | | | | | | |
| | | 19200 Baud | | | | | | | | |
| | | 38400 Baud | | ■ | | | | | | |
| | | 115200 Baud | ■ | ■ | | | | | | |
| S1 | 1 2 3 4 5 6 7 8 9 0  | Parity even, 1 stop bit | | | | | | | | |
| | | Parity none, 2 stop bits | | | ■ | | | | | |
| S1 | 1 2 3 4 5 6 7 8 9 0  | Modbus address | 1 | | | | | | | ■ |
| | | 2 | | | | | | | ■ | |
| | | 3 | | | | | | | ■ | ■ |
| | | 4 | | | | | | ■ | | |
| | | 5 | | | | | | ■ | | ■ |
| | | ... | 63 | | | | ■ | ■ | ■ | ■ |

Setting via USB interface or Modbus commands

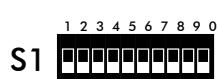

PC Mode

All switches in OFF position

Configuration the Modbus interface or with DRAGOmodbus software

Factory Setting

All switches in OFF position (PC Mode),
the default configuration in PC-Mode:

- All channels discrete input, 24 V
- Modbus address 1
- 19200 baud
- Parity even
- 1 stop bit

DMB 96700 Operating modes and examples

Operating modes with DIP switch settings

DIP switch S1-1 switches between 4x direct binary input and 4x direct binary output.


With the DIP switches S1-2 and S1-3 the baud rate ist selected, with S1-4 the parity bit.

The DIP switches S1-5 to S1-10 defines the Modbus address of the device in range of 1 to 63.

The Modbus address must be unique in the Modbus segment. For higher adresses you must use the PC mode (see below).


a. Input

The binary input signal sets the **coils** and the **holding register 40011** (mirrored on **30011**) bit as 0 or 1. The input level is detected for 24 V systems, it can be reconfigured to 5 V- or 12 V level systems.

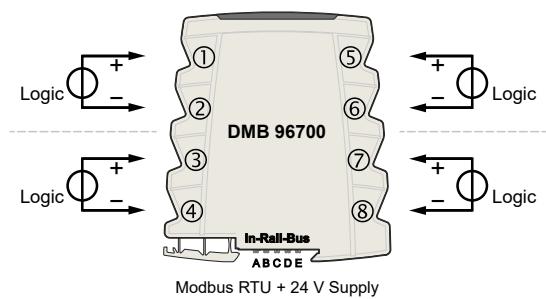

b. Output

Write **coil** or the **holding register 40011** via Modbus. The output will direct follow to 0 or 1.

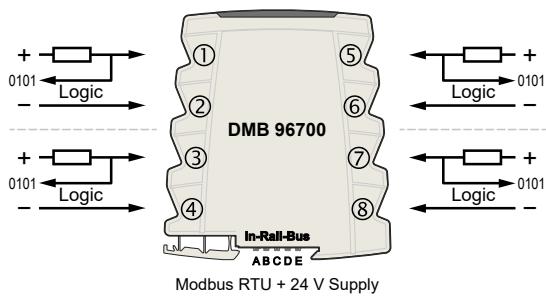

Operating modes with PC mode

All DIP switches must be OFF. Modbus address and all device parameters are set via the Modbus interface or the front USB connector in the holding registers (see holding register map).


In PC mode, different functions can be defined for the individual channels. The wiring examples shows channel 1.

¹ The register addresses always refer to channel 1

a. Binary input (switch input)

Holding register 42001¹ = 0x0000


(other channels: 42101²/42201³/42301⁴)

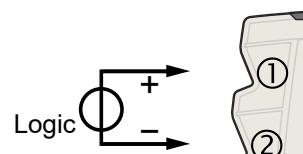

The input level is set in register 42002¹ for 5 V-, 12 V- or 24 V systems. The binary input signal sets the **coils** and the **holding register 40011** (mirrored on **30011**) bit as 0 or 1.

b. Frequency input [Hz]

Holding register 42001¹ = 0x0001
(other channels: 42101²/42201³/42301⁴)

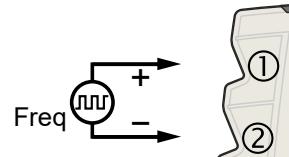

The input level is set in register 42002¹ for 5 V-, 12 V- or 24 V systems. The measured input frequency (up to 1 kHz) is stored in the corresponding measured value registers. The update rate of the measured values is the period duration of the input signal.


In INT16 **register 40001¹** (mirrored on **30001**), the frequency is available with a resolution of 0.1 Hz

(frequency x10) on the Modbus.

In the FLOAT **register 40051¹** (mirrored on **30051**), the frequency is provided in [Hz] with decimal places for the Modbus.

c. Counter input [Counts]

Holding register 42001¹ = 0x0002
(other channels: 42101²/42201³/42301⁴)

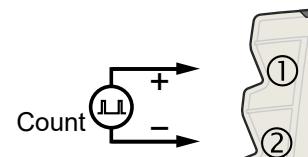


The input level is set in register 42002¹ for 5 V-, 12 V- or 24 V systems. The rising edges of the input signal are counted with a 32-bit counter. At counter overflow, the overflow bit assigned to the input is set in the measured value status register 40005/40059 (30005/40059). The counter is reset to zero during the device start-up and at every configuration change!

Using the holding register 40013, the counters can be reset via Modbus.

The counter reading can be read as UINT32 in **register 40051¹ (30051)**, status in register 40059 (30059). The counter can also be read as 16-bit counter UINT16 via **register 40001¹ (30001)**, status in register 40005 (30005).

d. Binary output (switching output)


Holding register 42001¹ = 0x0010
(other channels: 42101²/42201³/42301⁴)

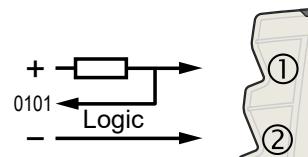

Write **coil** or the **holding register 40011** via Modbus. The output will follow to 0 or 1, with compliance with the output settings, such as min/max activation time and ON/OFF delay.

e. Binary output (INT16 limit monitoring)

Holding register 42001¹ = 0x0011
(other channels: 42101²/42201³/42301⁴)

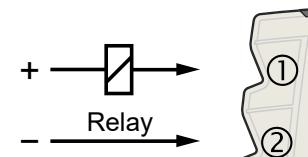


The device monitors a 16-bit integer measured value, which is supplied via Modbus in **register 40001¹**, to lower and higher limits. If the lower limit value in register 42018¹ is exceeded or the higher limit value in register 42019¹ is exceeded, the output of the channel is activated. To switch back to inactive output, the hysteresis in register 42020¹ must be passed through. This can be combined with the output settings, such as min/max activation

time and ON/OFF delay.

| | | |
|-----------------------------|------------------|---|
| Register 42018 ¹ | INT16 limit low | (–32768 to +32767, factory setting –1000) |
| Register 42019 ¹ | INT16 limit high | (–32768 to +32767, factory setting +1000) |
| Register 42020 ¹ | INT16 hysteresis | (3 to +32767, factory setting 10) |

f. Binary output (INT32 limit monitoring)

Holding register 42001¹ = 0x0012
(other channels: 42101²/42201³/42301⁴)

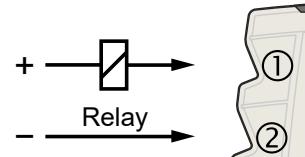


The device monitors a 32-bit integer measured value, which is supplied via Modbus in **register 40051¹**, to lower and higher limits. If the lower limit value in register 42021¹ is exceeded or the higher limit value in register 42023¹ is exceeded, the output of the channel is activated. To switch back to inactive output, the hysteresis in register 42025¹ must be passed through. This can be combined with the output settings, such as min/max activation time and ON/OFF delay.

Register 42021¹ INT32 limit low
Register 42023¹ INT32 limit high
Register 42025¹ INT32 hysteresis

g. Binary output (FLOAT limit monitoring)

Holding register 42001¹ = 0x0013
(other channels: 42101²/42201³/42301⁴)

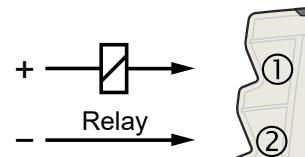


The device monitors a measured floating point value, which is supplied via Modbus in **register 40051¹**, to lower and higher limits. If the lower limit value in register 42021¹ is exceeded or the higher limit value in register 42023¹ is exceeded, the output of the channel is activated. To switch back to inactive output, the hysteresis in register 42025¹ must be passed through. This can be combined with the output settings, such as min/max activation time and ON/OFF delay.

Register 42021¹ FLOAT limit low (factory setting: Float –1000.0)
Register 42023¹ FLOAT limit high (factory setting: Float +1000.0)
Register 42025¹ FLOAT hysteresis (factory setting: Float 10.0)

h. Frequency output [Hz]


Holding register 42001¹ = 0x0014
(other channels: 42101²/42201³/42301⁴)

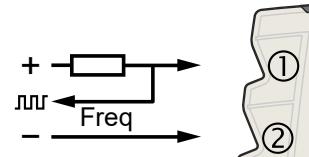

The desired output frequency (0.1 ... 1000.0 Hz) is supplied by the Modbus in INT16 **register 40001**¹ with a resolution of 0.1 Hz (frequency x10). The generated frequency at the output terminal has a duty cycle of approximately 50:50.

i. Pulse output [1/min]

Holding register 42001¹ = 0x0015
(other channels: 42101²/42201³/42301⁴)

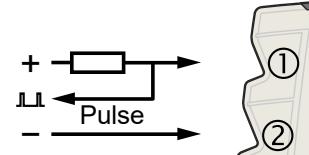


The pulse output supplies a number of pulses (1 to 60000 / min) as an output signal. The pulse width can be set in register 42003¹. The max. Pulse width is a halv period. For a duty cycle 50:50, the pulse width must be programmed to 30000.

The desired output value is supplied by Modbus in UINT16 **register 40001**¹.

j. PWM output [%]

Holding register 42001¹ = 0x0016
(other channels: 42101²/42201³/42301⁴)

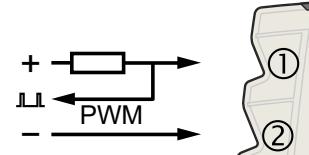

The PWM output converts the INT16 measured value transferred from Modbus to **register 40001**¹ into a PWM signal with 500 Hz and a ratio between 10 % and 90 %. The input resolution is 0.1 %.

The scaling to the output is:

| | |
|----------------|-------------------------------|
| 0.0 % (0) | correspond to a ratio of 10%, |
| 100.0 % (1000) | correspond to a ratio of 90%. |

Output parameters

For all modes with binary output (binary output or limit monitoring), there are a variety of parameters to comply all output requirements:

Register **42012**¹ **Contact type**

N/O (normally open) with inactive output the output is open (factory setting)
N/C (normally closed) with inactive output the output is short-circuited (if device is powered!)

Register **42013**¹ **min. activation time**

The minimum activation time is the minimum duration of a output pulse, for example, when controlling a stepping motion switch, the output pulse must not be too short. The minimum activation time is programmed in steps of [100 ms]. Factory setting is 0x0000.

Register 42014¹ max. activation time

The maximum activation time is effective when the output is activated for a long time. For example, in order to avoid overloading valves, the maximum permissible operating time can be programmed in steps of [100 ms]. Factory setting is 0x0000.

Register 42015¹ ON delay

The response of the output to the input signal can be influenced by a ON delay. When activated at the input, the output follows after the delay time. If the input is inactive during this time, the output remains inactive. The output follows the input signal only after the ON delay has elapsed. The ON delay can be used to tolerate short input pulses. The delay time is programmable in steps of [100 ms]. The factory setting is 0x0000 (no delay).

Register 42016¹ OFF delay


The OFF delay prevents an immediate turn-off of the output when the input is inactive. The output remains active for the programmed OFF delay. If the input is active again during this time, the delay time starts again. The delay time is programmed in steps of [100 ms]. The factory setting is 0x0000 (no delay).

A special case is the value 0xFFFF, which activates the **confirmation mode**. In confirmation mode, the output remains active until a confirmation has been received. The confirmation request is signaled by a bit in the confirmation register 40012 and can be confirmed by writing to this register. The output becomes inactive after the confirmation, if the input is inactive.


Register 42017¹ device power-on

The state programmed in this register is the output level after start-up, reset or power failure. The input regularly controls the output so that the output follows the input signal shortly after the start. In confirmation mode the output would remain active until an incoming confirmation.


Values: 0x0000 (inactive) or 0x0001 (active), factory setting is 0x0000.

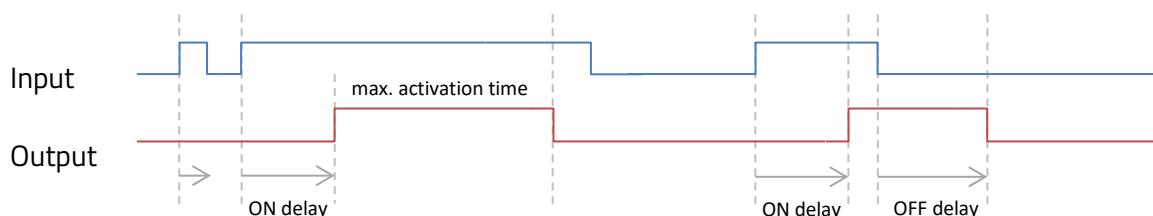


Example: ON delay (42015¹)

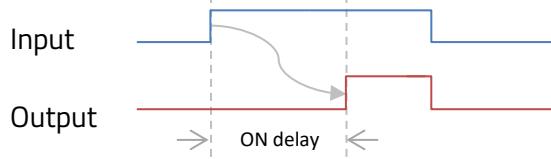


Example: OFF delay (42016¹)

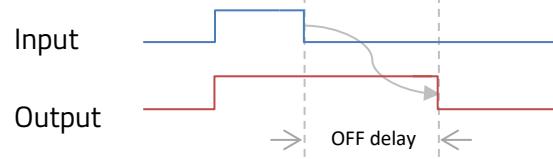

Example: minimum activation time (42013¹)

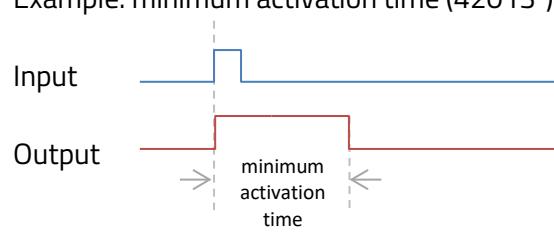

Example: maximum activation time (42014¹)

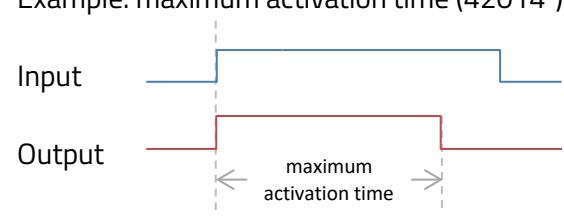

¹The specified register addresses apply to channel 1. At channel 2: +100, channel 3: +200 and channel 4: +300

DMB 96700 coil map

| Coil | Addr | Description | Access | Remarks |
|--------------------------------|------|----------------|--------|----------------------------------|
| Discrete inputs/outputs | | | | |
| 1 | 0 | Input/Output 1 | RW | Binary signal at Input/ Output 1 |
| 2 | 1 | Input/Output 2 | RW | Binary signal at Input/ Output 2 |
| 3 | 2 | Input/Output 3 | RW | Binary signal at Input/ Output 3 |
| 4 | 3 | Input/Output 4 | RW | Binary signal at Input/ Output 4 |

DMB 96700 input register map

Firmware 01.1.0 and later:

All dynamic measured value registers can be read out with Modbus command 3 as holding register **400xx**, but also with Modbus command 4 as input register **300xx**.

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------------------------|------|------|------------------|----------|-----------------|--------|--|
| | Dec | Hex | | | | | |
| Inputs and outputs | | | | | | | |
| 30001 | 0 | 0000 | Primary Value | 1 | INT16 UINT16 | R | Depends on operating mode Input mode Frequency (0x0001): Frequency x10 (1000.0 Hz) Counter (0x0002): Counts UINT16 |
| 30002 | 1 | 0001 | Secondary Value | 1 | INT16 UINT16 | R | Channel 2 (for Description see Channel 1) |
| 30003 | 2 | 0002 | Tertiary Value | 1 | INT16 UNIT16 | R | Channel 3 (for Description see Channel 1) |
| 30004 | 3 | 0003 | Quaternary Value | 1 | INT16 UINT16 | R | Channel 4 (for Description see Channel 1) |
| 30005 | 4 | 0004 | Status | 1 | UINT16 | R | Status of values Bit 0 Counter 1 overflow or Limit 1 active Bit 1 Counter 2 overflow or Limit 2 active Bit 2 Counter 3 overflow or Limit 3 active Bit 3 Counter 4 overflow or Limit 4 active |
| | | | | | | | |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|---------------------|----------|--------------------------|--------|---|
| | Dec | Hex | | | | | |
| 30011 | 10 | 000A | Input/Output direct | 1 | UINT16 | R | <p>Operation mode: Binary signal</p> <p>Bit 0 Input 1 Bit 1 Input 2 Bit 2 Input 3 Bit 3 Input 4 inactive = 0, active = 1</p> <p>Output channels can have programmed operation timing.</p> |
| | | | | | | | |
| 30051 | 50 | 0032 | Primary Value | 2 | FLOAT INT32 UINT32 | R | <p>Depends on operating mode</p> <p>Input mode</p> <p>Frequency (0x0001): Freq. FLOAT Counter (0x0002): Counts UINT32</p> <p>Float value range according to IEEE 754</p> |
| 30053 | 52 | 0034 | Secondary Value | 2 | FLOAT INT32 UINT32 | R | Channel 2 (for Description see Channel 1) |
| 30055 | 54 | 0036 | Tertiary Value | 2 | FLOAT INT32 UINT32 | R | Channel 3 (for Description see Channel 1) |
| 30057 | 56 | 0038 | Quaternary Value | 2 | FLOAT INT32 UINT32 | R | Channel 4 (for Description see Channel 1) |
| 30059 | 58 | 003A | Status | 1 | UINT16 | R | Status of values (see 30005 for description) |

DMB 96700 holding register map

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks | | | | | | | | |
|---------------------------|--------------------------------------|------|---------------------|----------|-----------------|--------|--|-------|--------------------------------------|-------|--------------------------------------|-------|--------------------------------------|-------|--------------------------------------|
| | Dec | Hex | | | | | | | | | | | | | |
| Inputs and outputs | | | | | | | | | | | | | | | |
| 40001 | 0 | 0000 | Primary Value | 1 | INT16 UINT16 | RW | <p>Depends on operating mode</p> <p>Input mode</p> <ul style="list-style-type: none"> Binary input (0x0000): – Frequency (0x0001): Frequency x10 (1000.0 Hz) Counter (0x0002): Counts UINT16 <p>Output mode</p> <ul style="list-style-type: none"> Binary output (0x0010): – Limit INT16 (0x0011): Set meas. value Limit INT32 (0x0012): – Limit FLOAT (0x0013): – Frequency (0x0014): Set Freq. x10 Pulse (0x0015): Set pulse rate (1 - 60000 /min) PWM (0x0016): Set duty cycle (0.0 - 100.0%) | | | | | | | | |
| 40002 | 1 | 0001 | Secondary Value | 1 | INT16 UINT16 | RW | Channel 2 (for Description see Channel 1) | | | | | | | | |
| 40003 | 2 | 0002 | Tertiary Value | 1 | INT16 UNIT16 | RW | Channel 3 (for Description see Channel 1) | | | | | | | | |
| 40004 | 3 | 0003 | Quaternary Value | 1 | INT16 UINT16 | RW | Channel 4 (for Description see Channel 1) | | | | | | | | |
| 40005 | 4 | 0004 | Status | 1 | UINT16 | R | <p>Status of values</p> <table> <tr><td>Bit 0</td><td>Counter 1 overflow or Limit 1 active</td></tr> <tr><td>Bit 1</td><td>Counter 2 overflow or Limit 2 active</td></tr> <tr><td>Bit 2</td><td>Counter 3 overflow or Limit 3 active</td></tr> <tr><td>Bit 3</td><td>Counter 4 overflow or Limit 4 active</td></tr> </table> | Bit 0 | Counter 1 overflow or Limit 1 active | Bit 1 | Counter 2 overflow or Limit 2 active | Bit 2 | Counter 3 overflow or Limit 3 active | Bit 3 | Counter 4 overflow or Limit 4 active |
| Bit 0 | Counter 1 overflow or Limit 1 active | | | | | | | | | | | | | | |
| Bit 1 | Counter 2 overflow or Limit 2 active | | | | | | | | | | | | | | |
| Bit 2 | Counter 3 overflow or Limit 3 active | | | | | | | | | | | | | | |
| Bit 3 | Counter 4 overflow or Limit 4 active | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | |
| 40011 | 10 | 000A | Input/Output direct | 1 | UINT16 | RW | <p>Operation mode: Binary signal</p> <table> <tr><td>Bit 0</td><td>Input/Output 1</td></tr> <tr><td>Bit 1</td><td>Input/Output 2</td></tr> <tr><td>Bit 2</td><td>Input/Output 3</td></tr> <tr><td>Bit 3</td><td>Input/Output 4</td></tr> </table> <p>inactive = 0, active = 1</p> <p>Output channels can have programmed operation timing.</p> | Bit 0 | Input/Output 1 | Bit 1 | Input/Output 2 | Bit 2 | Input/Output 3 | Bit 3 | Input/Output 4 |
| Bit 0 | Input/Output 1 | | | | | | | | | | | | | | |
| Bit 1 | Input/Output 2 | | | | | | | | | | | | | | |
| Bit 2 | Input/Output 3 | | | | | | | | | | | | | | |
| Bit 3 | Input/Output 4 | | | | | | | | | | | | | | |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|---------------------|----------|--------------------------|--------|--|
| | Dec | Hex | | | | | |
| 40012 | 11 | 000B | Send acknowledge | 1 | UINT16 | RW | <p>Reset output in confirmation mode</p> <p>Bit 0 Output 1 confirm = 1 Bit 1 Output 2 Bit 2 Output 3 Bit 3 Output 4</p> <p>Read register shows the outputs, who waits for confirmation</p> |
| 40013 | 12 | 000C | Reset input counter | 1 | UINT16 | W | <p>Resets the counter for channel 1 to 4</p> <p>Bit 0 Counter 1 Reset = 1 Bit 1 Counter 2 Bit 2 Counter 3 Bit 3 Counter 4</p> |
| | | | | | | | |
| 40051 | 50 | 0032 | Primary Value | 2 | FLOAT INT32 UINT32 | RW | <p>Depends on operating mode</p> <p>Input mode</p> <p>Binary input (0x0000): – Frequency (0x0001): Freq. FLOAT Counter (0x0002): Counts UINT32</p> <p>Output mode</p> <p>Binary output (0x0010): – Limit INT16 (0x0011): – Limit INT32 (0x0012): Set meas. value Limit FLOAT (0x0013): Set meas. value Frequency (0x0014): – Pulse output (0x0015): – PWM (0x0016): – Float value range according to IEEE 754</p> |
| 40053 | 52 | 0034 | Secondary Value | 2 | FLOAT INT32 UINT32 | RW | Channel 2 (for Description see Channel 1) |
| 40055 | 54 | 0036 | Tertiary Value | 2 | FLOAT INT32 UINT32 | RW | Channel 3 (for Description see Channel 1) |
| 40057 | 56 | 0038 | Quaternary Value | 2 | FLOAT INT32 UINT32 | RW | Channel 4 (for Description see Channel 1) |
| 40059 | 58 | 003A | Status | 1 | UINT16 | R | <p>Status of values</p> <p>Bit 0 Counter 1 overflow or Limit 1 active Bit 1 Counter 2 overflow or Limit 2 active Bit 2 Counter 3 overflow or Limit 3 active Bit 3 Counter 4 overflow or Limit 4 active</p> |
| | | | | | | | |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|--|------|------|---------------------------|----------|---------|--------|--|
| | Dec | Hex | | | | | |
| 40101 | 100 | 0064 | current DIP switches | 2 | UINT32 | R | <p>Current DIP switch setting</p> <p>Bit 0 S1-1 off = 4x Binary input on = 4x Binary output</p> <p>Bit 1/2 S1-2/-3 on/off = 9600 baud off/off = 19200 baud off/on = 38400 baud on/on = 115200 baud</p> <p>Bit 3 S1-4 off = Parity even on = Parity none</p> <p>Bit 4 S1-5 Modbus address : : 1 to 63</p> <p>Bit 9 S1-10 all DIPs off: PC mode, settings via Modbus</p> |
| 40103 | 102 | 0066 | current configuration set | 1 | UINT16 | R | <p>currently used configuration set</p> <p>0x0000 PC mode</p> <p>0x0001 DIP mode</p> |
| Auxiliary and diagnosis functions | | | | | | | |
| 41201 | 1200 | 04B0 | "Here I am" | 1 | UINT16 | W | <p>"Here I am" – Set timer with time [s]</p> <p>Sets a flashing signal on the green LED for the written timeperiod to easy find this device in the system</p> |
| 41202 | 1201 | 04B1 | Reset counter | 1 | UINT16 | W | Reset of diagnostic counter |
| 41211 | 1210 | 04BA | Telegram count | 1 | UINT16 | R | Count of all telegram frames on Modbus |
| 41212 | 1211 | 04BB | MyTelegram count | 1 | UNIT16 | R | Request count for telegram frames on Modbus with own device address |
| 41213 | 1212 | 04BC | Error count | 1 | UINT16 | R | Error count of frames with error |
| Device data | | | | | | | |
| 43001 | 3000 | 0BB8 | Device identifier | 1 | UINT16 | R | Device identifier: 0x0007 |
| 43002 | 3001 | 0BB9 | Hardware version | 1 | UINT16 | R | Hardware version: e.g. 0x0041 (A) |
| 43005 | 3004 | 0BBC | RFID identifier | 8 | 16 Char | R | Unique identifier |
| 43029 | 3028 | 0BD4 | Firmware version | 1 | UINT16 | R | 0x0100 – Example for version 01.0.0 |
| 45151 | 5150 | 141E | Point of measuring | 8 | 16 Char | RW | Point of measuring in ASCII (Tag) |
| Settings (CONF) | | | | | | | |
| == Channel 1 == | | | | | | | |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|------------------------------|----------|--------|--------|---|
| | Dec | Hex | | | | | |
| 42001 | 2000 | 07D0 | Operating mode channel 1 | 1 | UINT16 | RW | <p>Set the operating mode of channel 1</p> <p>Input mode</p> <ul style="list-style-type: none"> 0x0000 Binary input 0x0001 Frequency measurement 0x0002 Counter input (16/32 bit) (Reset at Start / CONF changed) <p>Output mode</p> <ul style="list-style-type: none"> 0x0010 Binary output 0x0011 Limit monitoring INT16 0x0012 Limit monitoring INT32 0x0013 Limit monitoring FLOAT 0x0014 Frequencyoutput [Hz] 0x0015 Pulse generation [1/min] 0x0016 PWM output, Freq. = 500 Hz |
| 42002 | 2001 | 07D1 | Input level | 1 | UINT16 | RW | <p>Input level for channel 1</p> <ul style="list-style-type: none"> 0x0000 5 V (<1.5 V >3.5 V) 0x0001 12 V (<2.0 V >8.4 V) 0x0002 24 V (<2.5 V >16.8 V) |
| 42003 | 2002 | 07D2 | Pulse width | 1 | UINT16 | RW | <p>Pulse width at pulse output [ms] ch 1</p> <p>min. pulse width (0x0000) = 300 µs</p> |
| | | | | | | | |
| 42012 | 2011 | 07DB | Contact type | 1 | UINT16 | RW | <p>Contact type for channel 1</p> <ul style="list-style-type: none"> 0x0000 N/O normally open 0x0001 N/C normally closed |
| 42013 | 2012 | 07DC | min. activation time | 1 | UINT16 | RW | <p>Minimal activation time [100 ms] ch 1</p> <p>The output stays active minimal this time.</p> <ul style="list-style-type: none"> 0x0000 Function off |
| 42014 | 2013 | 07DD | max. activation time | 1 | UINT16 | RW | <p>Maximal activation time [100 ms] ch 1</p> <p>The active output ist limited to this time.</p> <p>Example: wiping contact</p> <ul style="list-style-type: none"> 0x0000 Function off |
| 42015 | 2014 | 07DE | ON delay | 1 | UINT16 | RW | <p>ON delay [100 ms] for ch 1</p> <p>A activation signal turns on the output after this time</p> <ul style="list-style-type: none"> 0x0000 Immediate turn-on |
| 42016 | 2015 | 07DF | OFF delay | 1 | UINT16 | RW | <p>OFF delay [100 ms] for ch 1</p> <p>At inactive signal the output turns off after this time</p> <ul style="list-style-type: none"> 0x0000 Immediate turn-off 0xFFFF Turn-off only with confirm* <p>* power-on resets the wait for confirmation</p> |
| 42017 | 2016 | 07E0 | Initial state after power-on | 1 | UINT16 | RW | <p>Initial state for ch 1</p> <ul style="list-style-type: none"> 0x0000 Output inactive 0x0001 Output active |
| 42018 | 2017 | 07E1 | Limit low | 1 | INT16 | RW | INT16 value for lower limit ch 1 |
| 42019 | 2018 | 07E2 | Limit high | 1 | INT16 | RW | INT16 value for upper limit ch 1 |
| 42020 | 2019 | 07E3 | Limit hysteresis | 1 | INT16 | RW | INT16 value for limit hysteresis at ch 1 |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|------------------------|------|------|------------------------------|----------|-------------|--------|--|
| | Dec | Hex | | | | | |
| 42021 | 2020 | 07E4 | Limit low | 2 | FLOAT INT32 | RW | FLOAT or INT32 value for lower limit at channel 1 |
| 42023 | 2022 | 07E6 | Limit high | 2 | FLOAT INT32 | RW | FLOAT or INT32 value for upper limit at channel 1 |
| 42025 | 2024 | 07E8 | Limit hysteresis | 2 | FLOAT INT32 | RW | FLOAT or INT32 value for limit hysteresis at channel 1 |
| == Channel 2 == | | | | | | | |
| 42101 | 2100 | 0834 | Operating mode channel 2 | 1 | UINT16 | RW | Set the operating mode of channel 2 (for Description see Channel 1) |
| 42102 | 2101 | 0835 | Input level | 1 | UINT16 | RW | Input level for channel 2 (for Description see Channel 1) |
| 42103 | 2102 | 0836 | Pulse width | 1 | UINT16 | RW | Pulse width at pulse output [ms] ch 2 (for Description see Channel 1) |
| | | | | | | | |
| 42112 | 2111 | 083F | Contact type | 1 | UINT16 | RW | Contact type for channel 2 (for Description see Channel 1) |
| 42113 | 2112 | 0840 | min. activation time | 1 | UINT16 | RW | Minimal activation time [100 ms] ch 2 (for Description see Channel 1) |
| 42114 | 2113 | 0841 | max. activation time | 1 | UINT16 | RW | Maximal activation time [100 ms] ch 2 (for Description see Channel 1) |
| 42115 | 2114 | 0842 | ON delay | 1 | UINT16 | RW | ON delay [100 ms] for ch 2 (for Description see Channel 1) |
| 42116 | 2115 | 0843 | OFF delay | 1 | UINT16 | RW | OFF delay [100 ms] for ch 2 (for Description see Channel 1) |
| 42117 | 2116 | 0844 | Initial state after power-on | 1 | UINT16 | RW | Initial state for ch 2 (for Description see Channel 1) |
| 42118 | 2117 | 0845 | Limit low | 1 | INT16 | RW | INT16 value for lower limit ch 2 |
| 42119 | 2118 | 0846 | Limit high | 1 | INT16 | RW | INT16 value for upper limit ch 2 |
| 42120 | 2119 | 0847 | Limit hysteresis | 1 | INT16 | RW | INT16 value for limit hysteresis at ch 2 |
| 42121 | 2120 | 0848 | Limit low | 2 | FLOAT INT32 | RW | FLOAT or INT32 value for lower limit at channel 2 |
| 42123 | 2122 | 084A | Limit high | 2 | FLOAT INT32 | RW | FLOAT or INT32 value for upper limit at channel 2 |
| 42125 | 2124 | 084C | Limit hysteresis | 2 | FLOAT INT32 | RW | FLOAT or INT32 value for limit hysteresis at channel 2 |
| == Channel 3 == | | | | | | | |
| 42201 | 2200 | 0898 | Operating mode channel 3 | 1 | UINT16 | RW | Set the operating mode of channel 3 (for Description see Channel 1) |
| 42202 | 2201 | 0899 | Input level | 1 | UINT16 | RW | Input level for channel 3 (for Description see Channel 1) |
| 42203 | 2202 | 089A | Pulse width | 1 | UINT16 | RW | Pulse width at pulse output [ms] ch 3 (for Description see Channel 1) |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|------------------------|------|------|------------------------------|----------|----------------|--------|---|
| | Dec | Hex | | | | | |
| | | | | | | | |
| 42212 | 2211 | 08A3 | Contact type | 1 | UINT16 | RW | Contact type for channel 3 (for Description see Channel 1) |
| 42213 | 2212 | 08A4 | min. activation time | 1 | UINT16 | RW | Minimal activation time [100 ms] ch 3 (for Description see Channel 1) |
| 42214 | 2213 | 08A5 | max. activation time | 1 | UINT16 | RW | Maximal activation time [100 ms] ch 3 (for Description see Channel 1) |
| 42215 | 2214 | 08A6 | ON delay | 1 | UINT16 | RW | ON delay [100 ms] for ch 3 (for Description see Channel 1) |
| 42216 | 2215 | 08A7 | OFF delay | 1 | UINT16 | RW | OFF delay [100 ms] for ch 3 (for Description see Channel 1) |
| 42217 | 2216 | 08A8 | Initial state after power-on | 1 | UINT16 | RW | Initial state for ch 3 (for Description see Channel 1) |
| 42218 | 2217 | 08A9 | Limit low | 1 | INT16 | RW | INT16 value for lower limit ch 3 |
| 42219 | 2218 | 08AA | Limit high | 1 | INT16 | RW | INT16 value for upper limit ch 3 |
| 42220 | 2219 | 08AB | Limit hysteresis | 1 | INT16 | RW | INT16 value for limit hysteresis at ch 3 |
| 42221 | 2220 | 08AC | Limit low | 2 | FLOAT INT32 | RW | FLOAT or INT32 value for lower limit at channel 3 |
| 42223 | 2222 | 08AE | Limit high | 2 | FLOAT INT32 | RW | FLOAT or INT32 value for upper limit at channel 3 |
| 42225 | 2224 | 08B0 | Limit hysteresis | 2 | FLOAT INT32 | RW | FLOAT or INT32 value for limit hysteresis at channel 3 |
| == Channel 4 == | | | | | | | |
| 42301 | 2300 | 08FC | Operating mode channel 4 | 1 | UINT16 | RW | Set the operating mode of channel 4 (for Description see Channel 1) |
| 42302 | 2301 | 08FD | Input level | 1 | UINT16 | RW | Input level for channel 4 (for Description see Channel 1) |
| 42303 | 2302 | 08FE | Pulse width | 1 | UINT16 | RW | Pulse width at pulse output [ms] ch 4 (for Description see Channel 1) |
| | | | | | | | |
| 42312 | 2311 | 0907 | Contact type | 1 | UINT16 | RW | Contact type for ch 4 (for Description see Channel 1) |
| 42313 | 2312 | 0908 | min. activation time | 1 | UINT16 | RW | Minimal activation time [100 ms] ch 4 (for Description see Channel 1) |
| 42314 | 2313 | 0909 | max. activation time | 1 | UINT16 | RW | Maximal activation time [100 ms] ch 4 (for Description see Channel 1) |
| 42315 | 2314 | 090A | ON delay | 1 | UINT16 | RW | ON delay [100 ms] for ch 4 (for Description see Channel 1) |
| 42316 | 2315 | 090B | OFF delay | 1 | UINT16 | RW | OFF delay [100 ms] for ch 4 (for Description see Channel 1) |
| 42317 | 2316 | 090C | Initial state after power-on | 1 | UINT16 | RW | Initial state for ch 4 (for Description see Channel 1) |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|-------------------------------|----------|----------------|--------|---|
| | Dec | Hex | | | | | |
| 42318 | 2317 | 090D | Limit low | 1 | INT16 | RW | INT16 value for lower limit ch 4 |
| 42319 | 2318 | 090E | Limit high | 1 | INT16 | RW | INT16 value for upper limit ch 4 |
| 42320 | 2319 | 090F | Limit hysteresis | 1 | INT16 | RW | INT16 value for limit hysteresis at ch 4 |
| 42321 | 2320 | 0910 | Limit low | 2 | FLOAT INT32 | RW | FLOAT or INT32 value for lower limit at channel 4 |
| 42323 | 2322 | 0912 | Limit high | 2 | FLOAT INT32 | RW | FLOAT or INT32 value for upper limit at channel 4 |
| 42325 | 2324 | 0914 | Limit hysteresis | 2 | FLOAT INT32 | RW | FLOAT or INT32 value for limit hysteresis at channel 4 |
| | | | | | | | |
| 45001 | 5000 | 1388 | Configuration counter | 1 | UINT16 | R | Counter is incremented internally each write of Conf parameters. The Modbus master can remember this value. As long as the counter has the same value, the configuration is unchanged. |
| 45002 | 5001 | 1389 | Register order | 1 | UINT16 | RW | Order of registers at INT32 or FLOAT values 0x0001 HH-HL-LH-LL (default) 0x0000 LH-LL-HH-HL |
| 45003 | 5002 | 138A | Date of last modification | 2 | UINT32 | RW | Date (UNIX_TIMESTAMP) last change (Not managed by the device) |
| | | | | | | | |
| 45010 | 5009 | 1391 | Modbus: Address (in PC Mode) | 1 | UINT16 | RW | Modbus address: 1 ... 247 (default = 1) |
| 45011 | 5010 | 1392 | Baud rate (in PC Mode) | 1 | UINT16 | RW | Baud rate: 0x0000 - 300 0x0001 - 600 0x0002 - 1200 0x0003 - 2400 0x0004 - 4800 0x0005 - 9600 0x0006 - 19200 (default) 0x0007 - 38400 0x0008 - 57600 0x0009 - 115200 other: <i>undefined</i> |
| 45012 | 5011 | 1393 | Parity/Stop bits (in PC Mode) | 1 | UINT16 | RW | Parity: 0x0000 - Even, 1 Stop bit (default) 0x0001 - Odd, 1 Stop bit 0x0002 - None, 2 Stop bits 0x0003 - None, 1 Stop bit (no Spec !) (from Firmware 01.4.0) other: <i>undefined</i> |
| 45013 | 5012 | 1394 | Response delay (in PC Mode) | 1 | UINT16 | RW | Delay: 1 ... 1000 ms (default = 1) |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|--------------------------------|----------|--------|--------|---|
| | Dec | Hex | | | | | |
| | | | | | | | |
| 45020 | 5019 | 139B | Modbus: Address (in DIP Mode) | 1 | UINT16 | R | Modbus address: 1 ... 63 |
| 45021 | 5020 | 139C | Baud rate (in DIP Mode) | 1 | UINT16 | R | Baud rate: 0x0005 - 9600 0x0006 - 19200 0x0007 - 38400 0x0009 - 115200 |
| 45022 | 5021 | 139D | Parity/Stop bits (in DIP Mode) | 1 | UINT16 | R | Parity: 0x0000 - Even, 1 Stop bit 0x0002 - None, 2 Stop bits |
| 45023 | 5022 | 139E | Response delay (in DIP Mode) | 1 | UINT16 | R | Delay: 1 ms at 115200 Baud 3 ms at 38400 Baud 5 ms at 19200 Baud 10 ms at 9600 Baud |
| | | | | | | | |
| 48213 | 8212 | 2014 | Save settings | 1 | UINT16 | W | 0x0043 Speeds up the save procedure of settings. Without this command the device saves changes approx. 5 seconds after the last write of a configuration parameter. |

DMB 96800 4 Channel Relay Module



- 4 independent power relays, make or break contact
- Programmable switch-ON and switch-OFF behavior
- Extensive programmable operating functions
- Monitoring functions for operating conditions
- Status indication for each relay

Contact

AC: 250 V / 2 A

DC: 30 V / 2A

Additional functions

ON / OFF delay, Wiper contact. Power monitoring

Supported communication features:

Baud rates: 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200

Formats: Parity even, 1 stop bit

Parity odd, 1 stop bit

Parity none, 2 stop bits

Parity none, 1 stop bit (not conform with specification!)

Factory setting: 19200 baud, 8 data bits, parity even, 1 stop bit, Modbus address 1

Supported function codes:

| | | |
|------------------|-------------|--|
| Command 1: | 0x01 | Read Coils |
| Command 2: | 0x02 | Read Discrete Input |
| Command 3: | 0x03 | Read Holding Registers |
| Command 4: | 0x04 | Read Input Registers (Firmware 01.3.0 and later) |
| Command 5: | 0x05 | Write Single Coil |
| Command 6: | 0x06 | Write Single Register |
| Command 15: | 0x0F | Write Multiple Coils |
| Command 16: | 0x10 | Write Multiple Registers |
| Command 43 / 14: | 0x2B / 0x0E | Read Device Identification |

Note: Command 43, subcode 14 (Read Device Identification) supported in the 'Basic' category to allow the device identification.


DMB 96800 DIP settings

Operating modes with DIP switch settings

Modbus settings

| S1 | 1 2 3 4 5 6 7 8 9 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
|----|--------------------------|----------------|-----|---|---|---|---|---|---|---|---|
| | 9600 Baud | ■ | | | | | | | | | |
| | 19200 Baud | | | | | | | | | | |
| | 38400 Baud | | ■ | | | | | | | | |
| | 115200 Baud | ■ | ■ | | | | | | | | |
| S1 | 1 2 3 4 5 6 7 8 9 0 | | | | | | | | | | |
| | Parity even, 1 stop bit | | | | | | | | | | |
| | Parity none, 2 stop bits | | | ■ | | | | | | | |
| S1 | 1 2 3 4 5 6 7 8 9 0 | Modbus address | 1 | | | | | | | | ■ |
| | | 2 | | | | | | | ■ | | |
| | | 3 | | | | | | | ■ | | ■ |
| | | 4 | | | | | | | ■ | | |
| | | 5 | | | | | | | ■ | | ■ |
| | | ... | 127 | | ■ | ■ | ■ | ■ | ■ | ■ | ■ |

Setting via USB interface or Modbus commands

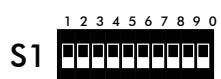

PC Mode

All switches in OFF position

Configuration the Modbus interface or with DRAGOmodbus software

Factory Setting

All switches in OFF position (PC Mode),
the default configuration in PC-Mode:

- Modbus address 1
- 19200 baud
- Parity even
- 1 stop bit


DMB 96800 Operating modes and examples

Operating mode with DIP switch settings

With the DIP switches S1-1 and S1-2 the baud rate ist selected, with S1-3 the parity bit. The DIP switches S1-4 to S1-10 defines the Modbus address of the device in range of 1 to 127. The Modbus address must be unique in the Modbus segment. For higher adresses you must use the PC mode (see below).

a. Relay

Write **coil** or the **holding register 40011** via Modbus. The relay contact will direct follow to ON or OFF.

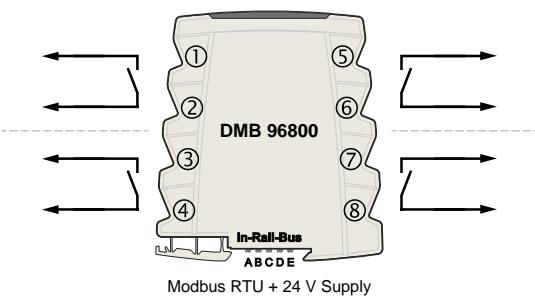


Operating modes with PC mode

All DIP switches must be OFF. Modbus address and all device parameters are set via the Modbus interface or the front USB interface in the holding registers (see holding register map).

¹ The register addresses always refer to relay 1

a. Direct control (relay contact)


Holding register 42011¹ = 0x0000
(other relays: 42111²/42211³/42311⁴)

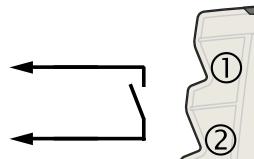

Write **coil** or the **holding register 40011** via Modbus. The relay will follow to ON or OFF, with compliance with the relay settings, such as min/max activation time and ON/OFF delay.

b. Limit monitoring INT16

Holding register 42011¹ = 0x0001
(other relays: 42111²/42211³/42311⁴)

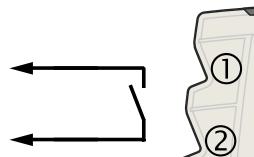


The device monitors a 16-bit integer measured value, which is supplied via Modbus in **register 40001**¹, to lower and higher limits. If the lower limit value in register 42018¹ is exceeded or the higher limit value in register 42019¹ is exceeded, the relay is activated. To switch back to inactive output, the hysteresis in register 42020¹ must be passed through. This can combined with the output settings, such as min/max activation time and ON/OFF delay.

| | | |
|-----------------------------|------------------|---|
| Register 42018 ¹ | INT16 limit low | (-32768 to +32767, factory setting -1000) |
| Register 42019 ¹ | INT16 limit high | (-32768 to +32767, factory setting +1000) |
| Register 42020 ¹ | INT16 hysteresis | (3 to +32767, factory setting 10) |

c. Limit monitoring FLOAT

Holding register 42011² = 0x0002
(other relays: 42111³/42211³/42311⁴)

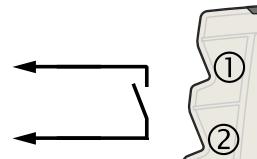


The device monitors a measured floating point value, which is supplied via Modbus in **register 40051**¹, to lower and higher limits. If the lower limit value in register 42021¹ is exceeded or the higher limit value in register 42023¹ is exceeded, the relay is activated. To switch back to inactive output, the hysteresis in register 40025¹ must be passed through. This can be combined with the output settings, such as min/max activation time and ON/OFF delay.

| | | |
|-----------------------------|------------------|----------------------------------|
| Register 42021 ¹ | FLOAT limit low | (factory setting: Float -1000.0) |
| Register 42023 ¹ | FLOAT limit high | (factory setting: Float +1000.0) |
| Register 42025 ¹ | FLOAT hysteresis | (factory setting: Float 10.0) |

d. Limit monitoring INT16 (relay 1)


Holding register 42011² = 0x0003
(other relays: 42211³/42311⁴)

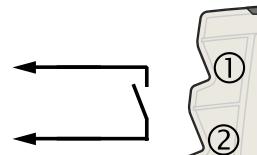

Is identical as for limit monitoring INT16 (b), except that the measured value of channel 1 is used for the comparison. It is possible to control several relays as min and max contacts from one measured value in **register 40001**.

e. Limit monitoring FLOAT (relay 1)


Holding register 42011² = 0x0004
(other relays: 42211³/42311⁴)

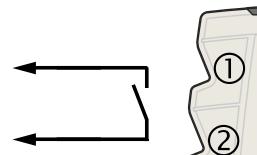

Is identical as for limit monitoring FLOAT (c), except that the measured value of channel 1 is used for the comparison. It is possible to control several relays as min and max contacts from one measured value in **register 40051**.

f. Monitoring of power supply

Holding register 42011¹ = 0x0005
(other relays: 42111²/42211³/42311⁴)

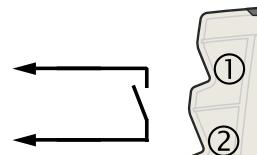

Limit value monitoring of the supply voltage to lower and higher limits. If the lower limit

value in register 42018¹ is exceeded or the higher limit value in register 42019¹ is exceeded, the relay is activated. To switch back to inactive output, the hysteresis in register 42020¹ must be passed through. This can be combined with the compliance with the relay settings, such as min/max activation time and ON/OFF delay.

| | | |
|-----------------------------|-------------------------|-----------------------|
| Register 42018 ¹ | Power supply limit low | in [0.1 V] resolution |
| Register 42019 ¹ | Power supply limit high | in [0.1 V] resolution |
| Register 42020 ¹ | Power supply hysteresis | in [0.1 V] resolution |

Relay parameters

For all modes, there are a variety of parameters to comply all relay contact requirements:

Register 42012¹ Contact type

- N/O (normally open) with inactive relay the contact is open (factory setting)
N/C (normally closed) with inactive relay the contact is short-circuited

Register 42013¹ min. activation time

The minimum activation time is the minimum duration of a short output pulse, for example, when controlling a stepping motion switch, the output pulse must not be too short. The minimum activation time is programmed in steps of [100 ms]. Factory setting is 0x0000.

Register 42014¹ max. activation time

The maximum activation time is effective when the output is activated for a long time. For example, in order to avoid overloading valves, the maximum permissible operating time can be programmed in steps of [100 ms]. Factory setting is 0x0000.

Register 42015¹ ON delay

The response of the relay to the input signal can be influenced by a ON delay. When activated at the input, the relay follows after the delay time. If the input is inactive during this time, the relay remains inactive. The relay follows the input signal only after the ON delay has elapsed. The ON delay can be used to tolerate short input pulses. The delay time is programmed in steps of [100 ms]. The factory setting is 0x0000 (no delay).

Register 42016¹ OFF delay

The OFF delay prevents an immediate turn-off of the relay when the input is inactive. The relay remains active for the programmed OFF delay. If the input is active again during this time, the delay time starts again. The delay time is programmed in steps of [100 ms]. The factory setting is 0x0000 (no delay).


A special case is the value 0xFFFF, which activates the confirmation mode. In confirmation mode,

the relay remains active until a confirmation has been received. The confirmation request is signaled by a bit in the confirmation register 40012 and can be confirmed by writing to this register. The relay becomes inactive after the confirmation, if the input is inactive.


Register **42017¹** device power-on

The state programmed in this register is the relay state after start-up, reset or power failure. The input regularly controls the relay so that the relay follows the input signal shortly after the start. In confirmation mode the relay would remain active until an incoming confirmation.


Values: 0x0000 (inactive) or 0x0001 (active), factory setting is 0x0000.

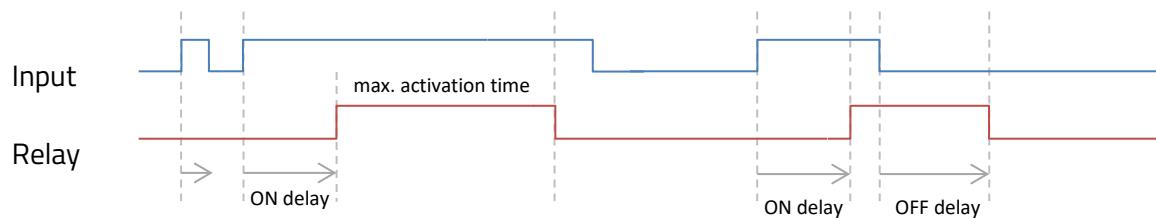


Example: ON delay (42015¹)

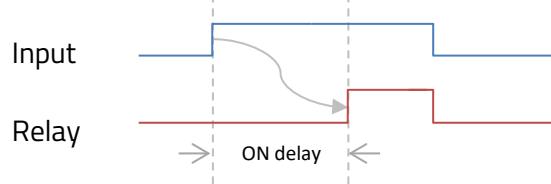


Example: OFF delay (42016¹)

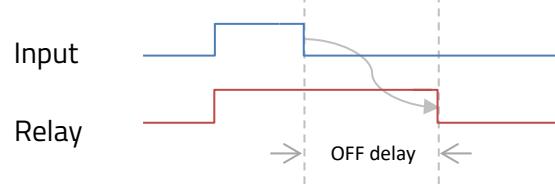

Example: minimum activation time (42013¹)

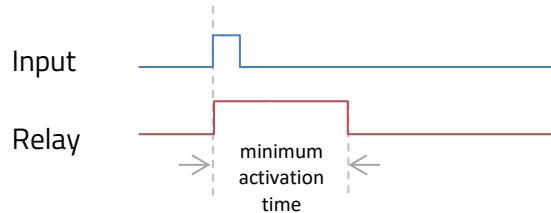

Example: maximum activation time (42014¹)

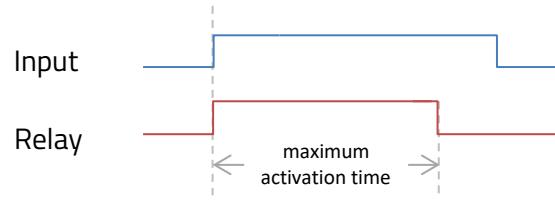

¹ The specified register addresses apply to relay 1. At relay 2: +100, relay 3: +200 and relay 4: +300

DMB 96800 coil map

| Coil | Addr | Description | Access | Remarks |
|-------------------------|------|-------------|--------|------------------------|
| Discrete outputs | | | | |
| 1 | 0 | Relay 1 | W | direct control relay 1 |
| 2 | 1 | Relay 2 | W | direct control relay 2 |
| 3 | 2 | Relay 3 | W | direct control relay 3 |
| 4 | 3 | Relay 4 | W | direct control relay 4 |

DMB 96800 holding register map

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------------------------|------|------|------------------|----------|--------|--------|--|
| | Dec | Hex | | | | | |
| Inputs and outputs | | | | | | | |
| 40001 | 0 | 0000 | Primary Value | 1 | INT16 | W | value for INT16 limit monitoring channel 1 |
| 40002 | 1 | 0001 | Secondary Value | 1 | INT16 | W | value for INT16 limit monitoring channel 2 |
| 40003 | 2 | 0002 | Tertiary Value | 1 | INT16 | W | value for INT16 limit monitoring channel 3 |
| 40004 | 3 | 0003 | Quaternary Value | 1 | INT16 | W | value for INT16 limit monitoring channel 4 |
| | | | | | | | |
| 40011 | 10 | 000A | relays direct | 1 | UINT16 | RW | direct relay control Bit 0 relay 1 Bit 1 relay 2 Bit 2 relay 3 Bit 3 relay 4 inactive = 0, active = 1 When reading, the current output status of the relays is returned. |
| 40012 | 11 | 000B | Send acknowledge | 1 | UINT16 | RW | Reset relay in confirmation mode Bit 0 relay 1 confirm = 1 Bit 1 relay 2 Bit 2 relay 3 Bit 3 relay 4 When reading, all bits waiting for an confirmation are set |
| | | | | | | | |
| 40021 | 20 | 0014 | Supply voltage | 1 | INT16 | R | Measured supply voltage [0.1 V] |
| | | | | | | | |
| 40051 | 50 | 0032 | Primary Value | 2 | FLOAT | W | value for FLOAT limit monitoring ch 1 Range of values according to IEEE 754 |
| 40053 | 52 | 0034 | Secondary Value | 2 | FLOAT | W | value for FLOAT limit monitoring ch 2 |
| 40055 | 54 | 0036 | Tertiary Value | 2 | FLOAT | W | value for FLOAT limit monitoring ch 3 |
| 40057 | 56 | 0038 | Quaternary Value | 2 | FLOAT | W | value for FLOAT limit monitoring ch 4 |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|--|------|------|---------------------------|----------|---------|--------|---|
| | Dec | Hex | | | | | |
| | | | | | | | |
| 40101 | 100 | 0064 | current DIP switches | 2 | UINT32 | R | <p>Current DIP switch setting</p> <p>Bit 0/1 S1-1/-2 on/off = 9600 baud off/on = 19200 baud off/on = 38400 baud on/on = 115200 baud</p> <p>Bit 2 S1-3 off = Parity even on = Parity none</p> <p>Bit 3 S1-4 Modbus address : : 1 to 127</p> <p>Bit 9 S1-10</p> <p>all DIPs off: PC mode, settings via Modbus</p> |
| 40103 | 102 | 0066 | current configuration set | 1 | UINT16 | R | <p>currently used configuration set</p> <p>0x0000 PC mode</p> <p>0x0001 DIP mode</p> |
| | | | | | | | |
| Auxiliary and diagnosis functions | | | | | | | |
| 41201 | 1200 | 07D0 | "Here I am" | 1 | UINT16 | W | <p>"Here I am" – Set timer with time [s]</p> <p>Sets a flashing signal on the green LED for the written timeperiod to easy find this device in the system</p> |
| 41202 | 1201 | 07D1 | Reset counter | 1 | UINT16 | W | Reset of diagnostic counter |
| | | | | | | | |
| 41211 | 1210 | 07DA | Telegram count | 1 | UINT16 | R | Count of all telegram frames on Modbus |
| 41212 | 1211 | 07DB | MyTelegram count | 1 | UNIT16 | R | Request count for telegram frames on Modbus with own device address |
| 41213 | 1212 | 07DC | Error count | 1 | UINT16 | R | Error count of frames with error |
| | | | | | | | |
| Device data | | | | | | | |
| 43001 | 3000 | 0BB8 | Device identifier | 1 | UINT16 | R | Device identifier: 0x0009 |
| 43002 | 3001 | 0BB9 | Hardware version | 1 | UINT16 | R | Hardware version: e.g. 0x0041 (A) |
| 43005 | 3004 | 0BBC | RFID identifier | 8 | 16 Char | R | Unique identifier |
| 43029 | 3028 | 0BD4 | Firmware version | 1 | UINT16 | R | 0x0100 – Example for version 01.0.0 |
| 45151 | 5150 | 141E | Point of measuring | 8 | 16 Char | RW | Point of measuring in ASCII (Tag) |
| | | | | | | | |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks | | | | | |
|------------------------|------|------|------------------------------|----------|--------|--------|--|--|--|--|--|--|
| | Dec | Hex | | | | | | | | | | |
| Settings (CONF) | | | | | | | | | | | | |
| -- Relay 1 -- | | | | | | | | | | | | |
| 42011 | 2010 | 07DA | Relay 1 input type | 1 | UINT16 | RW | Set the operating mode of relay 1 0x0000 Direct control 0x0001 Limit monitoring INT16 0x0002 Limit monitoring FLOAT 0x0003 Limit monitoring INT16 (relay 1) 0x0004 Limit monitoring FLOAT (relay 1) 0x0005 Power supply [0.1 V] | | | | | |
| 42012 | 2011 | 07DB | Contact type | 1 | UINT16 | RW | Contact type for relay 1 0x0000 N/O normally open 0x0001 N/C normally closed | | | | | |
| 42013 | 2012 | 07DC | min. activation time | 1 | UINT16 | RW | Minimal activation time [100 ms] relay 1 The output stays active minimal this time. 0x0000 Function off | | | | | |
| 42014 | 2013 | 07DD | max. activation time | 1 | UINT16 | RW | Maximal activation time [100 ms] relay 1 The active output is limited to this time. Example: wiping contact 0x0000 Function off | | | | | |
| 42015 | 2014 | 07DE | ON delay | 1 | UINT16 | RW | ON delay [100 ms] for relay 1 A activation signal turns on the output after this time 0x0000 Immediate turn-on | | | | | |
| 42016 | 2015 | 07DF | OFF delay | 1 | UINT16 | RW | OFF delay [100 ms] for relay 1 At inactive signal the output turns off after this time 0x0000 Immediate turn-off 0xFFFF Turn-off only with confirm* * power-on resets the wait for confirmation | | | | | |
| 42017 | 2016 | 07E0 | Initial state after power-on | 1 | UINT16 | RW | Initial state for relay 1 0x0000 Output inactive 0x0001 Output active | | | | | |
| 42018 | 2017 | 07E1 | Limit low | 1 | INT16 | RW | INT16 value for lower limit relay 1 | | | | | |
| 42019 | 2018 | 07E2 | Limit high | 1 | INT16 | RW | INT16 value for upper limit relay 1 | | | | | |
| 42020 | 2019 | 07E3 | Limit hysteresis | 1 | INT16 | RW | INT16 value for limit hysteresis at relay 1 | | | | | |
| 42021 | 2020 | 07E4 | Limit low | 2 | FLOAT | RW | FLOAT value for lower limit at relay 1 | | | | | |
| 42023 | 2022 | 07E6 | Limit high | 2 | FLOAT | RW | FLOAT value for upper limit at relay 1 | | | | | |
| 42025 | 2024 | 07E8 | Limit hysteresis | 2 | FLOAT | RW | FLOAT value for limit hysteresis at relay 1 | | | | | |
| 42027 | 2026 | 07EA | Timeout function relay 1 | 1 | UINT16 | RW | Timeout function 0 OFF 1 to 65534 Timeout for relay 1 [100 ms] | | | | | |
| | | | | | | | | | | | | |


| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|----------------------|------|------|------------------------------|----------|--------|--------|--|
| | Dec | Hex | | | | | |
| == Relay 2 == | | | | | | | |
| 42111 | 2110 | 083E | Relay 2 input type | 1 | UINT16 | RW | Set the operating mode of relay 2 0x0000 Direct control 0x0001 Limit monitoring INT16 0x0002 Limit monitoring FLOAT 0x0003 Limit monitoring INT16 (relay 1) 0x0004 Limit monitoring FLOAT (relay 1) 0x0005 Power supply [0.1 V] |
| 42112 | 2111 | 083F | Contact type | 1 | UINT16 | RW | Contact type for relay 2 (for description see relay 1) |
| 42113 | 2112 | 0840 | min. activation time | 1 | UINT16 | RW | Minimal activation time [100 ms] relay 2 (for description see relay 1) |
| 42114 | 2113 | 0841 | max. activation time | 1 | UINT16 | RW | Maximal activation time [100 ms] relay 2 (for description see relay 1) |
| 42115 | 2114 | 0842 | ON delay | 1 | UINT16 | RW | ON delay [100 ms] for relay 2 (for description see relay 1) |
| 42116 | 2115 | 0843 | OFF delay | 1 | UINT16 | RW | OFF delay [100 ms] for relay 2 (for description see relay 1) |
| 42117 | 2116 | 0844 | Initial state after power-on | 1 | UINT16 | RW | Initial state for relay 2 (for description see relay 1) |
| 42118 | 2117 | 0845 | Limit low | 1 | INT16 | RW | INT16 value for lower limit relay 2 |
| 42119 | 2118 | 0846 | Limit high | 1 | INT16 | RW | INT16 value for upper limit relay 2 |
| 42120 | 2119 | 0847 | Limit hysteresis | 1 | INT16 | RW | INT16 value for limit hysteresis at relay 2 |
| 42121 | 2120 | 0848 | Limit low | 2 | FLOAT | RW | FLOAT value for lower limit at relay 2 |
| 42123 | 2122 | 084A | Limit high | 2 | FLOAT | RW | FLOAT value for upper limit at relay 2 |
| 42125 | 2124 | 084C | Limit hysteresis | 2 | FLOAT | RW | FLOAT value for limit hysteresis at relay 2 |
| 42127 | 2126 | 084E | Timeout function relay 2 | 1 | UINT16 | RW | Timeout function 0 OFF 1 to 65534 Timeout for relay 2 [100 ms] |
| == Relay 3 == | | | | | | | |
| 42211 | 2210 | 08A2 | Relay 3 input type | 1 | UINT16 | RW | Set the operating mode of relay 3 (for description see relay 2) |
| 42212 | 2211 | 08A3 | Contact type | 1 | UINT16 | RW | Contact type for relay 3 (for description see relay 1) |
| 42213 | 2212 | 08A4 | min. activation time | 1 | UINT16 | RW | Minimal activation time [100 ms] relay 3 (for description see relay 1) |
| 42214 | 2213 | 08A5 | max. activation time | 1 | UINT16 | RW | Maximal activation time [100 ms] relay 3 (for description see relay 1) |
| 42215 | 2214 | 08A6 | ON delay | 1 | UINT16 | RW | ON delay [100 ms] for relay 3 (for description see relay 1) |
| 42216 | 2215 | 08A7 | OFF delay | 1 | UINT16 | RW | OFF delay [100 ms] for relay 3 (for description see relay 1) |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|----------------------|------|------|------------------------------|----------|--------|--------|---|
| | Dec | Hex | | | | | |
| 42217 | 2216 | 08A8 | Initial state after power-on | 1 | UINT16 | RW | Initial state for relay 3 (for description see relay 1) |
| 42218 | 2217 | 08A9 | Limit low | 1 | INT16 | RW | INT16 value for lower limit relay 3 |
| 42219 | 2218 | 08AA | Limit high | 1 | INT16 | RW | INT16 value for upper limit relay 3 |
| 42220 | 2219 | 08AB | Limit hysteresis | 1 | INT16 | RW | INT16 value for limit hysteresis at relay 3 |
| 42221 | 2220 | 08AC | Limit low | 2 | FLOAT | RW | FLOAT value for lower limit at relay 3 |
| 42223 | 2222 | 08AE | Limit high | 2 | FLOAT | RW | FLOAT value for upper limit at relay 3 |
| 42225 | 2224 | 08B0 | Limit hysteresis | 2 | FLOAT | RW | FLOAT value for limit hysteresis at relay 3 |
| 42227 | 2226 | 08B2 | Timeout function relay 3 | 1 | UINT16 | RW | Timeout function 0 OFF 1 to 65534 Timeout for relay 3 [100 ms] |
| == Relay 4 == | | | | | | | |
| 42311 | 2310 | 0906 | Relay 4 input type | 1 | UINT16 | RW | Set the operating mode of relay 4 (for description see relay 2) |
| 42312 | 2311 | 0907 | Contact type | 1 | UINT16 | RW | Contact type for relay 4 (for description see relay 1) |
| 42313 | 2312 | 0908 | min. activation time | 1 | UINT16 | RW | Minimal activation time [100 ms] relay 4 (for description see relay 1) |
| 42314 | 2313 | 0909 | max. activation time | 1 | UINT16 | RW | Maximal activation time [100 ms] relay 4 (for description see relay 1) |
| 42315 | 2314 | 090A | ON delay | 1 | UINT16 | RW | ON delay [100 ms] for relay 4 (for description see relay 1) |
| 42316 | 2315 | 090B | OFF delay | 1 | UINT16 | RW | OFF delay [100 ms] for relay 4 (for description see relay 1) |
| 42317 | 2316 | 090C | Initial state after power-on | 1 | UINT16 | RW | Initial state for relay 4 (for description see relay 1) |
| 42318 | 2317 | 090D | Limit low | 1 | INT16 | RW | INT16 value for lower limit relay 4 |
| 42319 | 2318 | 090E | Limit high | 1 | INT16 | RW | INT16 value for upper limit relay 4 |
| 42320 | 2319 | 090F | Limit hysteresis | 1 | INT16 | RW | INT16 value for limit hysteresis at relay 4 |
| 42321 | 2320 | 0910 | Limit low | 2 | FLOAT | RW | FLOAT value for lower limit at relay 4 |
| 42323 | 2322 | 0912 | Limit high | 2 | FLOAT | RW | FLOAT value for upper limit at relay 4 |
| 42325 | 2324 | 0914 | Limit hysteresis | 2 | FLOAT | RW | FLOAT value for limit hysteresis at relay 4 |
| 42327 | 2326 | 0916 | Timeout function relay 4 | 1 | UINT16 | RW | Timeout function 0 OFF 1 to 65534 Timeout for relay 4 [100 ms] |
| | | | | | | | |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|--------------------------------|----------|--------|--------|---|
| | Dec | Hex | | | | | |
| 45001 | 5000 | 1388 | Configuration counter | 1 | UINT16 | R | Counter is incremented internally each write of Conf parameters. The Modbus master can remember this value. As long as the counter has the same value, the configuration is unchanged. |
| 45002 | 5001 | 1389 | Register order | 1 | UINT16 | RW | Order of registers at INT32 or FLOAT values 0x0001 HH-HL-LH-LL (default) 0x0000 LH-LL-HH-HL |
| 45003 | 5002 | 138A | Date of last modification | 2 | UINT32 | RW | Date (UNIX_TIMESTAMP) last change (Not managed by the device) |
| | | | | | | | |
| 45010 | 5009 | 1391 | Modbus: Address (in PC mode) | 1 | UINT16 | RW | Modbus address: 1 ... 247 (default = 1) |
| 45011 | 5010 | 1392 | Baud rate (in PC mode) | 1 | UINT16 | RW | Baud rate: 0x0000 - 300 0x0001 - 600 0x0002 - 1200 0x0003 - 2400 0x0004 - 4800 0x0005 - 9600 0x0006 - 19200 (default) 0x0007 - 38400 0x0008 - 57600 0x0009 - 115200 other: <i>undefined</i> |
| 45012 | 5011 | 1393 | Parity/Stop bits (in PC mode) | 1 | UINT16 | RW | Parity: 0x0000 - Even, 1 Stop bit (default) 0x0001 - Odd, 1 Stop bit 0x0002 - None, 2 Stop bits 0x0003 - None, 1 Stop bit (no Spec !) (from Firmware 01.4.0) other: <i>undefined</i> |
| 45013 | 5012 | 1394 | Response delay (in PC mode) | 1 | UINT16 | RW | Delay: 1 ... 1000 ms (default = 1) |
| | | | | | | | |
| 45020 | 5019 | 139B | Modbus: Address (in DIP Mode) | 1 | UINT16 | R | Modbus address: 1 ... 63 |
| 45021 | 5020 | 139C | Baud rate (in DIP Mode) | 1 | UINT16 | R | Baud rate: 0x0005 - 9600 0x0006 - 19200 0x0007 - 38400 0x0009 - 115200 |
| 45022 | 5021 | 139D | Parity/Stop bits (in DIP Mode) | 1 | UINT16 | R | Parity: 0x0000 - Even, 1 Stop bit 0x0002 - None, 2 Stop bits |

| Reg No. | Addr | | Description | No. Reg. | Format | Access | Remarks |
|---------|------|------|---------------------------------|----------|--------|--------|---|
| | Dec | Hex | | | | | |
| 45023 | 5022 | 139E | Response delay (in DIP Mode) | 1 | UINT16 | R | Delay: 1 ms at 115200 Baud 3 ms at 38400 Baud 5 ms at 19200 Baud 10 ms at 9600 Baud |
| | | | | | | | |
| 48213 | 8212 | 2014 | Save settings | 1 | UINT16 | W | 0x0043 Speeds up the save procedure of settings. Without this command the device saves changes approx. 5 seconds after the last write of a configuration parameter. |

Accessories for DMB Modbus series

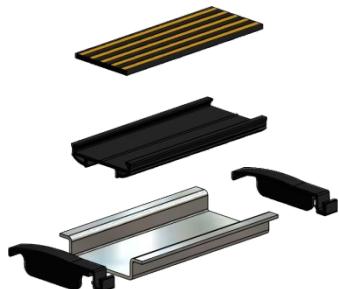

In-Rail-Bus Connector Kit

5-wire bus system for DIN rail

In-Rail-Bus for DIN rail 35 x 7.5 mm or 35 x 15 mm.
Length 120 mm, 250 mm or 500 mm

(The DIN rail is not included in the kit)



In-Rail-Mini Modbus

installation of small Modbus applications with In-Rail Bus System

Cost-effective and fast solution for small In-Rail-Bus installations.

The In-Rail-Mini Modbus is used to put the supply voltage 24 V DC into the In-Rail-Bus connectors and to connect the Modbus lines A and B. Line E is available for group messages, e.g. for a group error message. DIP switches can be used to connect the usual terminating and polarization resistors for RS 485 interfaces.



Modbus RTU Connection Module

for installations with In-Rail-Bus system

The 6.2 mm wide Power Terminal is used for supplying the In-Rail-Bus DIN rail connector with supply voltage up to 32 V DC and connect the Modbus lines to the In-Rail-Bus.

DIP switches can be used to connect the usual terminating and polarization resistors for RS 485 interfaces.

The Power Terminal **DMB 96000 B** for standard applications with 4.5 A output current is able to power up to 80 signal converter.

References

- [1] Modbus Organization: "MODBUS APPLICATION PROTOCOL SPECIFICATION V1.1b3", 2012-04-12, <http://www.modbus.org/specs.php>.
- [2] Modbus Organization: "MODBUS over Serial Line - Specification and Implementation Guide V1.02", 2006-12-20, <http://www.modbus.org/specs.php>.
- [3] RIA/EIA: "RIA-485 / EIA-485", last revised 2003.

Revision history

| Revision | Date | Changes / Notes |
|----------|------------|---|
| 1 | 2016-03-04 | Document created |
| 2 | 2016-05-12 | Register 40101, 40103 corrected |
| 3 | 2016-11-28 | DMB 96500 added |
| 4 | 2016-12-13 | Adding Parity NONE with 1 stop bit to Modbus configuration Reg. 45012 Description of In-Rail-Bus expanded |
| 5 | 2017-01-19 | DMB 96200, DMB 96700, DMB 96800 added |
| 6 | 2018-01-12 | Add detailed description for DMB 96100 and DMB 96500 Add description and holding register map for DMB 96200 |
| 7 | 2018-05-31 | Add scale feature for DMB 96100 and DMB 96500 (firmware 01.6.0 and higher) |
| 8 | 2019-03-01 | Add DIP settings for all modules DMB 96400 added New page with useful accessories for DMB Modbus series |
| 9 | 2019-11-18 | Add column with register addresses in hexadecimal Add 96800 registers: 42027, 42127, 42227, 42327 (firmware 01.2.0 and higher) |
| 10 | 2020-05-06 | DMB 96500: Add the documentation of temperature ranges in appendix table 01 |
| 11 | 2023-05-24 | Support of Modbus command 4 (Read Input Registers) for register no. from 30001 |



Our performance – your advantage

- Comprehensive product range
- Customer-specific special solutions
- Individual consulting and support
- Most modern production technology
- Certification according to ISO 9001
- 5 years warranty
- Made in Germany

DRAGO Automation GmbH

Waldstrasse 86-90

13403 Berlin | Germany

Phone +49 - 30 - 40 99 82 0

info@drago-automation.de

www.drago-automation.de